



RCA RCT6378W2 Power Button Replacement

This guide will show you how to replace the power button on your RCA RCT6378W2 tablet.

Written By: John Sudduth



INTRODUCTION

If the power button is unresponsive, broken, or otherwise damaged, it may be time to replace the power button on your RCA tablet. This replacement guide will teach you how to properly open your device, remove the broken power button, and replace it with a new one.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [Tweezers](#) (1)
 - [RCA RCT6378W2 Tablet Button Replacement Part](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Remove the Outer Screws



- Remove two 2.4mm x 4mm screws from bottom of the tablet with Phillips #00 Screwdriver.

Step 2 — Remove the Back Cover



- Remove back cover with plastic opening tool, exposing the battery and motherboard.

Step 3 — Install the Power Button



- Insert the power button into the button slot with the tweezers.

To reassemble your device, follow these instructions in reverse order.