



Garmin StreetPilot C330 Outer Casing Replacement

Opening up the device in order to perform repairs.

Written By: Adrian Leon



 **TOOLS:**

- [Spudger](#) (1)
 - [Tweezers](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Outer Casing



- Use a plastic spudger tool to remove the plastic frame.
- Insert the tool into the groove in the center of the top of the outer frame and lever it gently until it pops out.

Step 2



- Use a Phillips head screw driver to remove all four screws in the corners around the screen.
- ☞ Set the screws aside for later.


Step 3



- Gently pull from both ends to separate the front panel from the back.

⚠ Do not force the pieces apart wider than the length of the connecting wires or you will damage the wiring.

Step 4

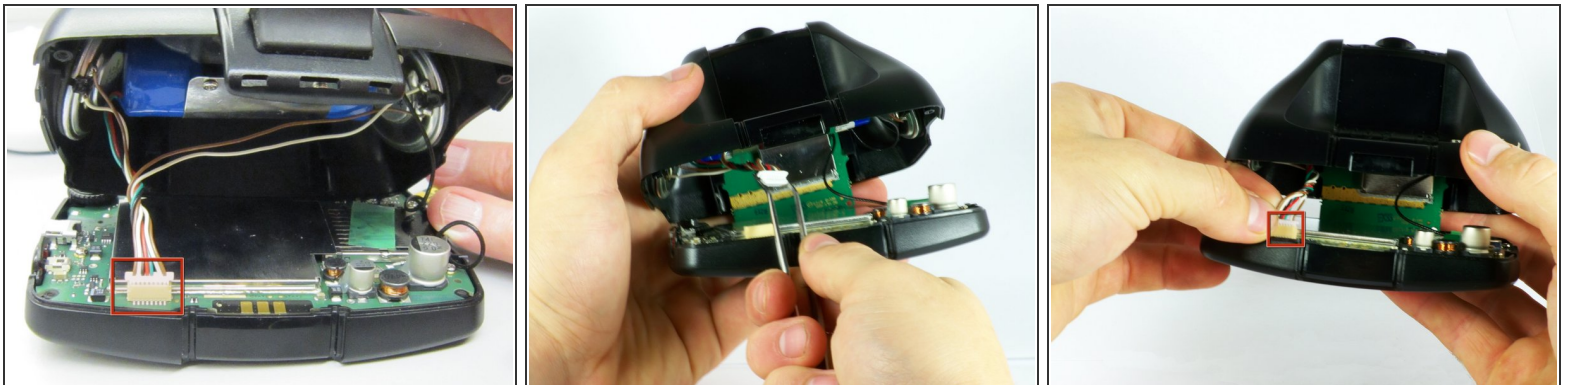


- Locate the white wire clip. Gently unplug it using either your fingers or tweezers.

Step 5



- Carefully expose both halves of the device.

 Be sure to not pull the two halves apart too hard to avoid damaging the black wire.

Your device should be ready to use once more.

This document was last generated on 2019-07-17 07:24:43 PM.