




Dell Venue 8 Speaker Replacement

Replace a damaged Dell Venue 8 speaker.

Written By: Andrea

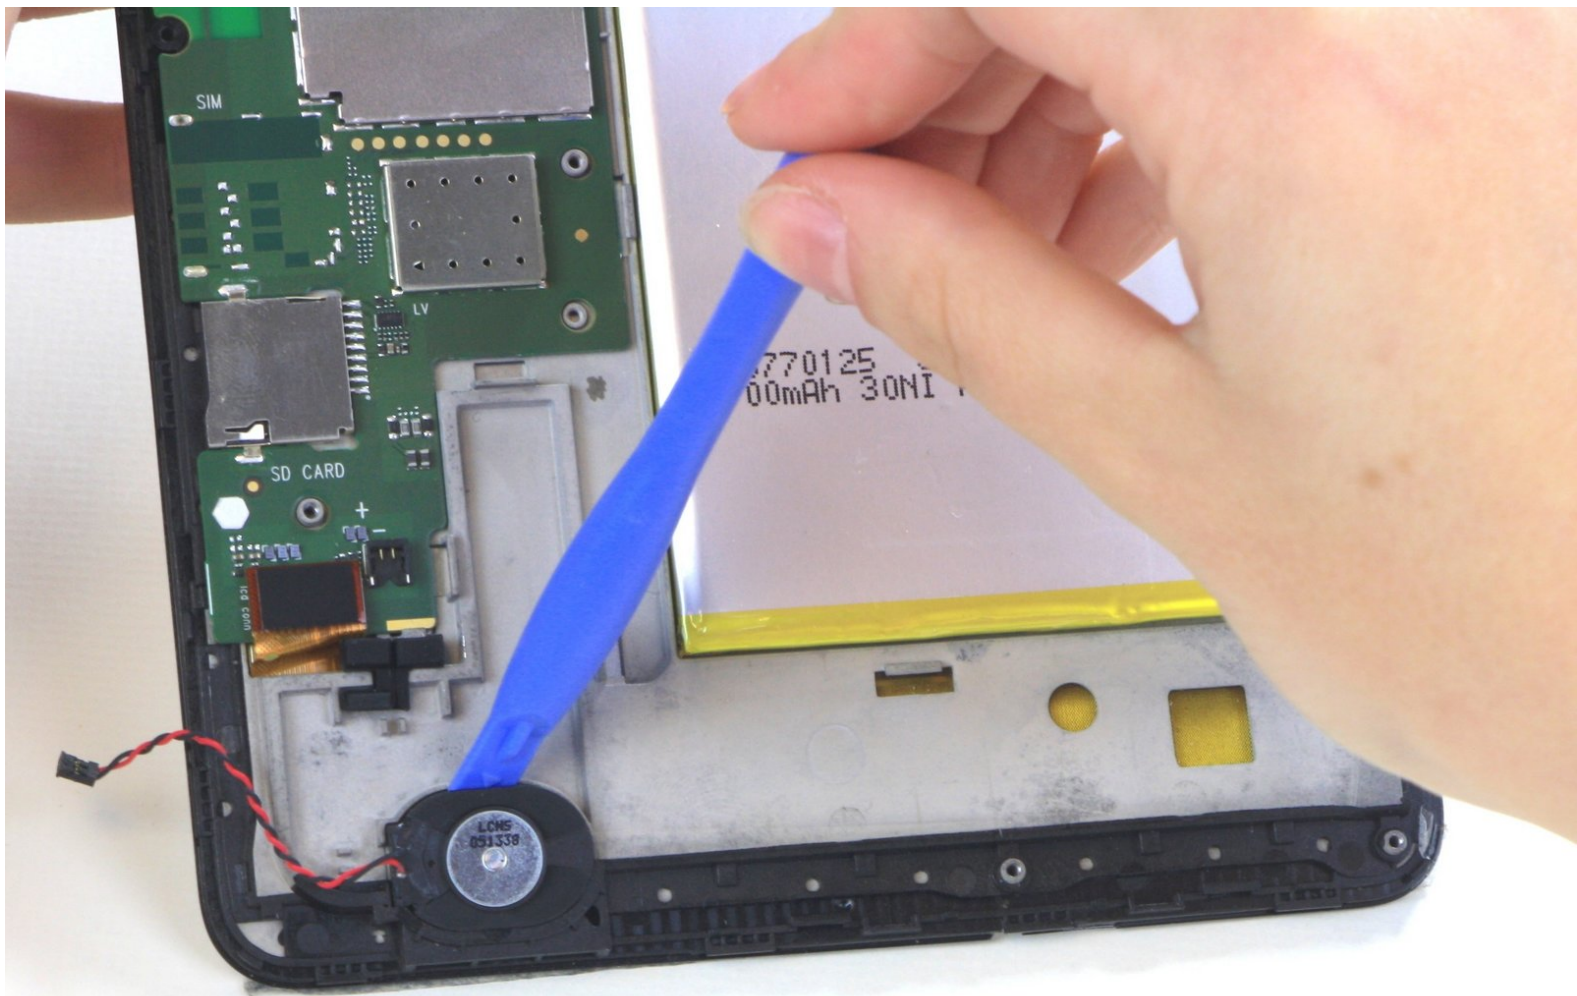

INTRODUCTION

If your audio sounds muffled or distorted, it may be time to fix the speaker. Look at this guide to learn how to replace the Dell Venue 8 speaker.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)

PARTS:

- [Dell Venue 8 Replacement Speaker](#) (1)

Step 1 — Rear Case/Midframe




- Hold the device with the screen facing up. Gently wedge your plastic opening tool into the crease, and run it along the perimeter of the case
- ⓘ You will hear *click* sounds as the clips unhinge
- Remove the back panel of the device.

Step 2



- Remove the 14 screws with the T-5 Torx screwdriver. (11 black 3.6mm screws, and three 4.45mm screws)
- ⓘ The silver screws are marked with an "S" or a sticker [S1.6(Silver)] See the corrected image
 - 4.45mm Silver screws
 - 3.6mm Black screws
- Gently snap the perimeter clips open, and remove the internal plastic case.


Step 3 — Speaker

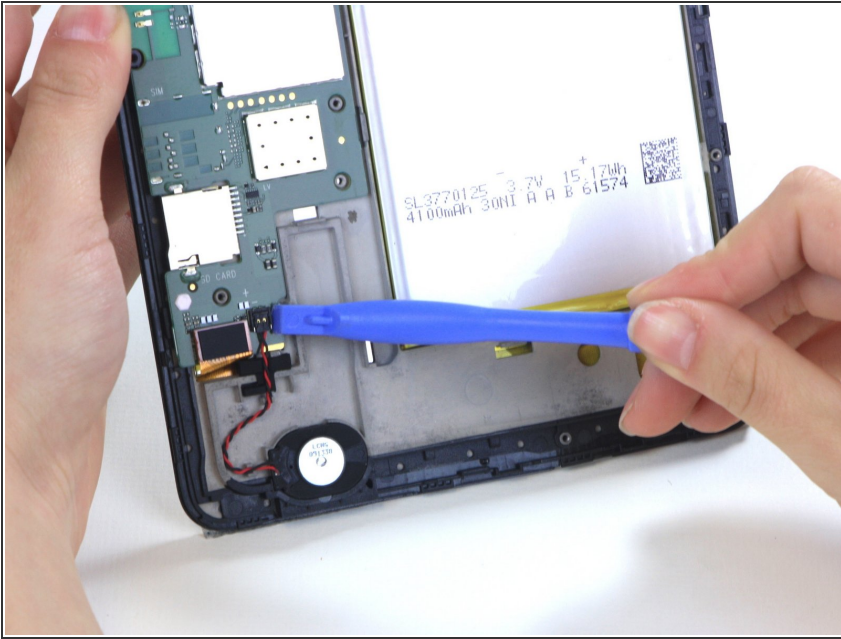

- Using your plastic opening tool, unclip the speaker connection from the logic board.

⚠ Caution: Pull directly up, not out, on the connection

Step 4

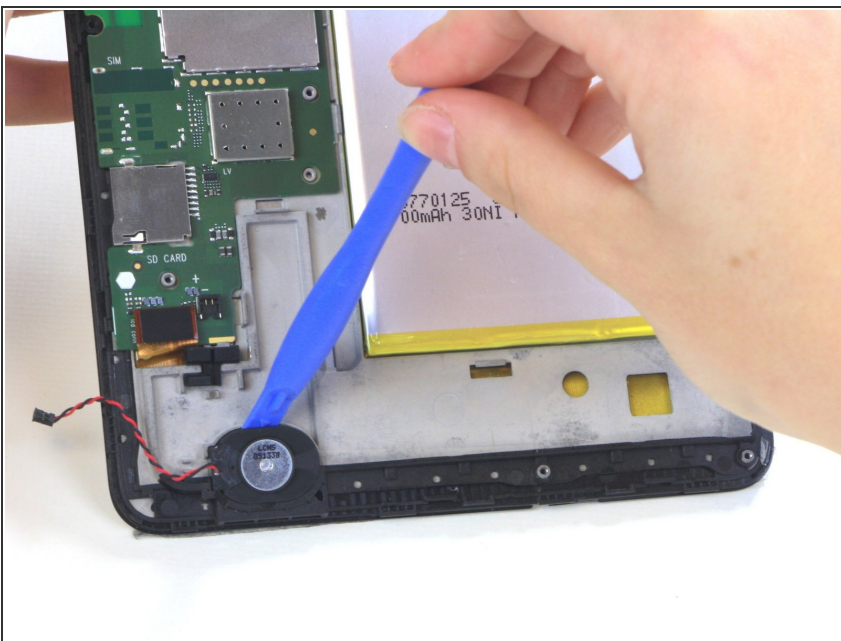

- Remove the speaker by placing using your plastic opening tool in the gap on the top of the speaker and prying it up.

i The speaker is held on by light adhesive

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-08 10:03:06 PM.