



Dell OptiPlex GX260 Case Replacement

This guide illustrates how to open the OptiPlex GX 260 Case.

Written By: Kevin Schapansky



Step 1 — Case



- Lay the Dell OptiPlex GX260 down on a clean flat surface with the rear towards you.
 - Push the oval shaped buttons located on the top and bottom of the PC simultaneously and lift the case straight up.
- i** Note: Some force may be required to push in the oval buttons open the PC case.

To close the case, simply press it closed until you hear the tabs click into place.

This document was last generated on 2018-12-21 01:43:58 PM.