



Dell OptiPlex GX260 Optical Drive Replacement

This guide shows how to remove the optical drive from the PC.

Written By: Kevin Schapansky




Step 1 — Case




- Lay the Dell OptiPlex GX260 down on a clean flat surface with the rear towards you.
 - Push the oval shaped buttons located on the top and bottom of the PC simultaneously and lift the case straight up.
- i** Note: Some force may be required to push in the oval buttons open the PC case.

Step 2 — Optical Drive

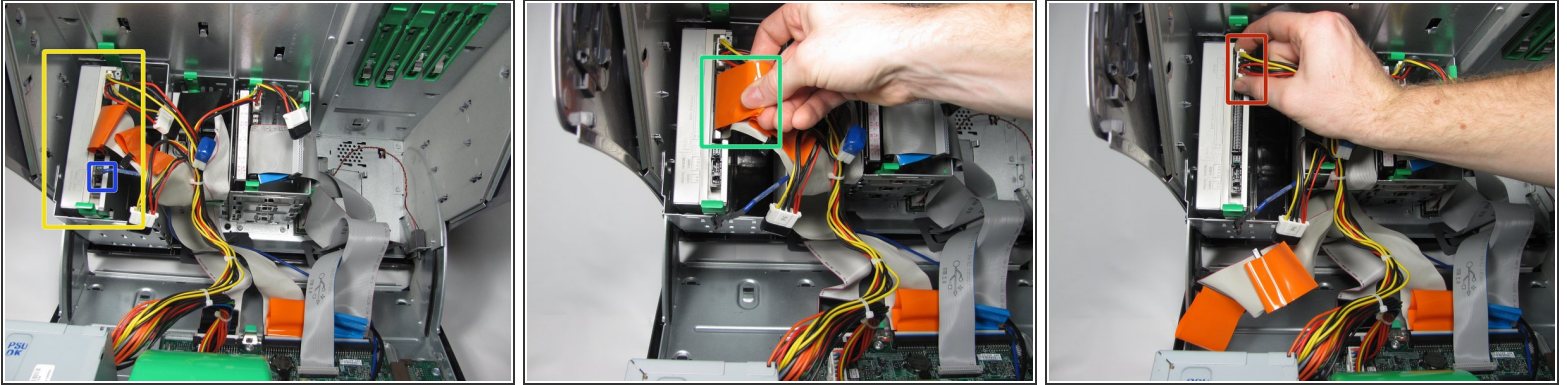

- Identify the optical drive in the case.
- Remove the analog audio cable from the optical drive.
- Remove the IDE cable from the optical drive by pulling straight up on the orange plastic tab..
- Remove the power cable from the optical drive.

Step 3

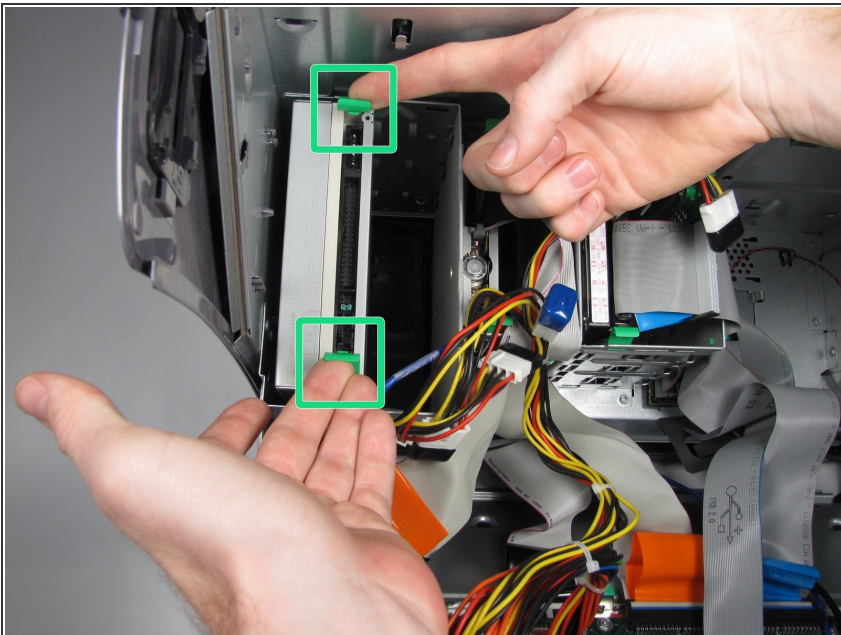

- Push the two green tabs toward each other to release the optical drive and lift it out.

To reassemble your device, follow these instructions in reverse order.

