




Dell Venue 8 Back Camera Replacement

Removing and replacing the back camera of a Dell Venue 8.

Written By: Andrea

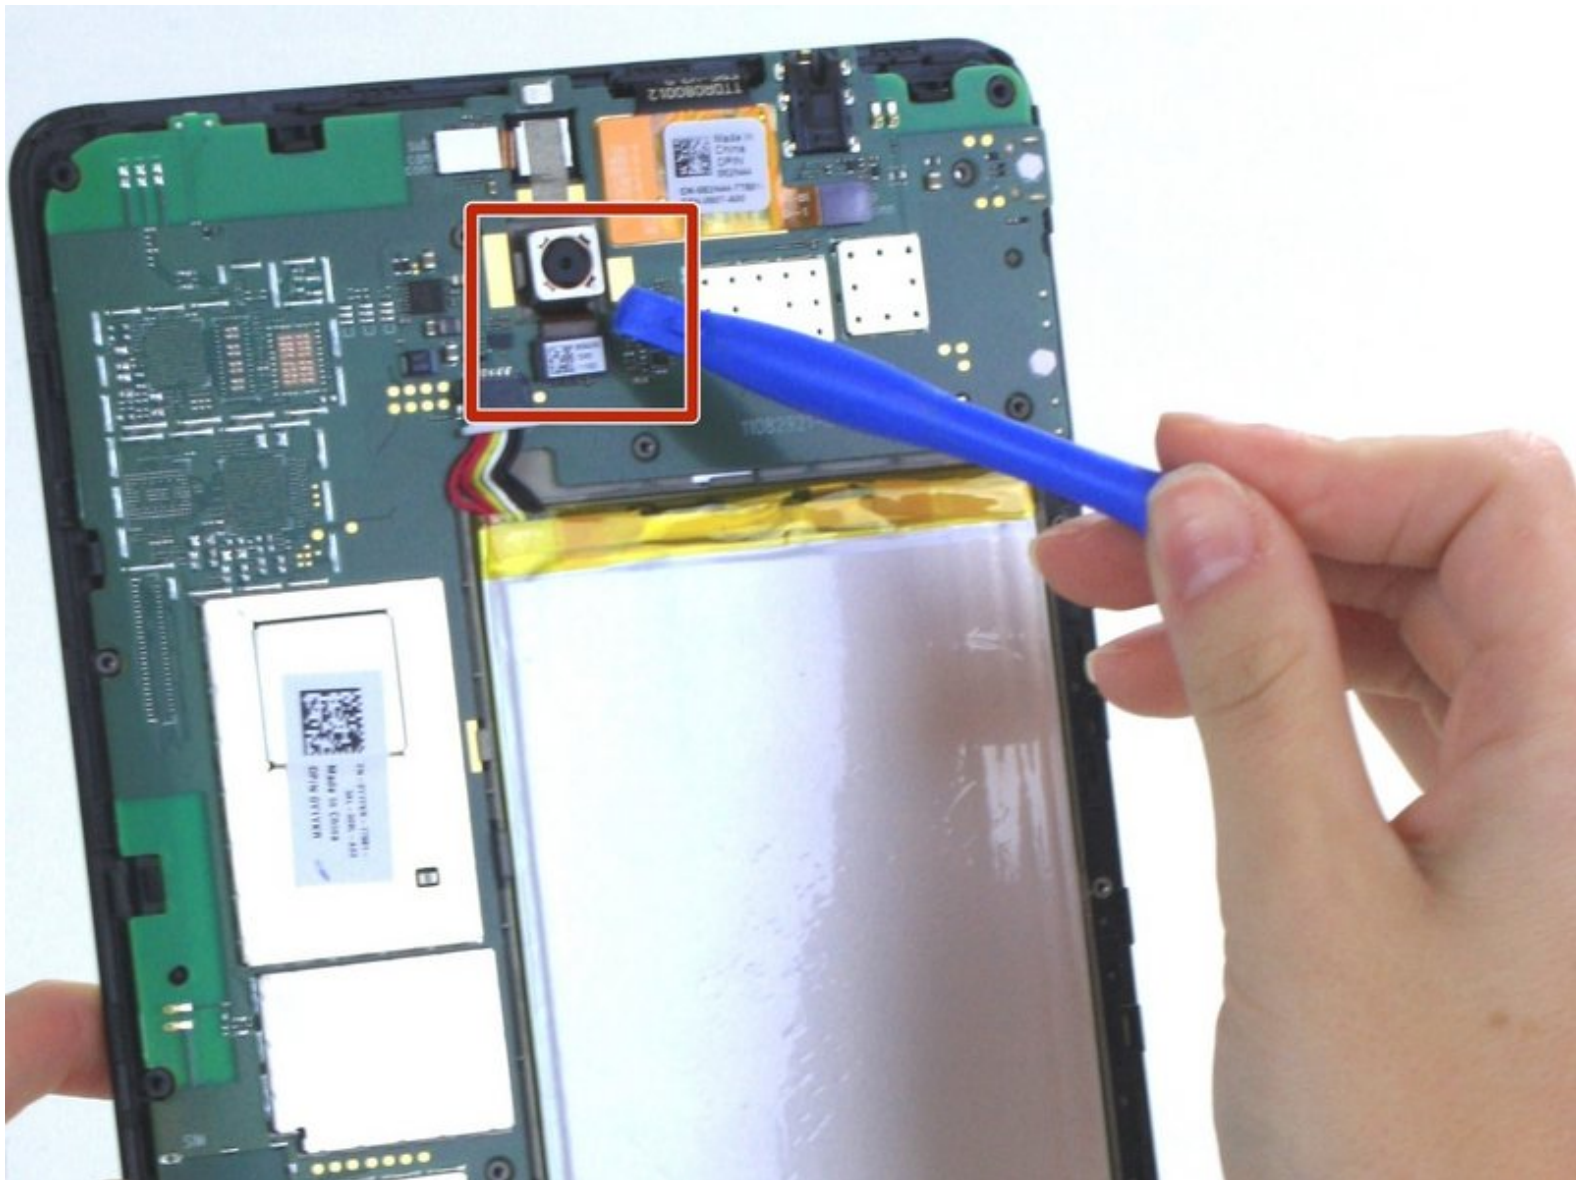

INTRODUCTION

If your camera isn't functioning properly, not showing a display, or looks cracked or foggy, it may need to be replaced. In this guide we will be replacing the rear-facing camera.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)

PARTS:

- [Dell Venue 8 Camera Replacement](#) (1)

Step 1 — Rear Case/Midframe




- Hold the device with the screen facing up. Gently wedge your plastic opening tool into the crease, and run it along the perimeter of the case
- ⓘ You will hear *click* sounds as the clips un hinge
- Remove the back panel of the device.

Step 2



- Remove the 14 screws with the T-5 Torx screwdriver. (11 black 3.6mm screws, and three 4.45mm screws)
- ⓘ The silver screws are marked with an "S" or a sticker [S1.6(Silver)] See the corrected image
 - 4.45mm Silver screws
 - 3.6mm Black screws
- Gently snap the perimeter clips open, and remove the internal plastic case.

Step 3 — Back Camera

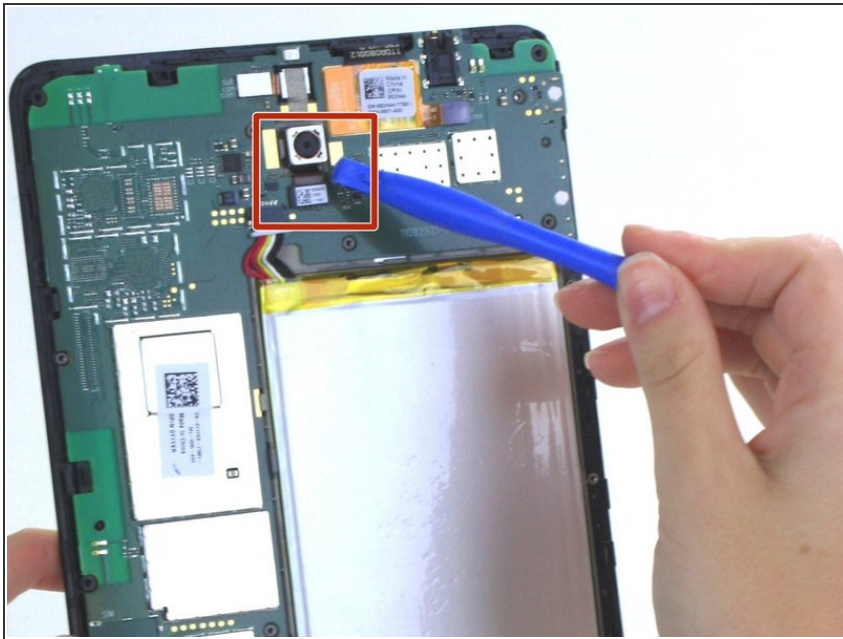

- Use the plastic opening tool to disconnect the camera from the logic board, by prying it up.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-21 04:42:34 PM.