



Canon PowerShot SD850 IS Battery Replacement

Written By: Peter Tran



INTRODUCTION

How to remove/install the battery of your Canon PowerShot SD850 IS.

Step 1 — Battery



- Using your fingernail, slide the light gray tab towards edge of camera.
- Slide the light gray door and pull up to open the door.
 - ⓘ In the camera shown in the photos, there is not a Memory Card or Battery.
- Both Battery and Memory Card slots should be visible.

Step 2



- Use your fingernail and slide the small brown tab towards the edge of the camera.
 - The battery will pop up.
 - Pull battery straight out of battery holder.
- When putting the battery back in, make sure it the battery is oriented so the terminals connect.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-12-27 04:56:12 PM.