



Canon PowerShot S100 Outer Case Replacement

This guide is a prerequisite for other replacement and removal guides. The guide will demonstrate how to disassemble the plastic cover that protects the internal parts of the camera.

Written By: Ricky



This document was generated on 2020-11-23 09:29:31 AM (MST).

INTRODUCTION

Removing the body cover is necessary to access other parts inside the camera.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Outer Case




- Remove the 2 screws (3.2mm, Phillips #00) found on the bottom side of the camera.
- Remove the 2 screws (3.2mm, Phillips #00) found on the side of the camera.
- Remove the 2 screws (3.2mm, Phillips #00) found on the side of the camera where the terminals are.
- Open the flap revealing the cable inputs and remove the final screw (3.8mm, Phillips #00) found inside.

Step 2



- Turn the camera so that the LCD screen is facing you.
- Remove the back panel by pulling it off of the camera.

Step 3

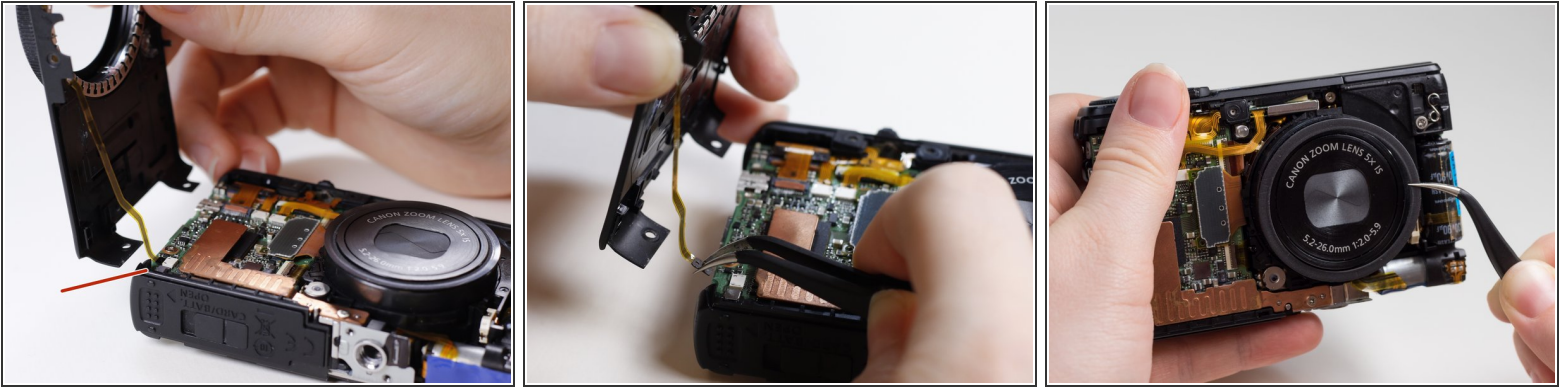

- Turn the camera so that the lens is facing you.
 - ⚠ Do not pull the front panel off without removing the ribbon cable first.
- Slowly lift the front panel from the camera.
- The ribbon cable is connecting the front panel to the camera. Using the tweezers, gently pull the ribbon cable out of its socket.
 - ⓘ A spudger may also be used to remove the ribbon cable.
- Remove the rubber guard that rests on top of the lens.

To reassemble your device, follow these instructions in reverse order.