



RCA RCT6378W2 Power Button Replacement

This guide will show you how to replace the power button on your RCA RCT6378W2 tablet.

Written By: mikayla




INTRODUCTION

If the power button is unresponsive, broken, or otherwise damaged, it may be time to replace the power button on your RCA tablet. This replacement guide will teach you how to properly open your device, remove the broken power button, and replace it with a new one.

TOOLS:

- [Tweezers](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Power Button

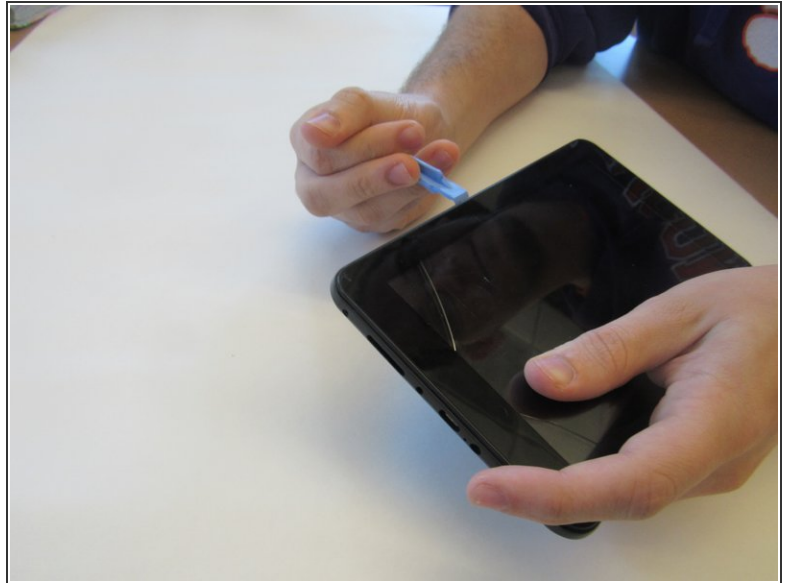

- Remove two 2.4mm x 4mm screws from bottom of the tablet with Phillips #00 Screwdriver

Step 2



- Remove back cover with plastic opening tool, exposing the battery and motherboard.

Step 3



- Remove the power button from its slot with the tweezers.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-13 06:08:22 PM.