




# Axess TA2513-10WT Button Replacement

How to replace a Axess TA2513-10WT button.

Written By: Lori Scott

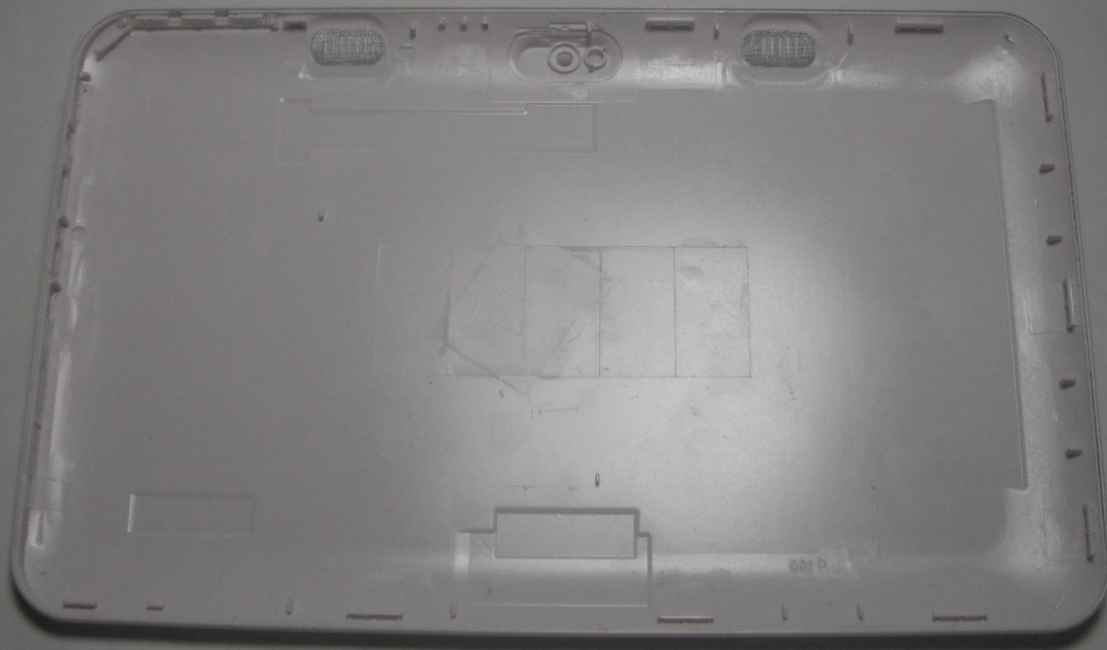

---

## INTRODUCTION

Use this guide to replace the side buttons on the Axess TA2513-10WT.

---

### TOOLS:


- [iFixit Opening Tools](#) (1)
  - [Tweezers](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Back Cover



- Lay the tablet down on a flat surface with the screen facing up, and the external camera facing upwards and closest to you.

## Step 2

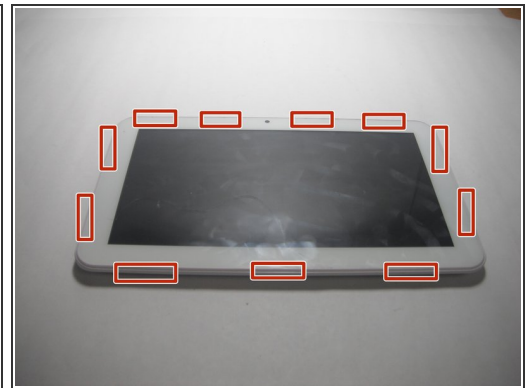

- Insert the plastic opening tool in the space between the screen and the back cover above the volume buttons.
- Slide the plastic opening tool gently along the sides.
- ⓘ If a small gap is not created between the screen and the back cover, pry gently upward at each of these latching points.

### Step 3



- Place the spudger in an open space to keep the back case from shutting while you continue to slide the opening tool.

## Step 4



- Remove the back cover with your hands once all points have been unlatched. It should separate completely from the screen that contains the battery and chip components.


## Step 5 — Button



- Orient the tablet's back cover so that the inside faces up and the buttons are positioned at the top left corner.





## Step 6

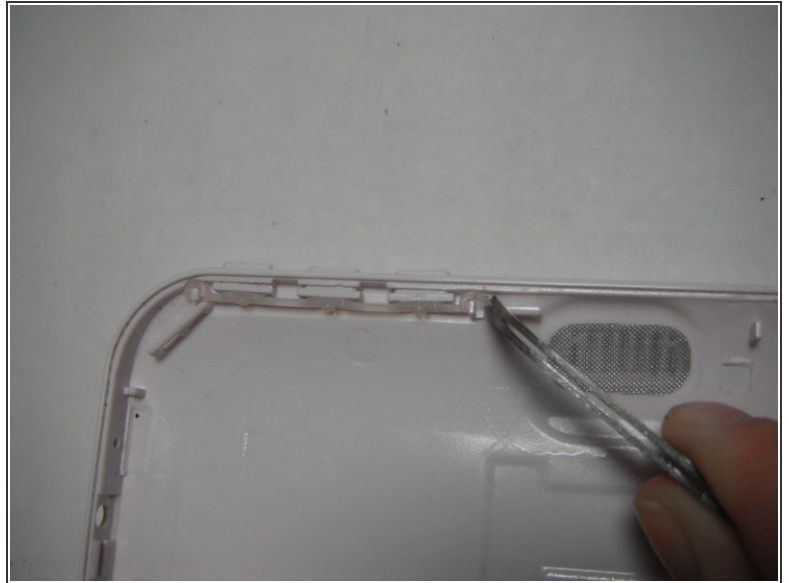



- Unlatch the clear rubber holder from the posts with the tweezers.

## Step 7

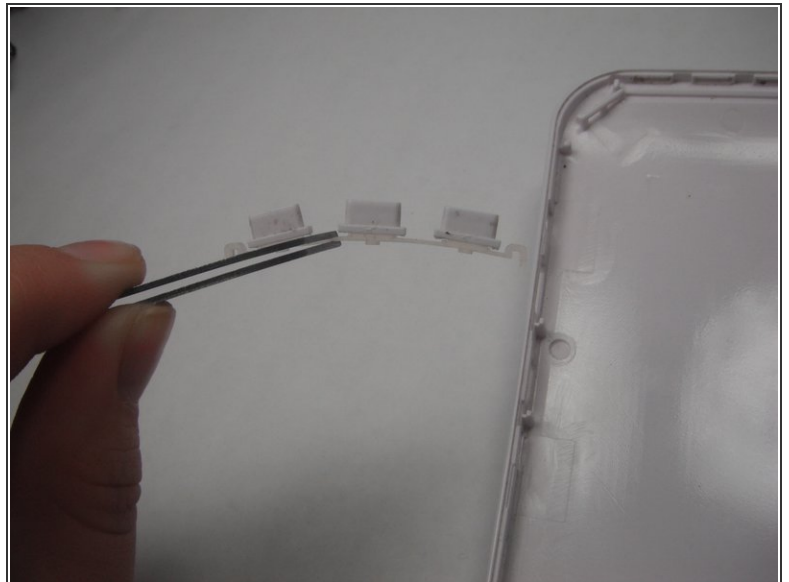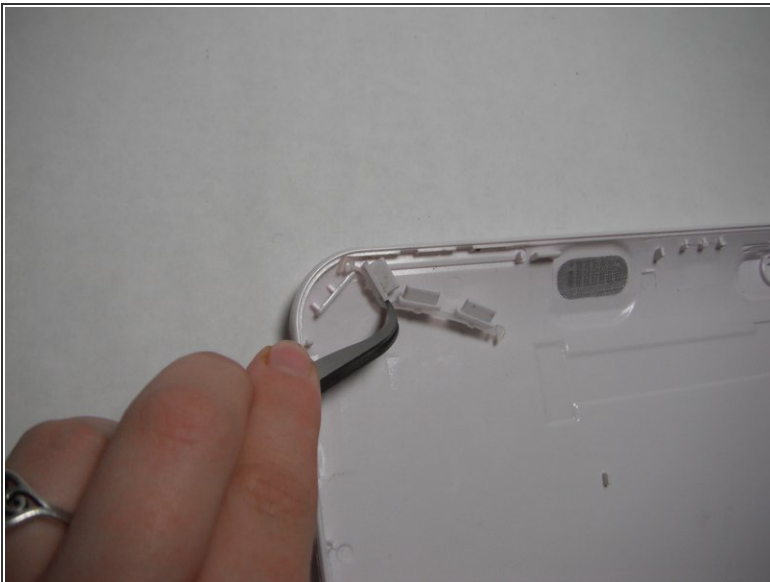

- With tweezers, pull the rubber holder from the back cover completely.

## Step 8

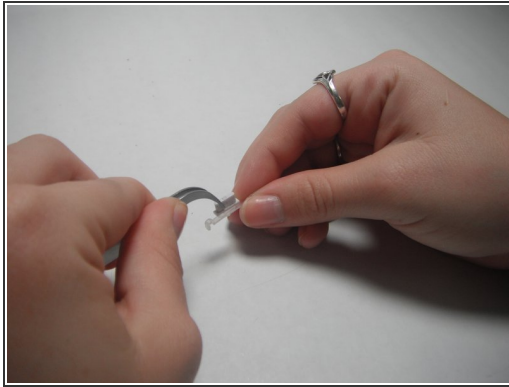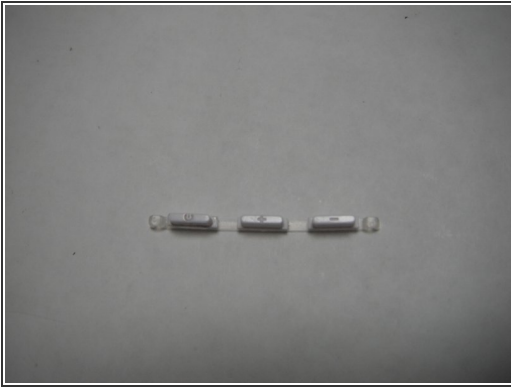

- Remove the individual buttons with tweezers.

To reassemble your device, follow these instructions in reverse order.