



IBM ThinkPad A30 RAM Replacement

Written By: Jessica




**TOOLS:**

- [Phillips #1 Screwdriver \(1\)](#)

**PARTS:**


- [PC133 256 MB RAM Chip \(1\)](#)

Step 1 — Battery

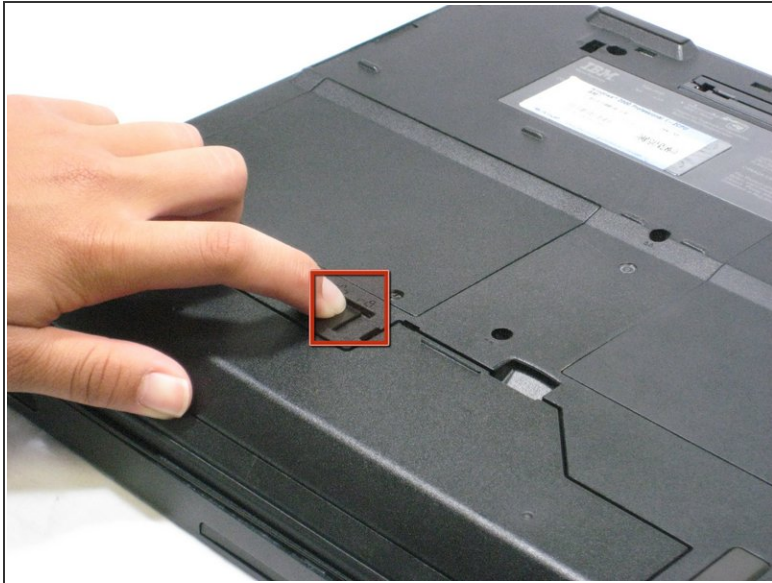

- ① Flip the ThinkPad over so that it is upside down.
- Slide the highlighted tab to the left.
- With your finger on the tab, remove the battery by lifting it upwards away from the laptop.

Step 2 — RAM

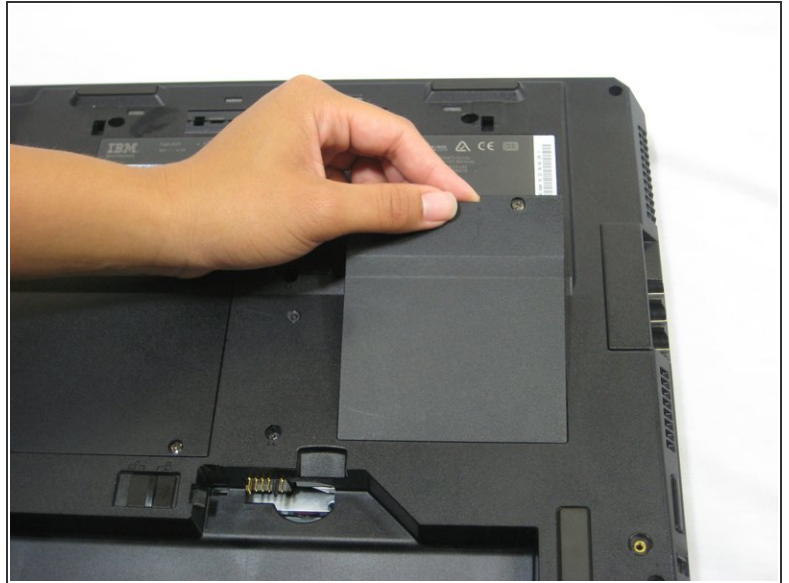

- Remove the two 5.3mm cover screws.
- Gently lift the cover containing the RAM.

Step 3



- Remove RAM module by pressing the two metal pieces outward with your thumbs.

Step 4



- Lift the RAM module up and out, away from the yellow connector.
- ⓘ Place the RAM module away from any magnets or static electricity prone areas.

To reassemble your device, follow these instructions in reverse order.