



Nikon Coolpix S8200 SD Card Replacement

Replacing the SD Card

Written By: Nelson Antiposti




Step 1 — SD Card



- Start by locating the Battery Terminal on the bottom of the Camera, push the slider over to let the door flip open.

Step 2

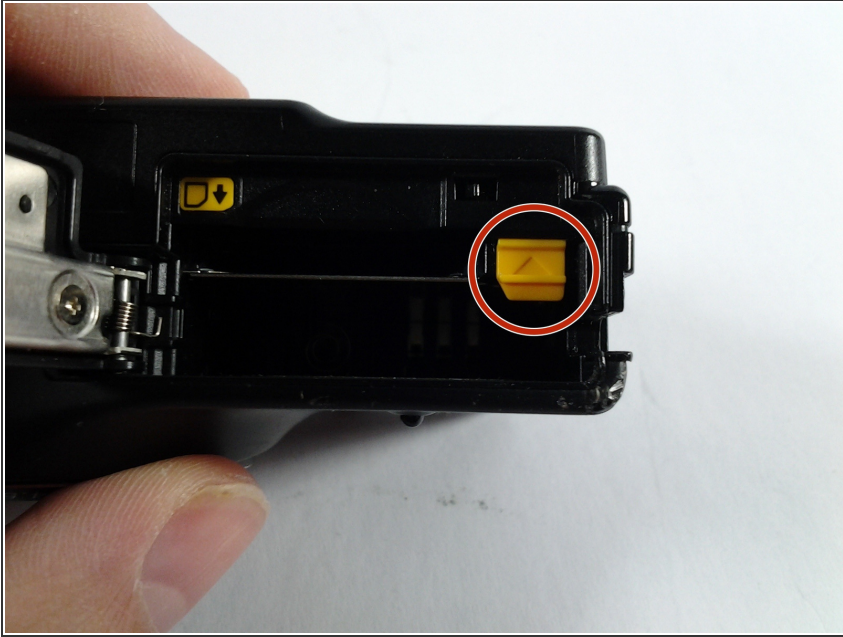

- The SD card will be the smaller of the two cards in the battery terminal. Press down on the SD card and it will pop out enough for you to grab it and remove it. Then put another SD card in its place.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 05:31:06 AM.