



Screw Specifications

A list of all screws and their sizes that were removed while disassembling the Sega CD.

Written By: sskyllin



INTRODUCTION

Main Case Screws: Six .46 x .1 in screws

Genesis Adapter: Two .38 x .09 in screws

Large Metal Plate: Three .46 x .1 in screws

CD Tray: Two .38 x .09 in screws

Small Metal Plate: Two .46 x .1 in screws

Motherboard: .475 x .115 in screws

Power Supply Board: Three .46 x .1 in screws

Optical Reader: Four .37 x .08 in screws

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 01:22:31 PM.