



iPod Mini Top Bezel Replacement

Written By: iRobot



INTRODUCTION

The plastic part on the top of the iPod.



TOOLS:

- Flathead 3/32" or 2.5 mm Screwdriver (1)



PARTS:

- iPod Mini Top Bezel (1)

Step 1 — Top Bezel



- ⓘ Before opening your iPod, ensure that the hold switch is in the locked position.

Step 2



- Carefully insert a small flathead screwdriver in the seam between the metal casing and white plastic top. Use the screwdriver to pry up the

white plastic top bezel. Be careful not to damage the soft plastic with your screwdriver.

- ⓘ The top bezel is held on with an adhesive, so it may be necessary to pry up in several different locations to free the part.
- To make this job easier, heat up the adhesive with a hairdryer on low heat for a few seconds.

Step 3



- Lift the top bezel off of the iPod.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-10 08:00:17 PM.