




Dell Photo Printer 720 Ink Cartridge Replacement

This guide will show how to replace the ink cartridges in your Dell Photo Printer 720.

Written By: Megan Lawrence

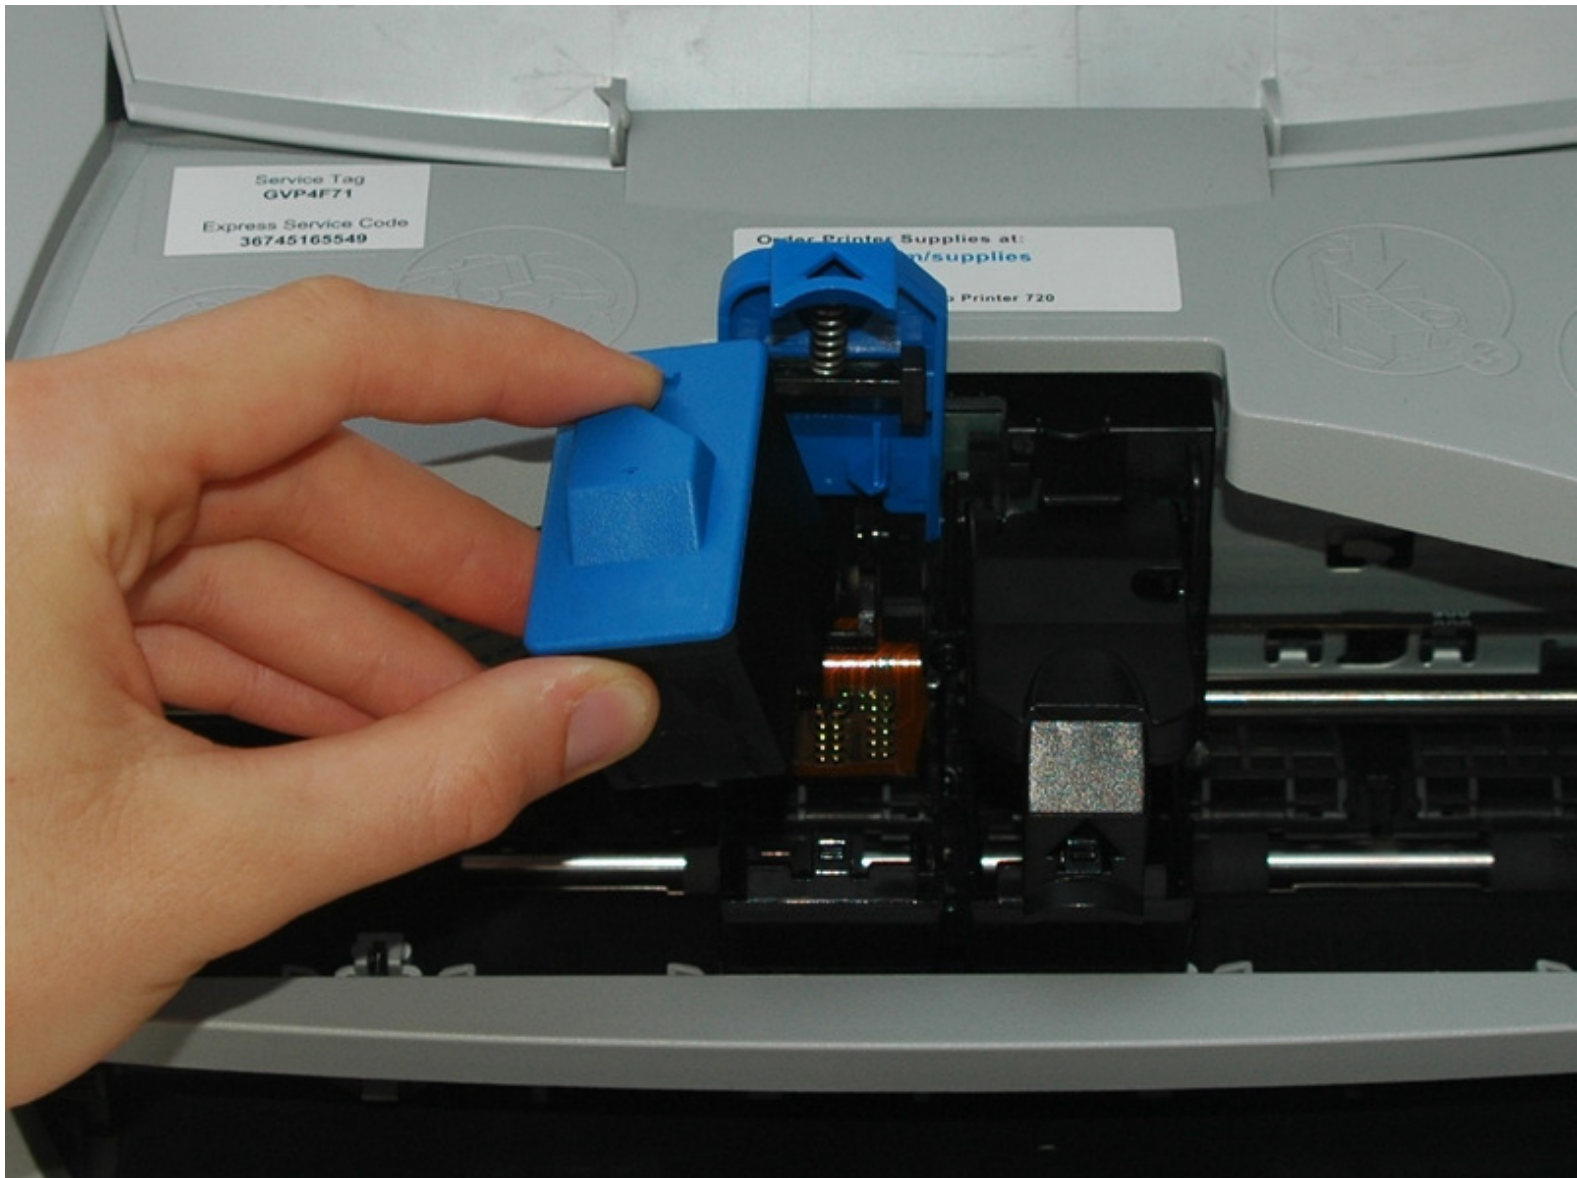

INTRODUCTION

If you are having problems with the quality of printed documents and photos, such as streaks of lines or faded colors, or if your printer is printing blank pages, then it is time to replace the ink cartridges. The Dell Photo Printer 720 contains one black ink cartridge and one color ink cartridge. It is recommended to [purchase ink cartridges through the Dell website](#) to ensure quality and efficiency. This guide will take you through the steps to replace the ink cartridges in your Dell Photo Printer 720.

Step 1 — Ink Cartridge



- Begin by making sure the printer is connected to a power source and is turned on.
- Lift the front cover of the printer.
- ⓘ Upon lifting the cover, the ink cartridges will move from the far right side into the center.

Step 2



- Press the tab on the ink cartridge lid.
- Push the lid up to open.
- ⓘ This step shows the black ink cartridge in black and the color ink cartridge in blue. You may need to replace both or only one ink cartridge at a time.

Step 3



- Grab the ink cartridge and remove it from the printer.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-02 09:46:28 AM.