



Canon Vixia HF20 Camcorder Strap Replacement

This guide will show the user how to replace the padded camcorder hand strap, and how to adjust it to make it fit your hand securely.


Written By: Taylor Morris



INTRODUCTION

We will be explaining how to replace the hand strap in the Canon Vixia HF20 Camcorder.

Step 1 — Camcorder Strap

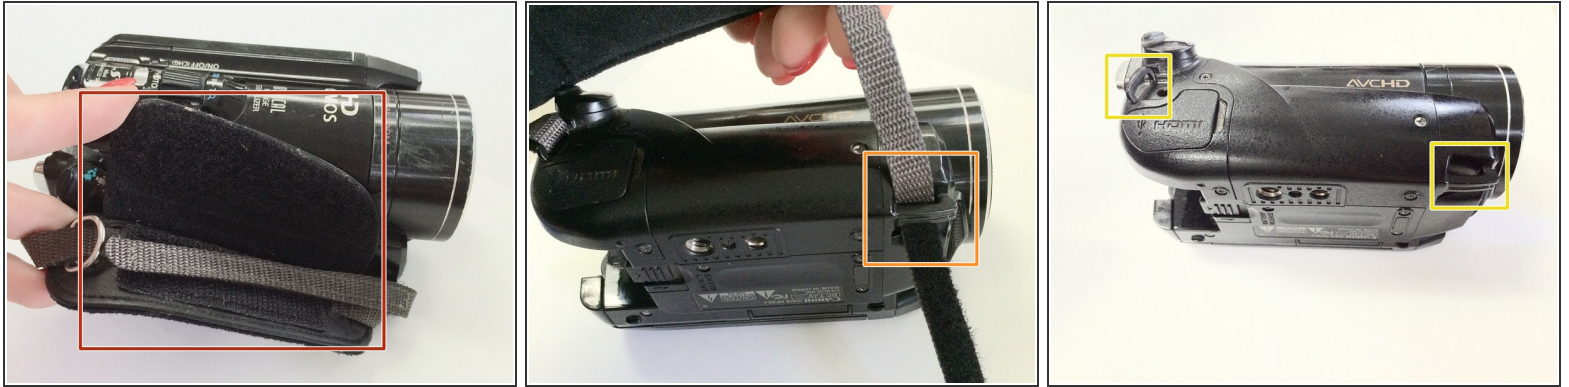

- Un-velcro the camcorder strap.
- Remove the strap from the first hole by pulling towards the front of the camcorder, continue pulling the strap through until it is removed from second anchor point as well.
- There should now be two empty anchor points.

Step 2



- Re-insert the new Velcro strap through the back anchor hole in the direction of the arrow (toward the battery end of the camcorder).
- Then through the padded hand strap in direction of the arrow.
- Lastly, pull the strap through the front anchor hole adjusting for your grip.

Step 3



- Once the fit is adjusted, secure by closing the padded strap.

This document was last generated on 2017-07-02 01:25:15 PM.