



# Lenovo ThinkPad T500 Battery Replacement

This guide will show the user how to replace the battery of the Lenovo ThinkPad T500.

Written By: Nickie Gurney



---

## INTRODUCTION

The Lenovo Thinkpad T500 supports 6-cell and 9-cell batteries.

---



### PARTS:

- [ThinkPad Li-ion Battery \(9 Cell\)](#) (1)
-

## Step 1 — Battery



- Slide the battery locking tab on the underside of the ThinkPad T500 to the right.

## Step 2



- With the tab in the "unlock" position, gently slide the battery away from the body of the ThinkPad.

### Step 3



- The battery is out! You can now replace it with the correct replacement battery and be on your way!

To reassemble your device, follow these instructions in reverse order.