



HP Pavilion dv5000 RAM Cover Replacement

This guide will tell you how to remove the RAM Cover.

Written By: Alex Kwok



INTRODUCTION

This guide will tell you how to remove the RAM Cover.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — RAM Cover



- Remove the two 5mm Phillips screws on the right side of the RAM cover.
- Lift the right side of the RAM cover, and remove it.

To reassemble your device, follow these instructions in reverse order.