 




Kodak EasyShare C913 Buttons Replacement

Use this guide to remove and install the buttons

Written By: Alan Galarza

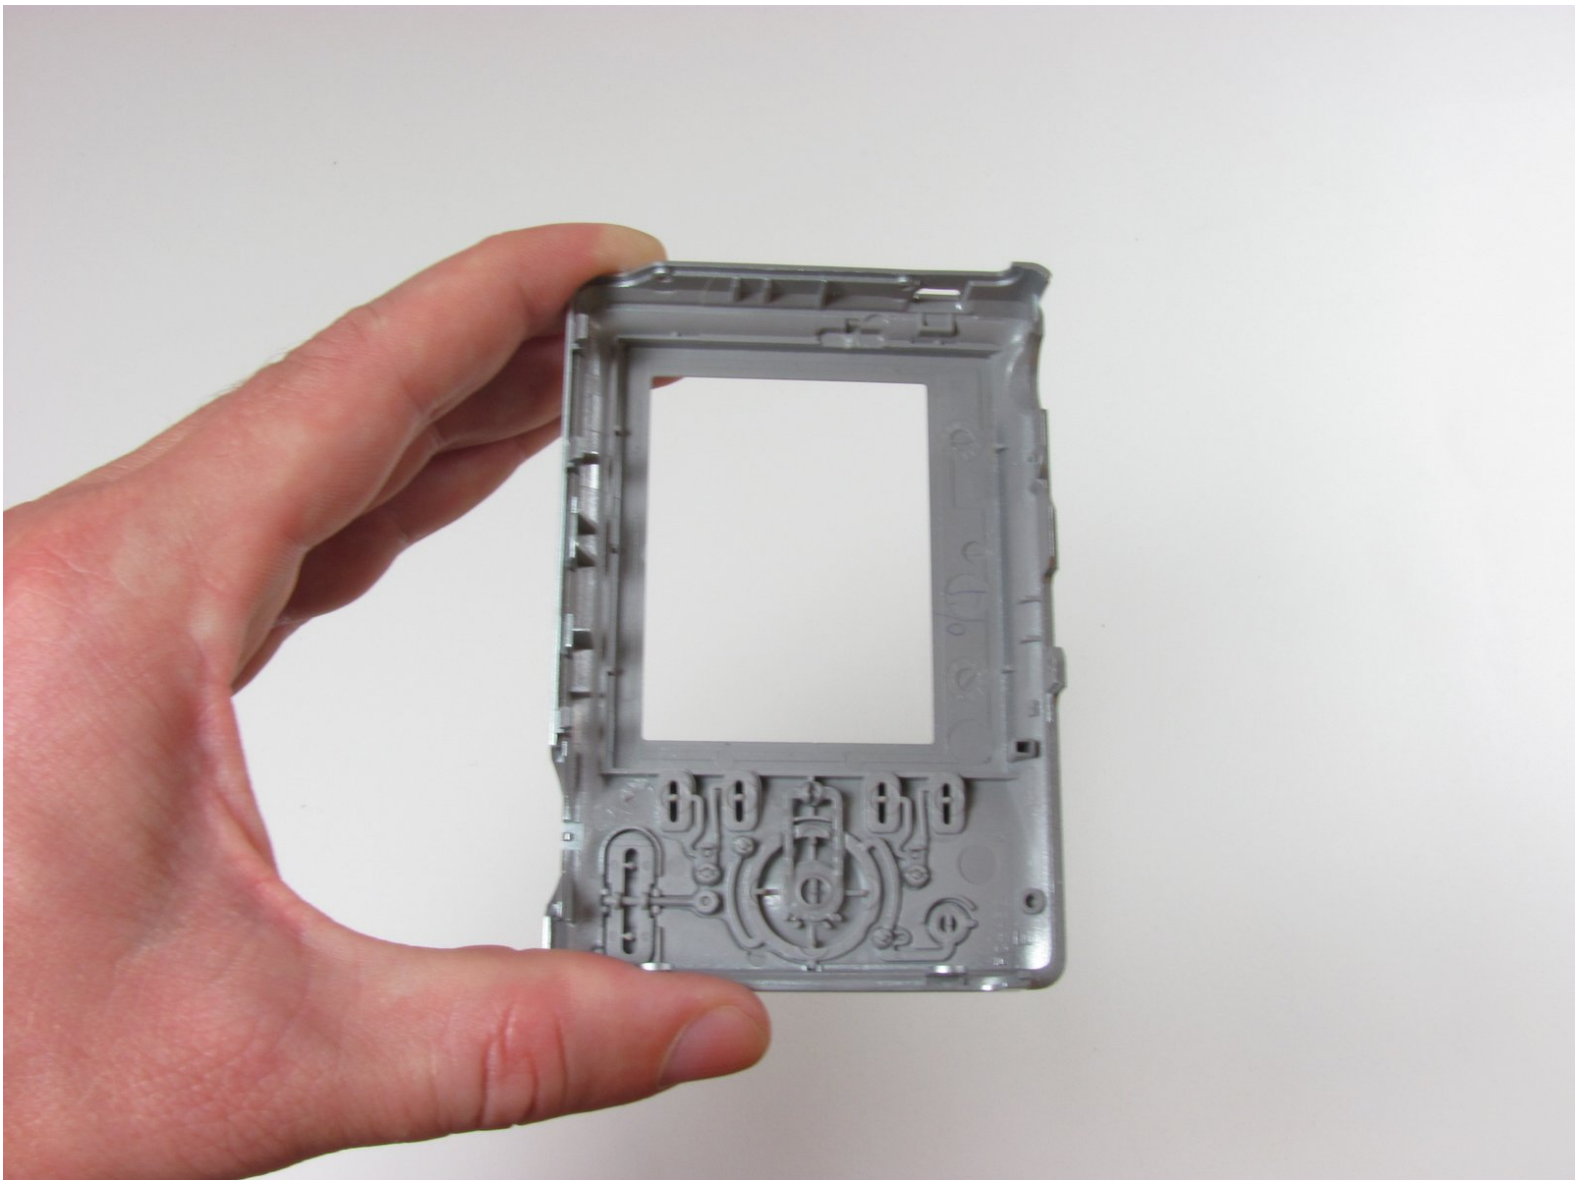

INTRODUCTION

How to remove the buttons.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Batteries



- Position the camera with the bottom facing up.
- With your finger, slide the battery cover in the direction of open arrow.
- The battery cover will spring open, so be careful to lift it up gently.

Step 2 — Back Case



 
- Use a Phillips #00 screwdriver to remove the seven 4.5mm screws.
 - There are 2 on the left
 - There are 2 on the right
 - There are 3 on the bottom

Step 3



- Firmly grasp and pull back casing off.

Step 4 — Buttons

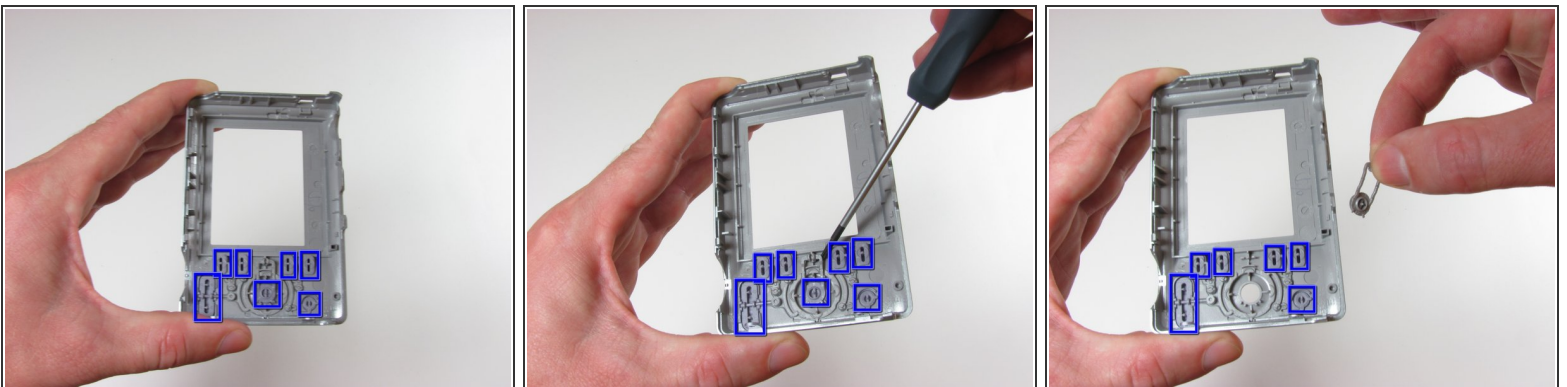

- Use #00 screwdriver to pry off buttons.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-04 05:44:50 AM.