



Dell Inspiron E1705 Upper Case and Screen Replacement

This repair guide includes step by step instructions for replacing the screen/monitor on a Dell Inspiron E1705 laptop.

Written By: Evan Fairchild



INTRODUCTION

There is some disassembly required. You will want to prepare a clean and organized work space for this repair.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Upper Case and Screen



- Use a spudger to remove the six rubber nibs and 2 plastic pieces on the bezel of the display.
- Remove the eight Phillips #0 screws hidden under the rubber nibs and plastic pieces.

Step 2





- Pry the plastic bezel from the back plate using a plastic opening tool.
- Remove the plastic bezel entirely and set it aside.

Step 3





- Remove the 4 screws along the left and right sides of the screen. There are 8 screws in total.

Step 4

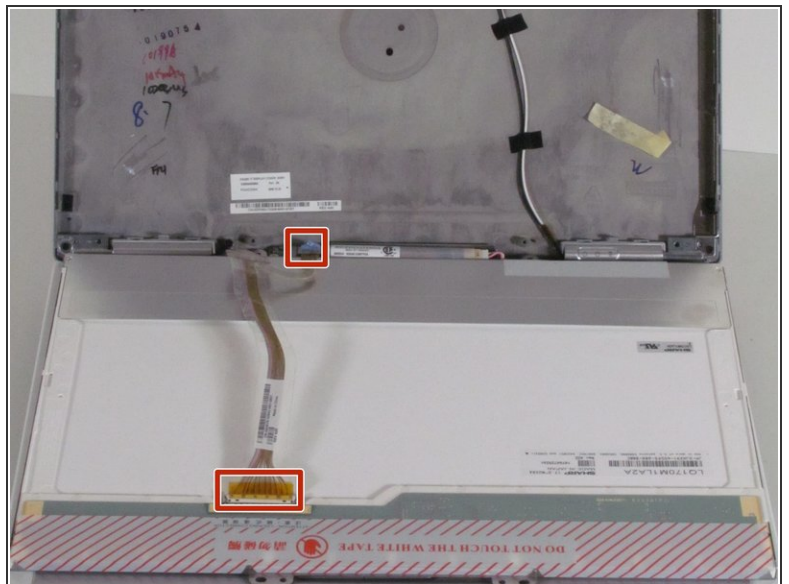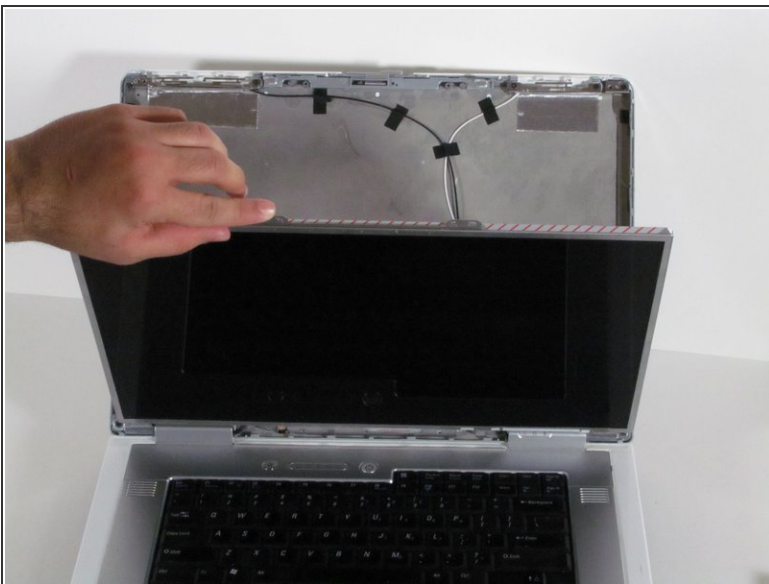

- Use the spudger to separate the screen from the back case.
- Hold the screen in one hand and tilt the back case away from you.
- The screen is connected to the back case by two leads.

Step 5

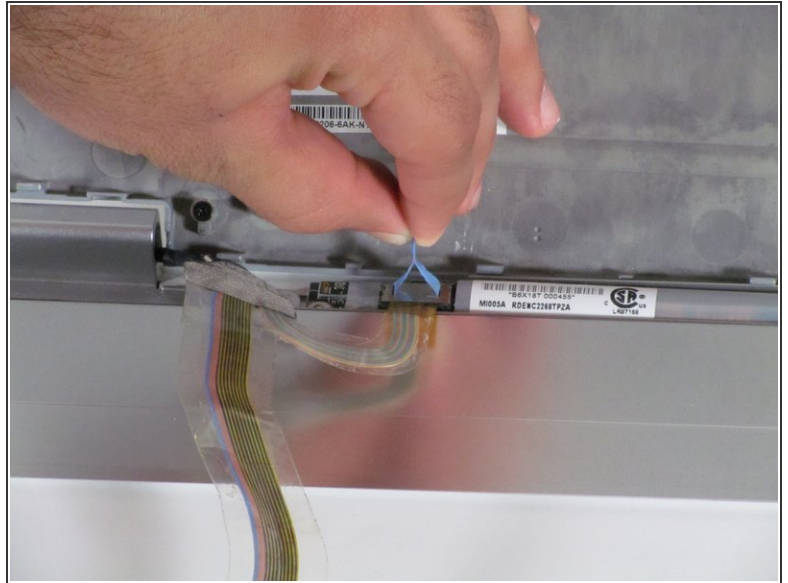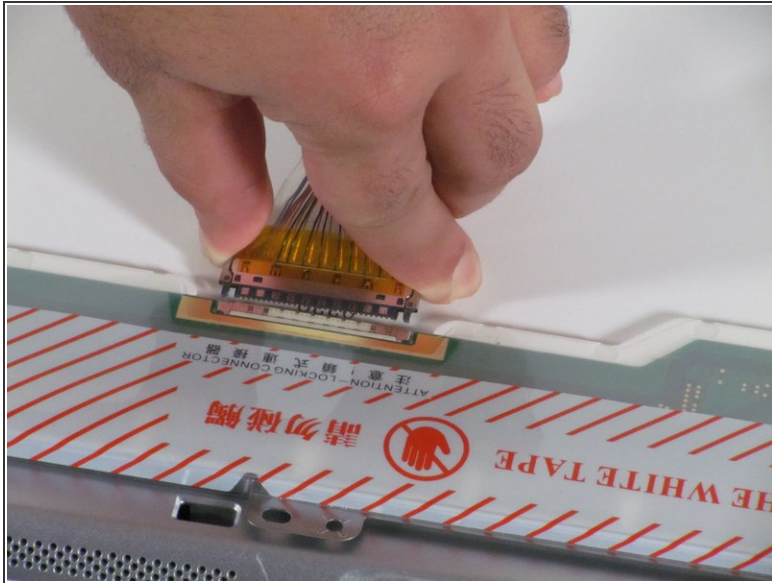

- Remove the two leads from the screen. They will stay connected to the computer.

⚠ Do not touch the white tape on your replacement monitor.

- Remove the screen carefully.

To reassemble your device, follow these instructions in reverse order.