



Dell Inspiron E1705 Upper Case and Screen Replacement

This repair guide includes step by step instructions for disassembling the upper case which houses the screen/monitor on a Dell Inspiron E1705 laptop. The purpose would be for replacing the screen.

Written By: Evan Fairchild



INTRODUCTION

There is some disassembly required. You will want to prepare a clean and organized work space for this repair.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Upper Case and Screen



- Use a spudger or your fingernail to pry out the 6 rubber and 2 plastic pieces on the bezel of the display.
- Use a small phillips head screwdriver to remove the 8 screws.

Step 2



- Use a plastic opening tool to carefully pry the plastic cover from the screen mount.

Step 3





- Remove the 4 screws along EACH side of the screen.
 - 8 screws total
- Now use the spudger to lift the screen and rotate away from you.

Step 4



- Lift the screen up and out using the spudger tool
- Tilt the screen away from you
- The screen will be connected by two leads. See picture

Step 5

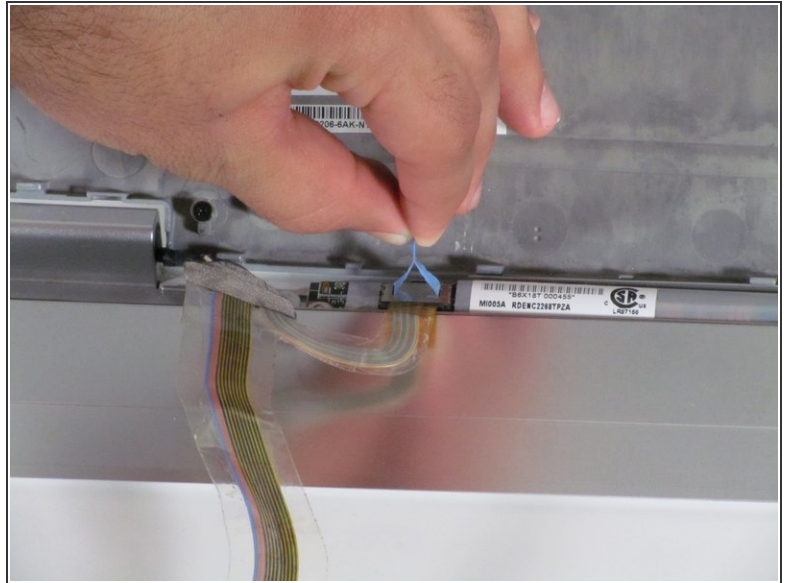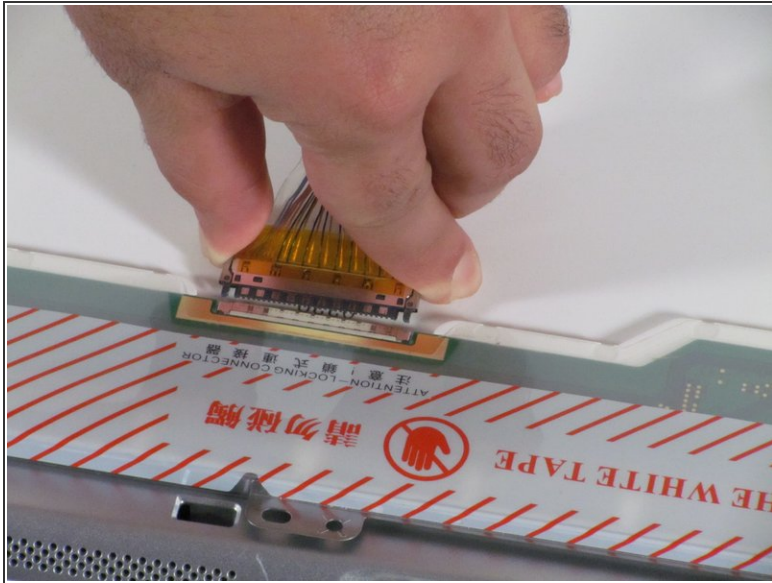

- Locate the two leads and gently remove them from the screen. They will stay connected to the computer.
- ⚠ Do not touch the taped, white backing on your replacement monitor.
- Remove the screen carefully.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-19 05:53:39 PM.