


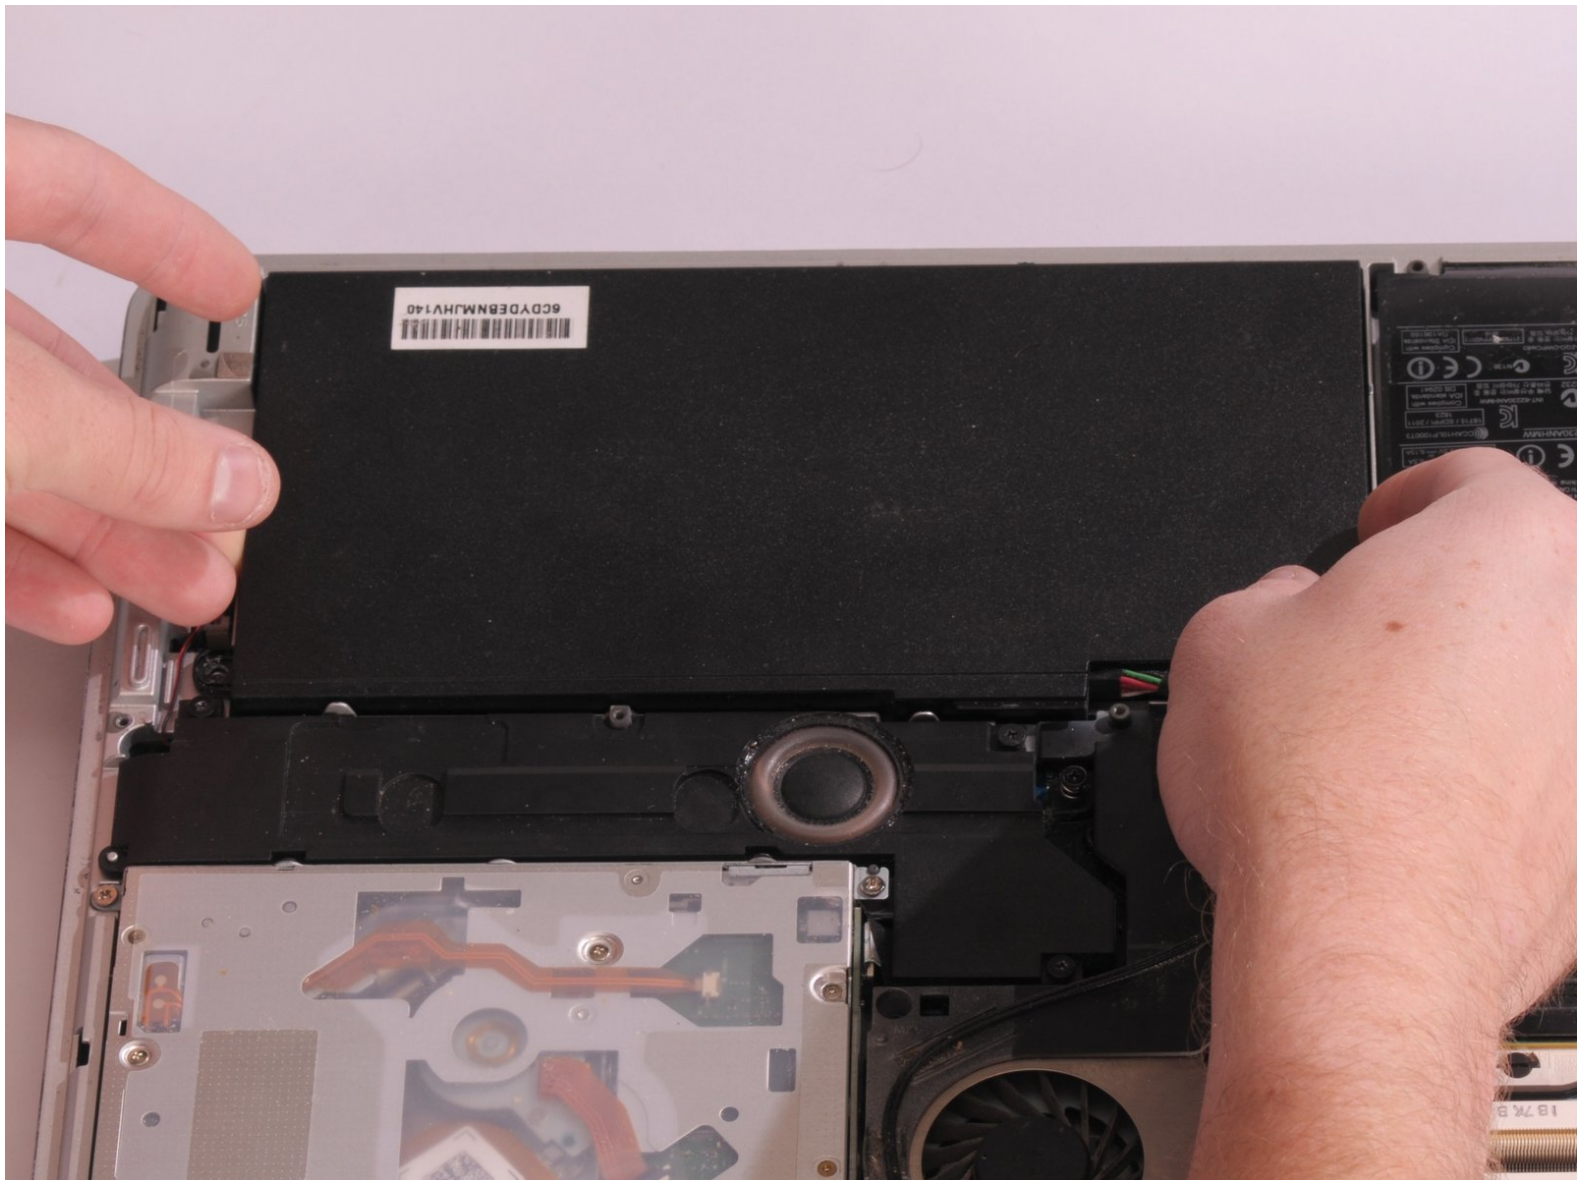

# HP Envy 17-3070NR Battery Replacement

In this guide, we will show you how to replace the battery on your HP Envy 17-3070NR.

Written By: Abby Lentz



---

## INTRODUCTION


Batteries go bad with time. If you find yourself having to charge your HP Envy 17-3070NR too often or it would not store charge at all, this guide is for you.


---

### TOOLS:

- [T8 Torx Screwdriver](#) (1)
  - [Phillips #2 Screwdriver](#) (1)
-




## Step 1 — Back Cover

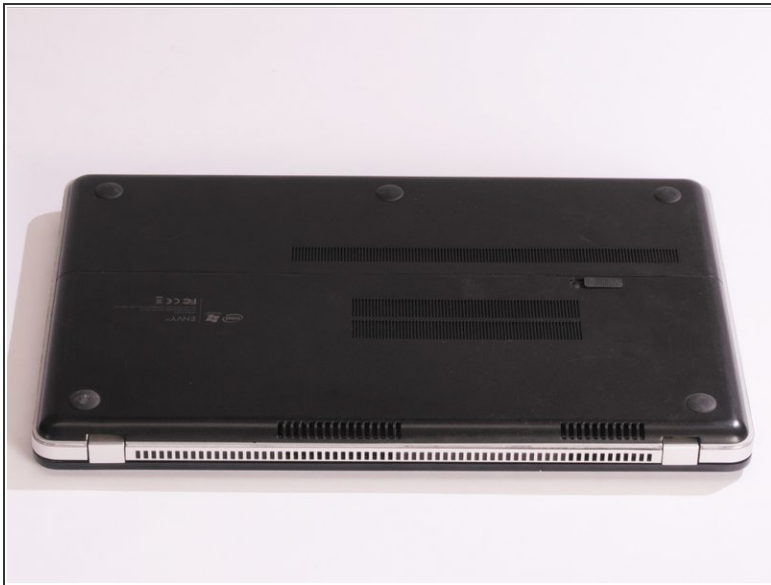

 Before you begin taking apart the computer, make sure that it is completely powered off.



- Slide the release latch away from the nearest edge.
- Slide the back cover off of the computer.

## Step 2

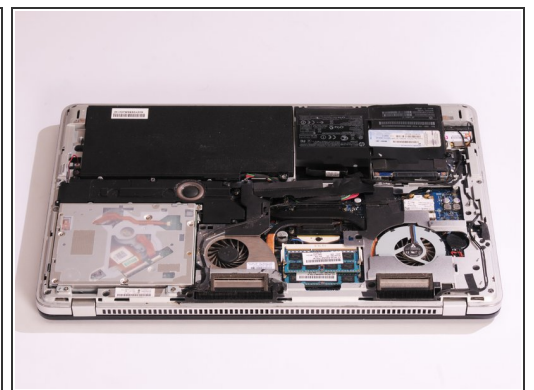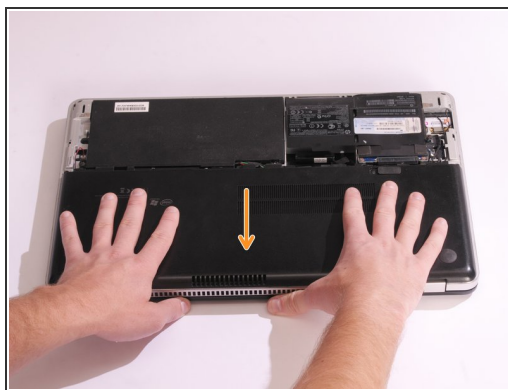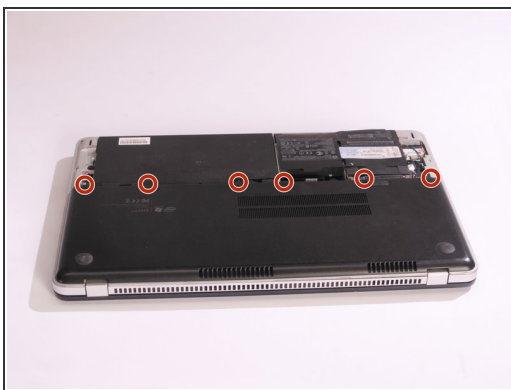




- Remove the six 3.7mm Phillips screws.
- Slide the back cover until it clicks, then lift it straight off.

### Step 3 — Battery

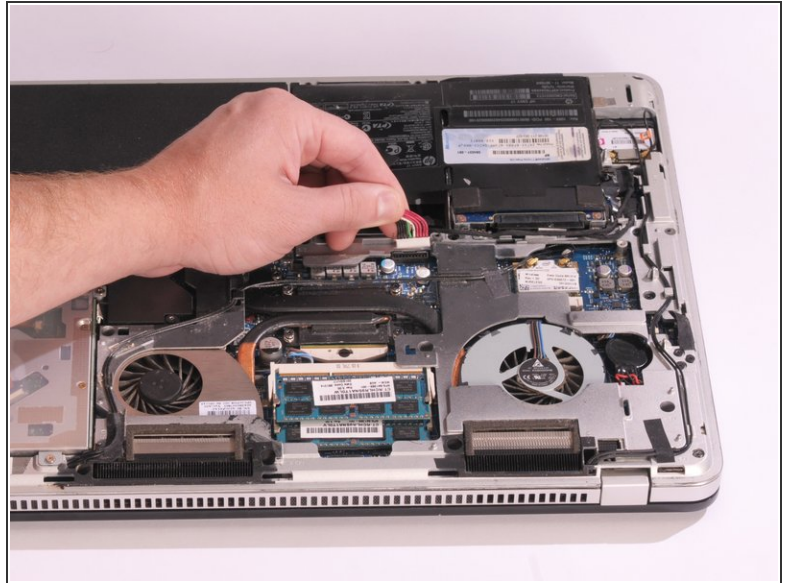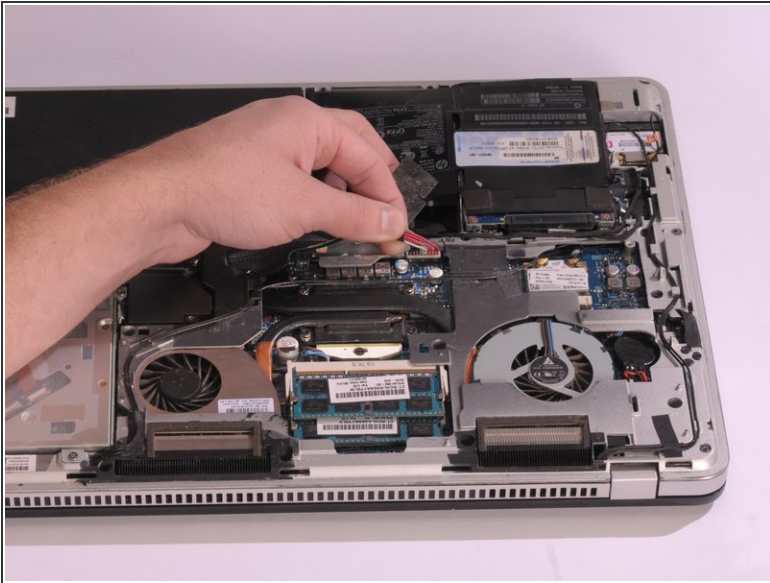

- Disconnect the multi-colored battery cable from the main assembly by gently pulling upward on it.

### Step 4

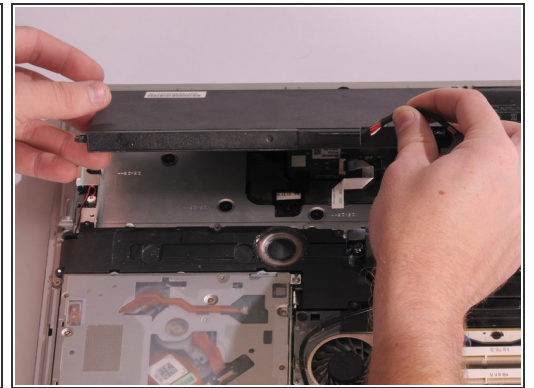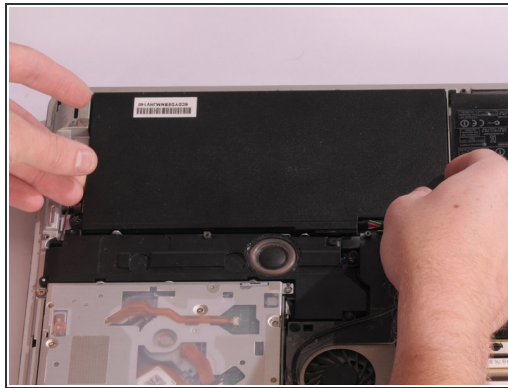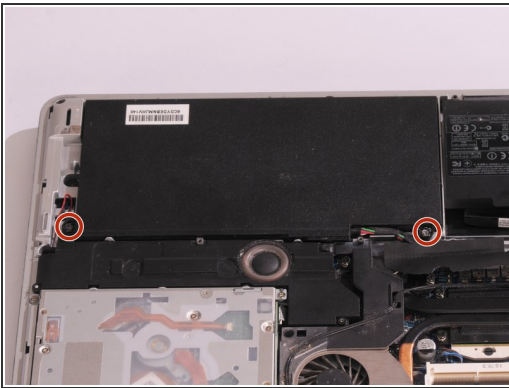

- Remove the two 3.8 mm Torx screws using M8 Torx screwdriver.
- Remove the battery by pulling it straight out away from the computer.
- ⓘ It is much easier to use the battery cable to carefully lift the battery off than to try to pry it off with tools.

To reassemble your device, follow these instructions in reverse order.