




Skil 88 Bit removal

Use the chuck key to loosen an overly tight chuck.

Written By: Matt

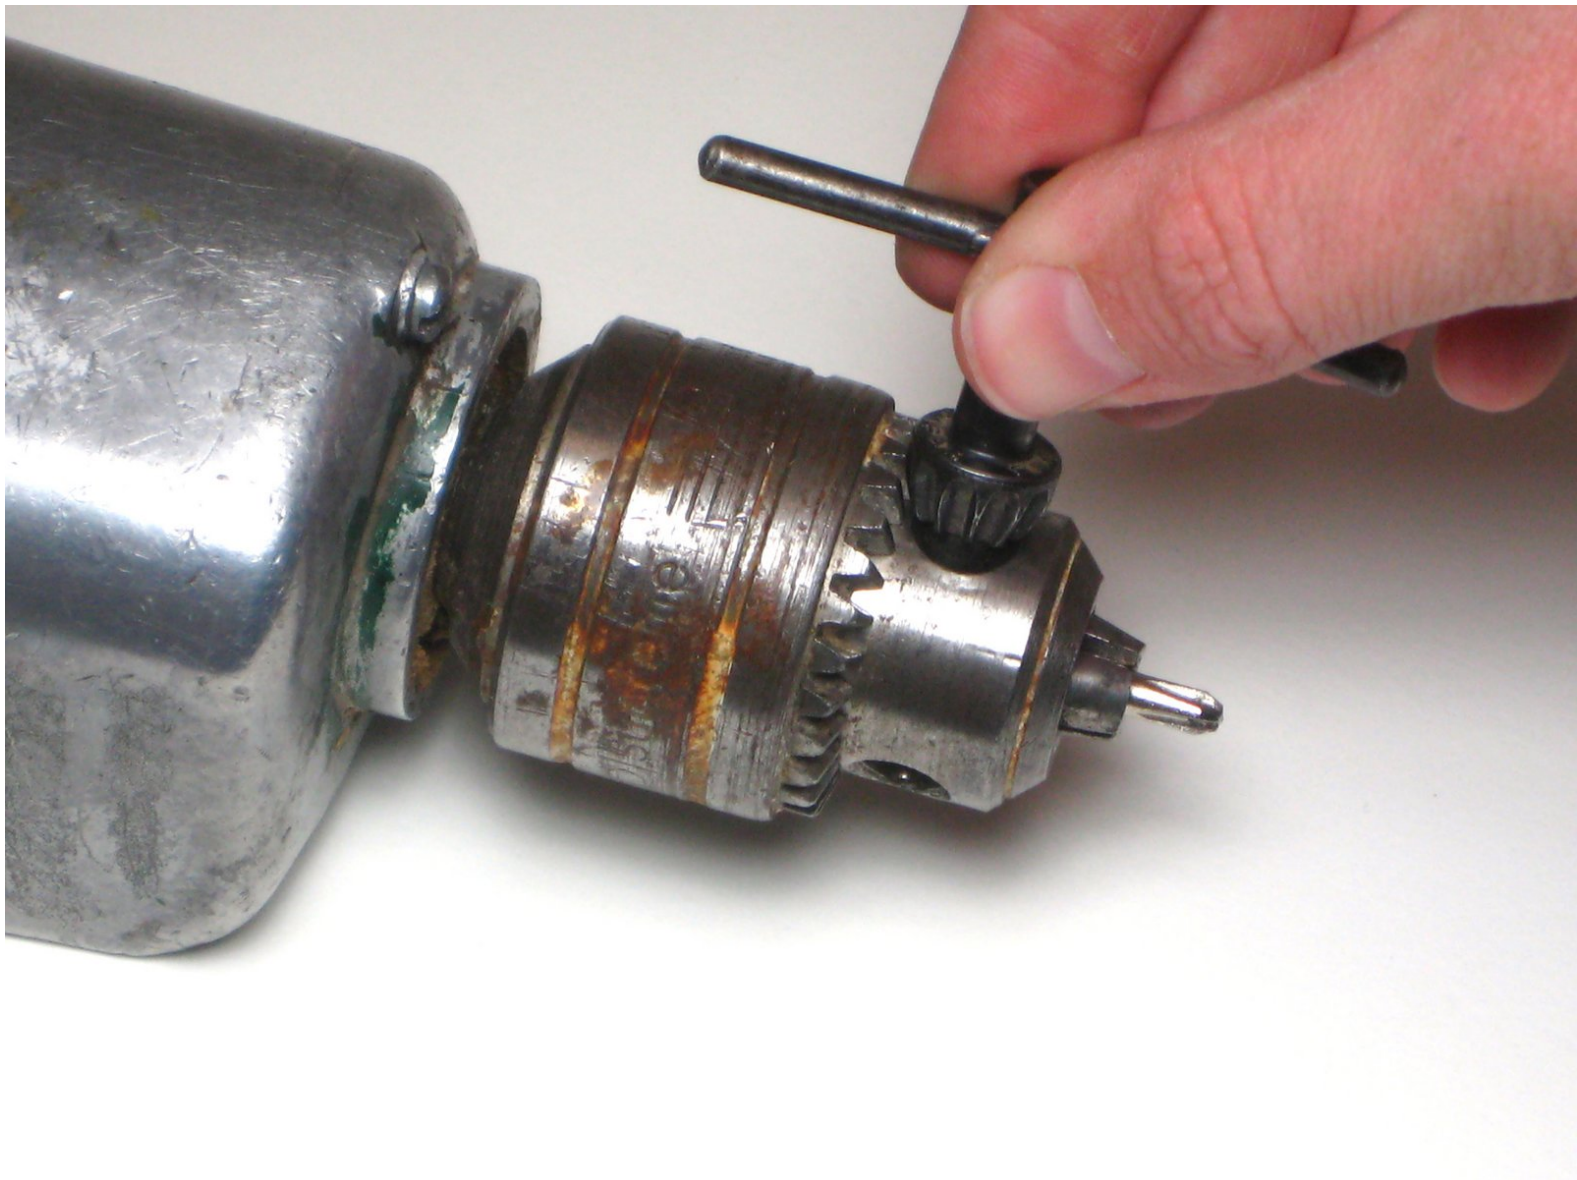

INTRODUCTION

Using the chuck key, you'll be able to remove stuck drill bits that you couldn't free with your bare hands.

Step 1 — Skil 88 Bit removal



- Locate one of the indents in the side of the chuck. Line up the chuck key with this hole and the teeth right below it.

Step 2



- Turn the chuck key counter-clockwise.

Step 3



- Pull the drill bit free as the jaws loosen.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-09-03 11:17:17 PM.