



Dell Inspiron 9100 PCMCIA Card Replacement

Removal of the PCMCIA card used for accessories.

Written By: charlierefvem



Step 1 — PCMCIA Card



- Press the button to right of the PCMCIA card.
- This will pop out the button.
- Press the same button again to eject the PCMCIA card.
- Remove the PCMCIA card.
- Push the popped out button back in.

To reassemble your device, follow these instructions in reverse order.