 




Samsung P241 Top Case Replacement

This guide shows you how to take the top cover off the DVD player to get to the components inside.

Written By: Sarah Wachtfogel

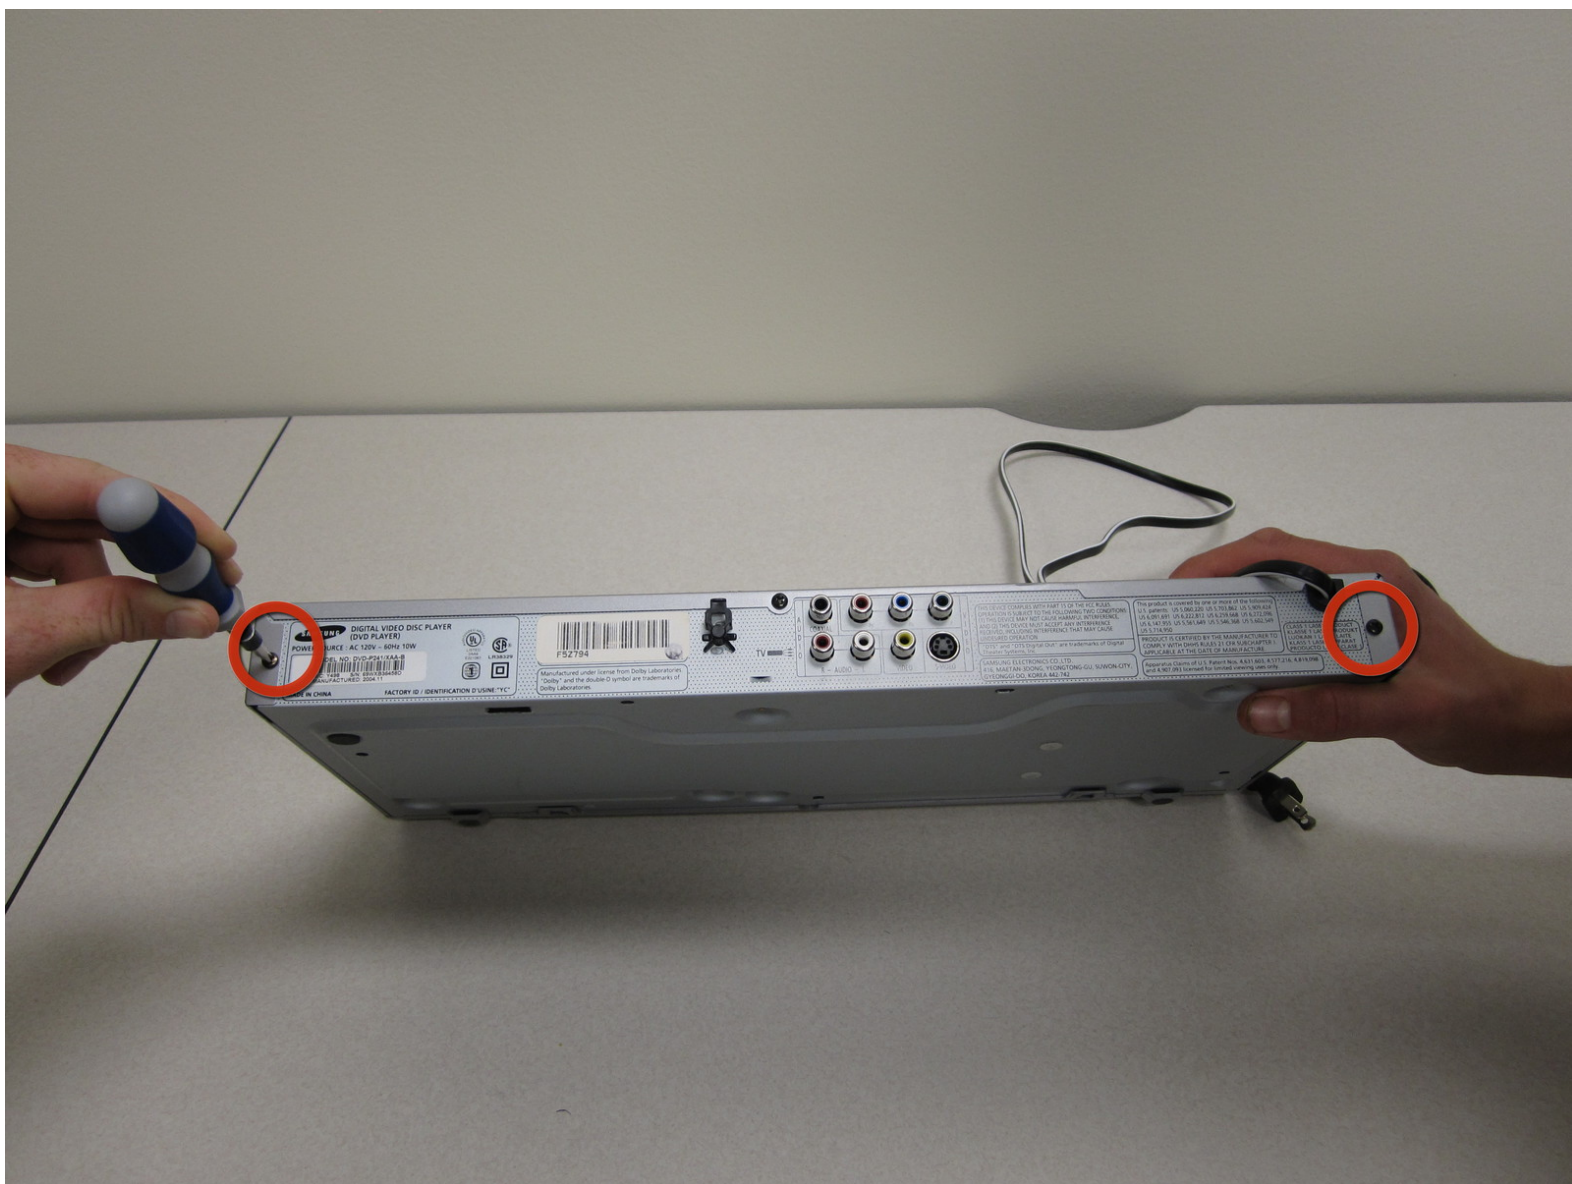

 
INTRODUCTION

Make sure you look at the [Samsung P241 Troubleshooting Guide](#) first to see if you can solve your problem without taking the DVD player apart.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Top Case

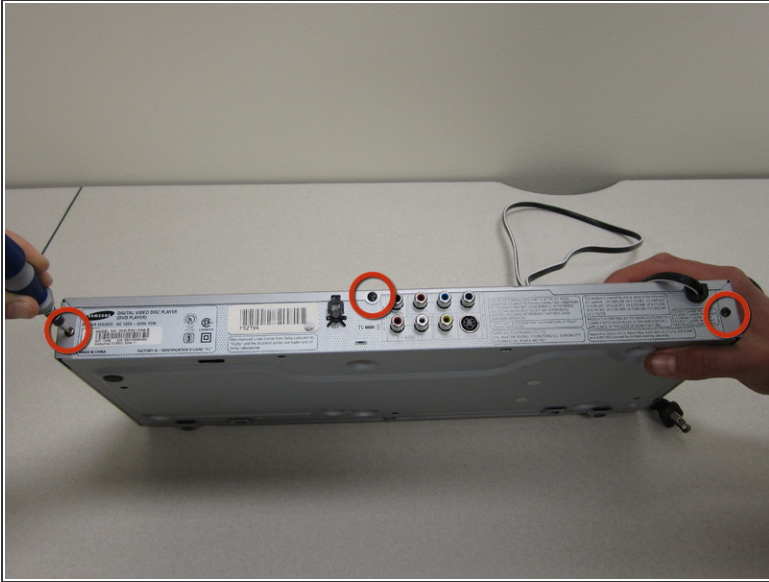

i You will need to be near a power source for this guide.

- With the back of the DVD player facing you, remove the three 1 cm black screws on the right, left, and top sides using a Phillips #1 screwdriver.

Step 2



- Pull the top cover towards you until you can lift it up and off.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-13 04:32:23 PM.