



Disassembling Canon Powershot SD880 Back Cover Removal

How to remove the outer casing of the camera.

Written By: Ben Tupas



INTRODUCTION

The outer casing covers the internal mechanisms of the camera.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Back Cover Removal



- Remove the 2 screws (2.41 mm long) on the side of the camera next to the LCD screen.
- Remove the 2 screws (4.08 mm) on the other side. One is located under the rubber USB flap.
- Remove the last screw (2.59 mm) located on the bottom of the camera.
- Slowly pull the back cover of the camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-05-19 11:38:24 AM.