



# Disassembling Canon Powershot SD880 LCD Display

How to remove the LCD display.

Written By: Ben Tupas



## INTRODUCTION

The LCD display can be removed and replaced if it is cracked or broken.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Back Cover Removal



- Remove the 2 screws (2.41 mm long) on the side of the camera next to the LCD screen.
- Remove the 2 screws (4.08 mm) on the other side. One is located under the rubber USB flap.
- Remove the last screw (2.59 mm) located on the bottom of the camera.
- Slowly pull the back cover of the camera.

## Step 2 — LCD Display



- Remove the screws (2.88 mm) at the top right corner and bottom left corner of the LCD screen.
- Disconnect the ribbons connecting the screen to the camera.
- Lift off the screen.

To reassemble your device, follow these instructions in reverse order.

