



Disassembling Canon Powershot SD880 Menu Button

How to remove the Menu Button.

Written By: Ben Tupas



INTRODUCTION

This may need to be removed if the button or scroll wheel is not working.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Back Cover Removal



- Remove the 2 screws (2.41 mm long) on the side of the camera next to the LCD screen.
- Remove the 2 screws (4.08 mm) on the other side. One is located under the rubber USB flap.
- Remove the last screw (2.59 mm) located on the bottom of the camera.
- Slowly pull the back cover of the camera.

Step 2 — Menu Button

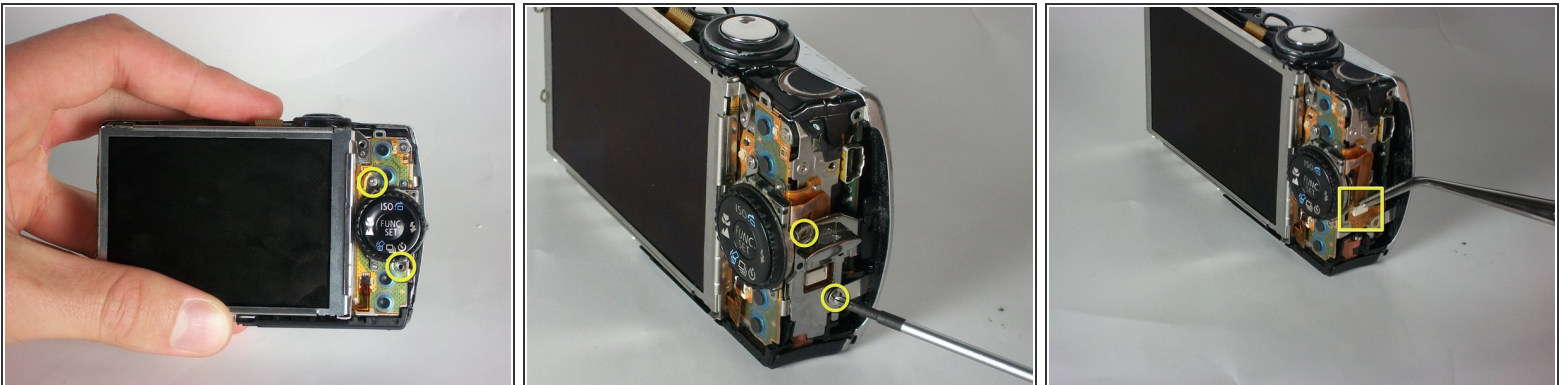

- Remove 2 screws from back of camera using screwdriver.
- Remove 2 screws holding metal side guard using screwdriver.
- Remove the connecting ribbon by pulling it straight out.

To reassemble your device, follow these instructions in reverse order.

