



Canon Powershot SD880 Batteries/Memory Card Replacement

How to remove/replace the batteries and memory card for the camera.

Written By: Robert Manno



INTRODUCTION

The battery will need to be recharged or replaced after it runs out of power. The memory card should be replaced, too, once its storage is full.

TOOLS:

- [Spudger](#) (1)
-

Step 1 — Batteries/Memory Card



- Locate the battery cover at the bottom of the camera.
- Slide the cover in the direction away from the lens.
- The cover should pop up, revealing the slot where the batteries and the memory card are inserted.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-08 05:46:29 PM.