



# Canon Powershot SD880 Front Cover Removal Replacement

Written By: Robert Manno



 **TOOLS:**

- [Phillips #00 Screwdriver \(1\)](#)
-

## Step 1 — Back Cover Removal



- Remove the 2 screws (2.41 mm long) on the side of the camera next to the LCD screen.
- Remove the 2 screws (4.08 mm) on the other side. One is located under the rubber USB flap.
- Remove the last screw (2.59 mm) located on the bottom of the camera.
- Slowly pull the back cover of the camera.

## Step 2 — Front Cover Removal



- Remove the screw (2.59 mm) from the bottom of the camera.
- Remove the screw (4.08 mm) from the menu button side of the camera.
- Note: the 2 screws on the other side of the camera were already removed when taking off the back cover.

To reassemble your device, follow these instructions in reverse order.

