



# TRS-80 Color Computer Outside Casing Replacement

Removing the outer casing of your TRS-80 Color Computer to get to the insides.

Written By: Andrew



---

## INTRODUCTION


Removing the outer casing of your TRS-80 Color Computer to get to the insides.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Outside Casing

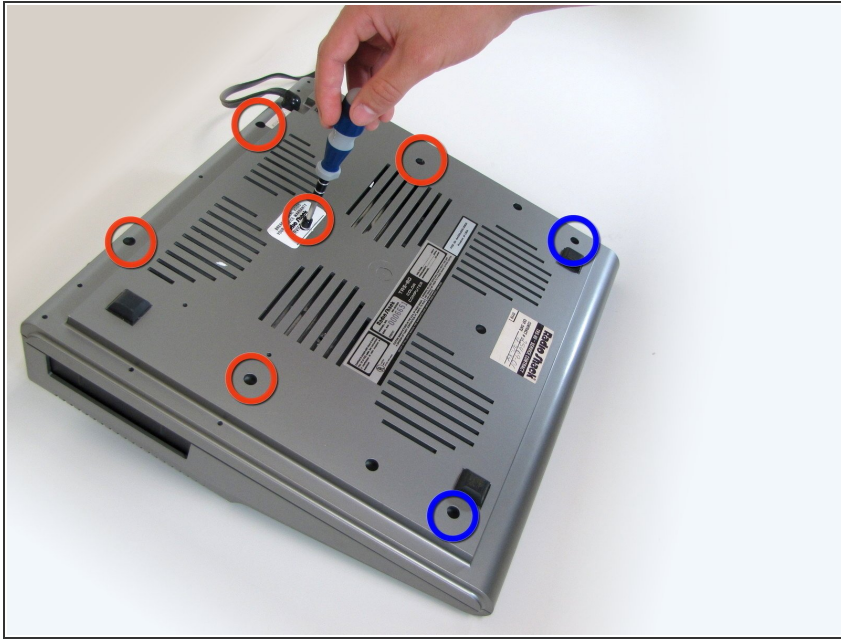

- Flip the computer over.
- Remove the two 24.1mm Phillips screws near the front of the case.
- Remove the five 33.0mm Phillips screws towards the back of the case.

## Step 2



- Carefully flip the computer right side up.
- Lift off the top half of the case.

To reassemble your device, follow these instructions in reverse order.