



Canon PowerShot S410 Battery Replacement

Replacing dead batteries.

Written By: Randy Lormand



INTRODUCTION

This guide demonstrates how to remove and replace the battery pack.

Step 1 — Battery




- ① Turn the camera with the bottom side facing up.
- Locate the panel labeled "Batt. Open"
- Place your finger on the panel and slide it in the direction of the arrow.
- The slot will swing open revealing the battery pack.

Step 2



- ① Rotate the camera so that the slot is horizontal.
- Pull the orange lever and the battery will spring out slightly.

Step 3

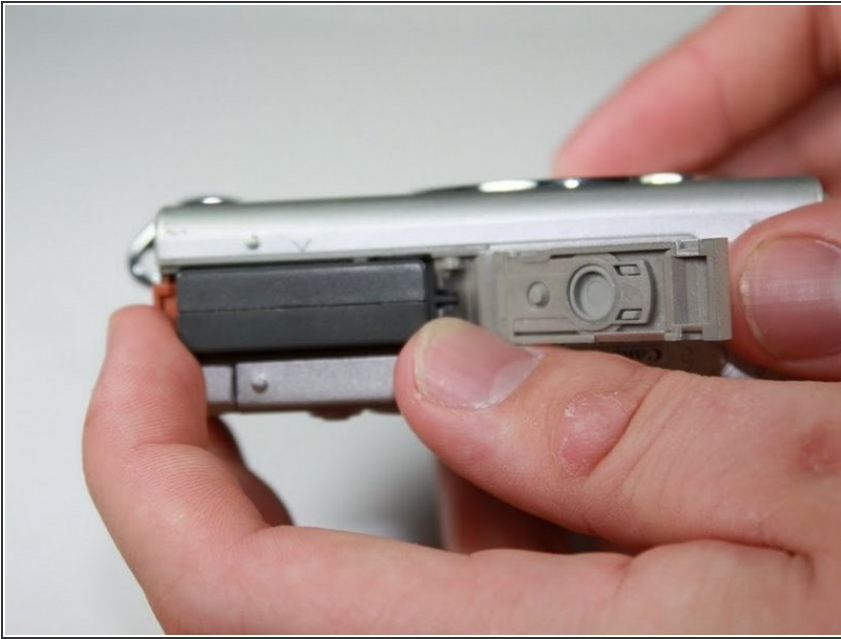

- Grasp battery and fully pull out of slot
- ⓘ When placing the new battery back in the slot, the arrow on the battery must align with the arrow on the camera.

After a new battery has been inserted, close the swinging door and you're done.

This document was last generated on 2019-08-17 09:24:12 PM.