


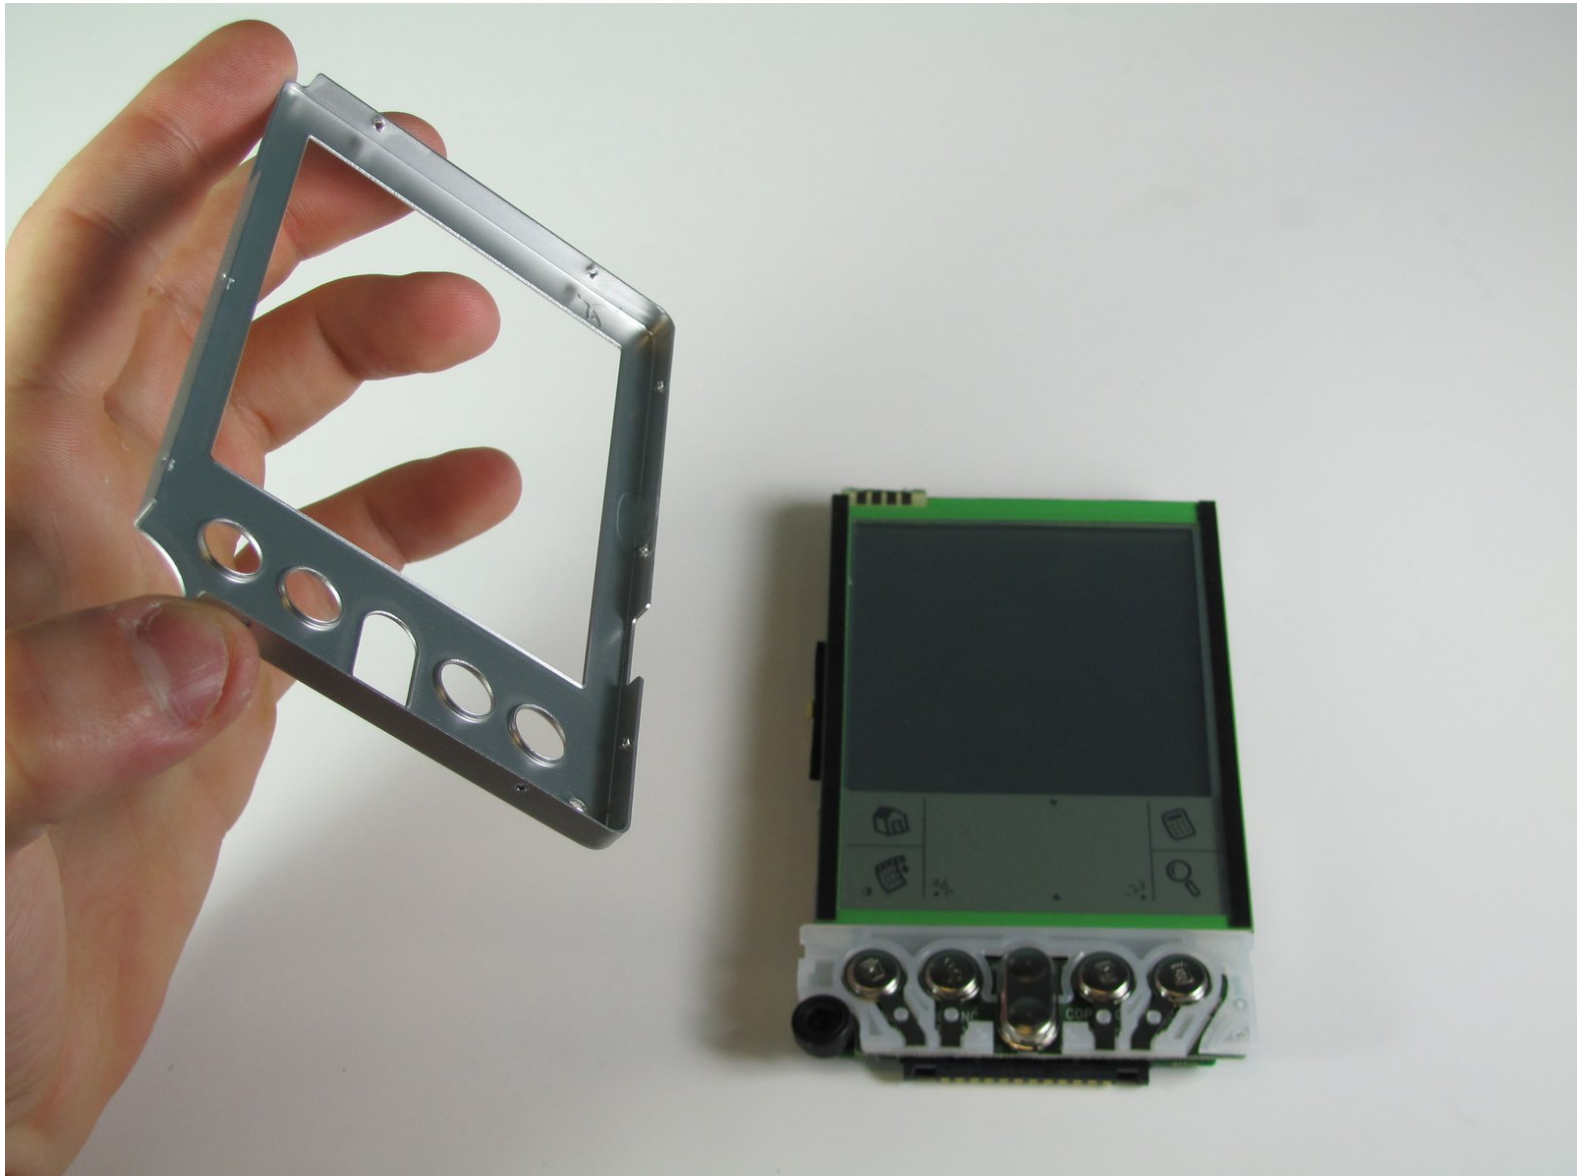

Handspring Visor Edge Button Board Replacement

This guide will show you how to replace a damaged button board.

Written By: Nick Lazarakis




INTRODUCTION

The button board can be easily pulled off without damaging the device. The only tool you need is a #00 Philips screwdriver.


TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-


Step 1 — Flip Cover

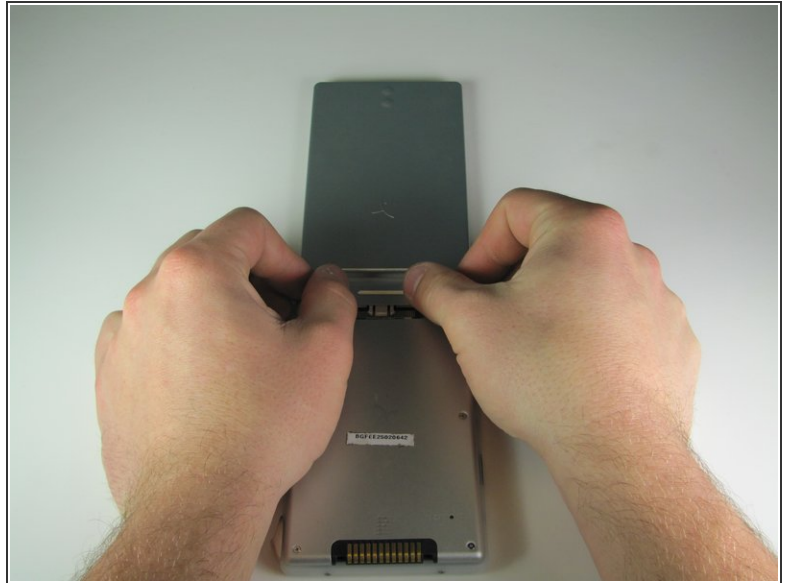

- Place Visor Edge face down.
- Notice the tab connecting the flip cover to the back of the PDA.
- Gently push tab forward.

 Do not pull on the flip cover to try and remove it from the PDA.

Step 2 — Back Panel

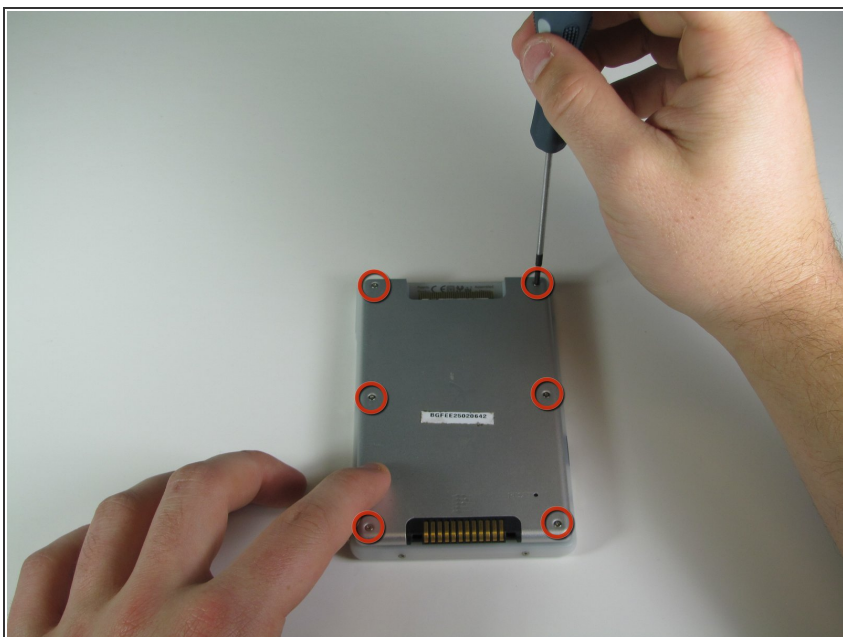

- Remove the six 4.1 mm Phillips screws from the back plate using the #00 Phillips Screwdriver.

Step 3




- Remove the black plate from the PDA.

Step 4




- Remove four 2.6 mm Philips screws that are on the sides of the frame.
- Remove the remaining 3.9 mm Philips screw holding together the stylus holster and the frame.

Step 5

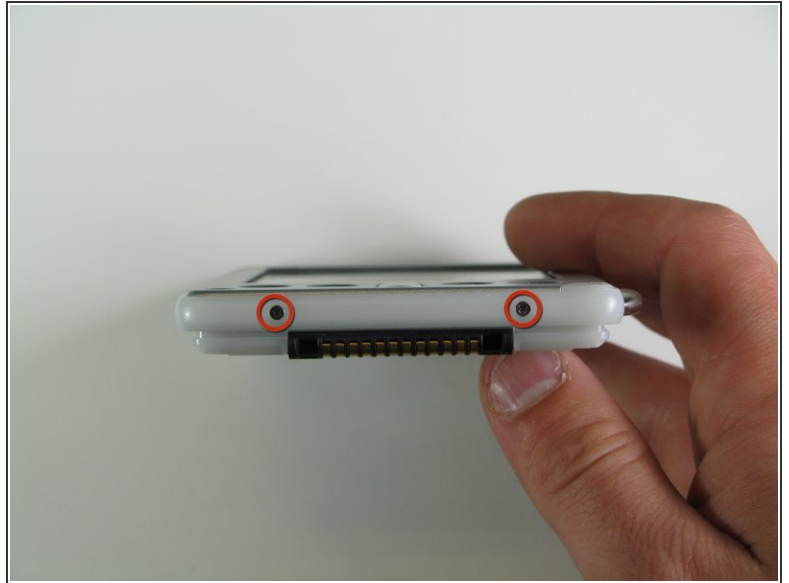


- Remove the four 2.6 mm Philips screws on the top and bottom of the frame.

Step 6

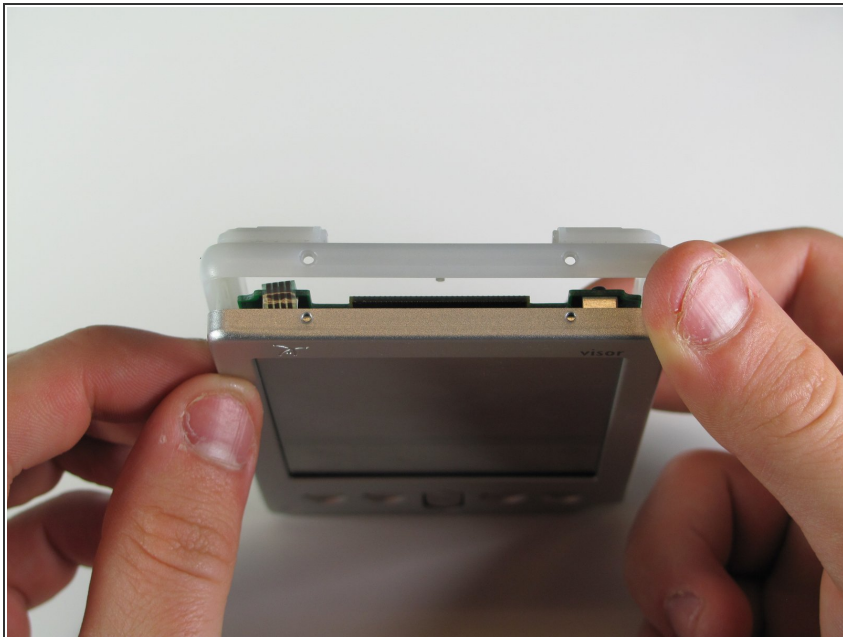


- Remove the white frame from the PDA.
- ⚠ The frame may get stuck on the corners so be very gentle when working the corners off.

Step 7 — Button Board

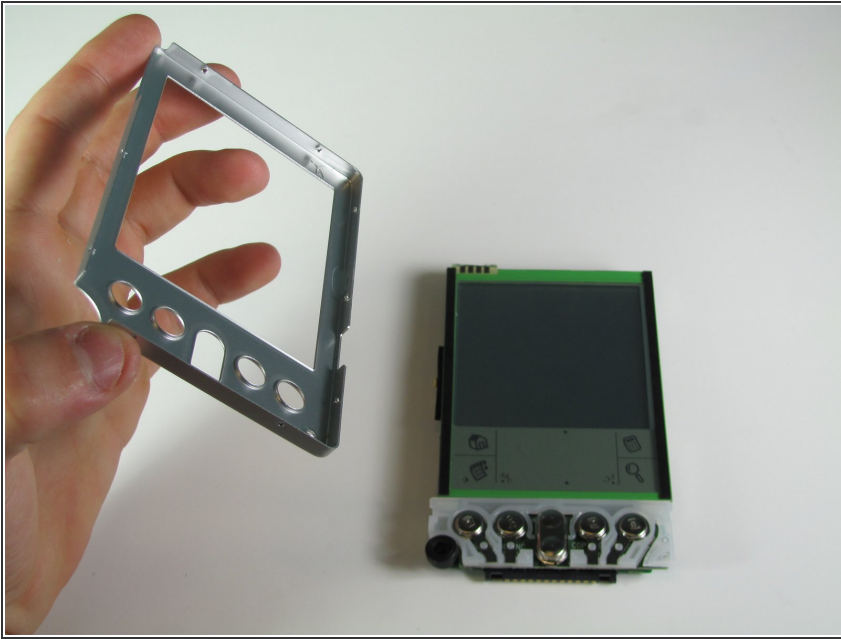

- Pull off front cover gently.

Step 8

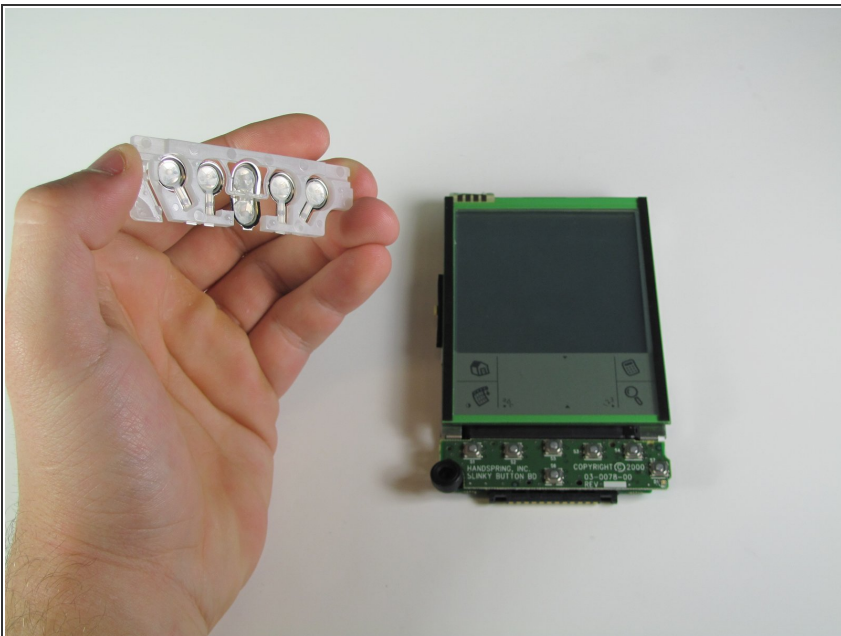

- Remove buttons by hand, they should come off easily.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-24 02:18:26 AM.