



# Handspring Visor Edge Screen Replacement

This guide will walk you through replacing a cracked screen on your Handspring Visor Edge PDA.

Written By: Christian Valoria



---

## INTRODUCTION


We will gain access to the screen, enabling us to replace it with a new screen.

---


### TOOLS:

- [Tweezers](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
-


## Step 1 — Flip Cover

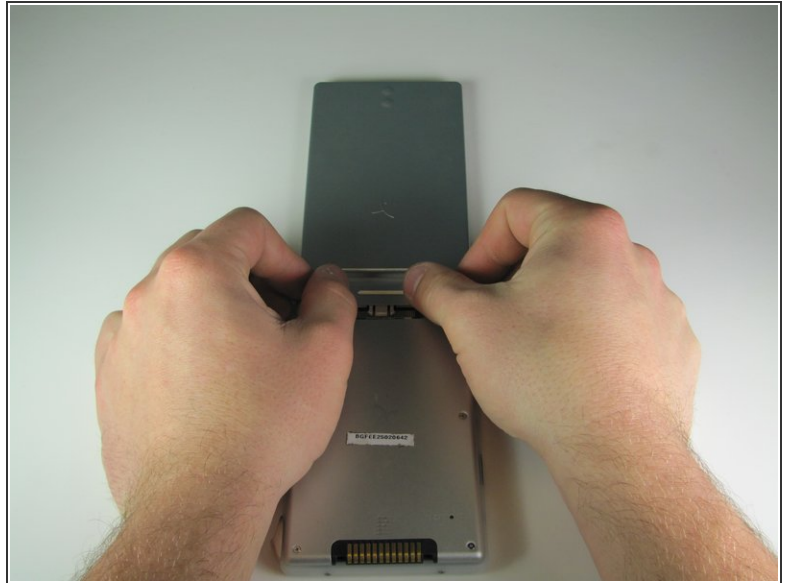

- Place Visor Edge face down.
- Notice the tab connecting the flip cover to the back of the PDA.
- Gently push tab forward.

 Do not pull on the flip cover to try and remove it from the PDA.

## Step 2 — Back Panel

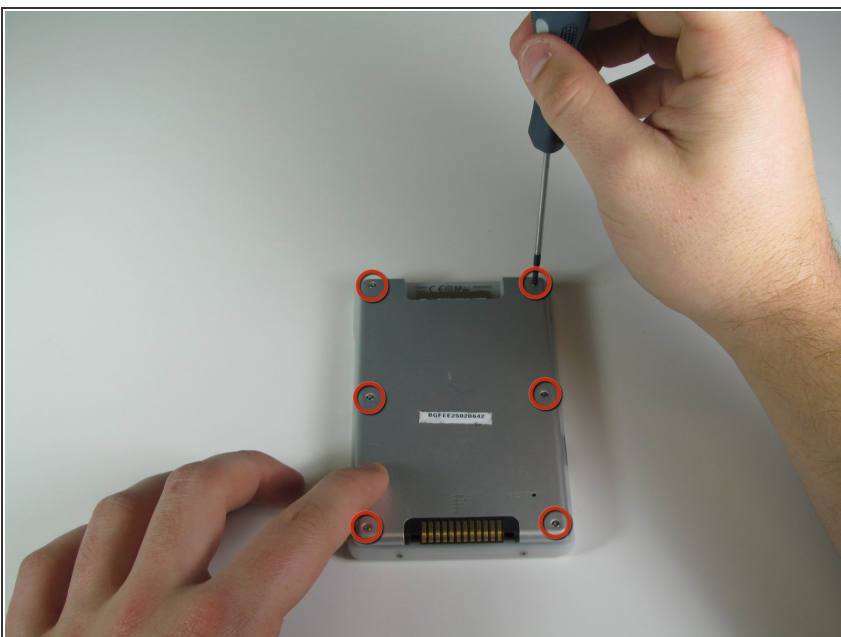

- Remove the six 4.1 mm Phillips screws from the back plate using the #00 Phillips Screwdriver.

### Step 3




- Remove the black plate from the PDA.

### Step 4




- Remove four 2.6 mm Philips screws that are on the sides of the frame.
- Remove the remaining 3.9 mm Philips screw holding together the stylus holster and the frame.

## Step 5

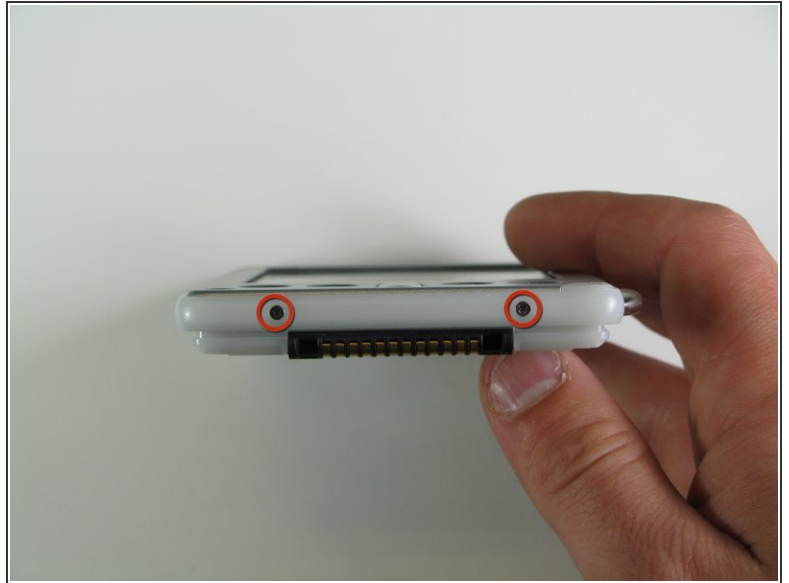


- Remove the four 2.6 mm Philips screws on the top and bottom of the frame.

## Step 6

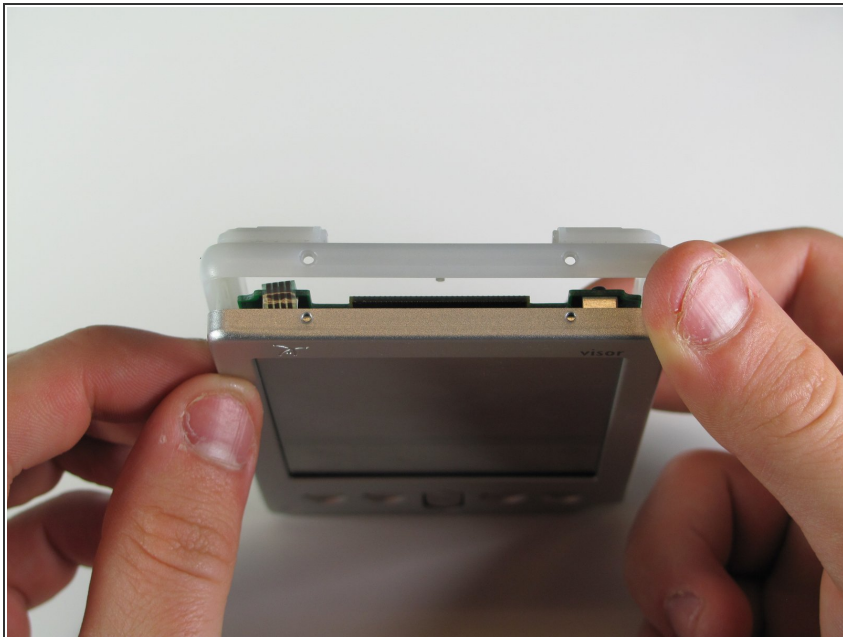


- Remove the white frame from the PDA.
- ⚠ The frame may get stuck on the corners so be very gentle when working the corners off.

## Step 7 — Screen

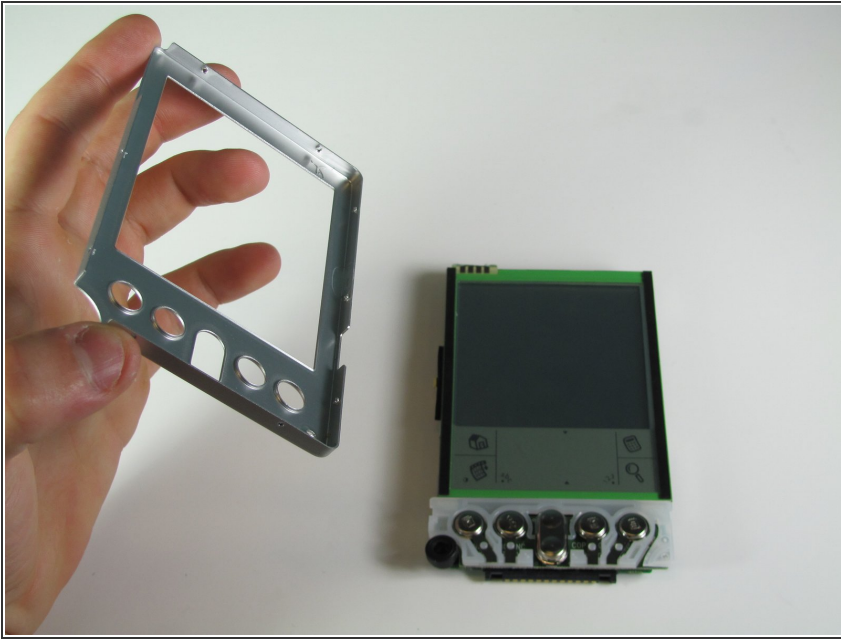


- Pull front cover off gently.

## Step 8

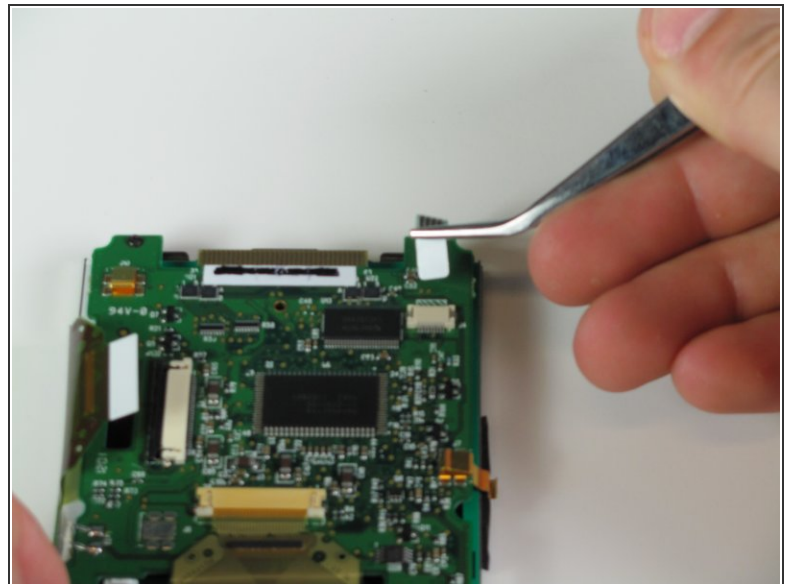

- With the device flipped over, use the tweezers to remove the ribbon cable attaching the screen to the circuit board.

## Step 9

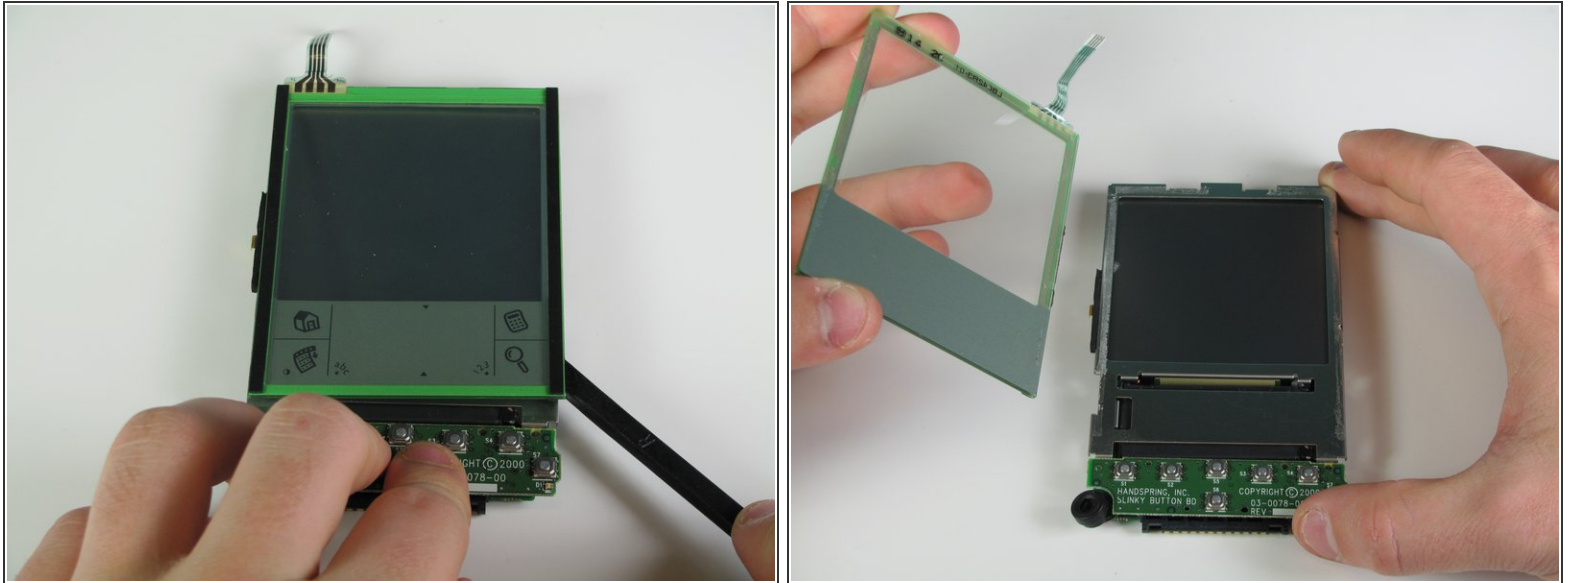

- Wedge the spudger in between the glass and the metal frame.
- Slide the spudger down the length of the screen to detach from the frame.
- With your hands, pry the screen up from the detached side, and the screen will pop off.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-16 09:25:43 AM.