



# Handspring Visor Edge Screen Replacement

This guide will walk you through replacing a cracked screen on your Handspring Visor Edge PDA.

Written By: Christian Valoria



---

## INTRODUCTION


We will gain access to the screen, enabling us to replace it with a new screen.

---


### TOOLS:

- [Tweezers](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
-


## Step 1 — Flip Cover

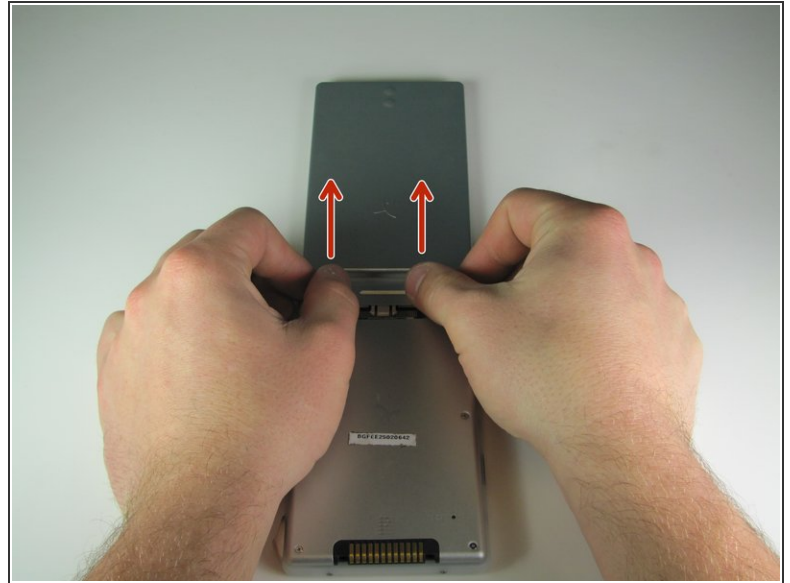

- Place Visor Edge face down.
- Notice the tab connecting the flip cover to the back of the PDA.
- Gently push tab forward.

 Do not pull on the flip cover in an attempt to remove it from the PDA.

## Step 2 — Back Panel

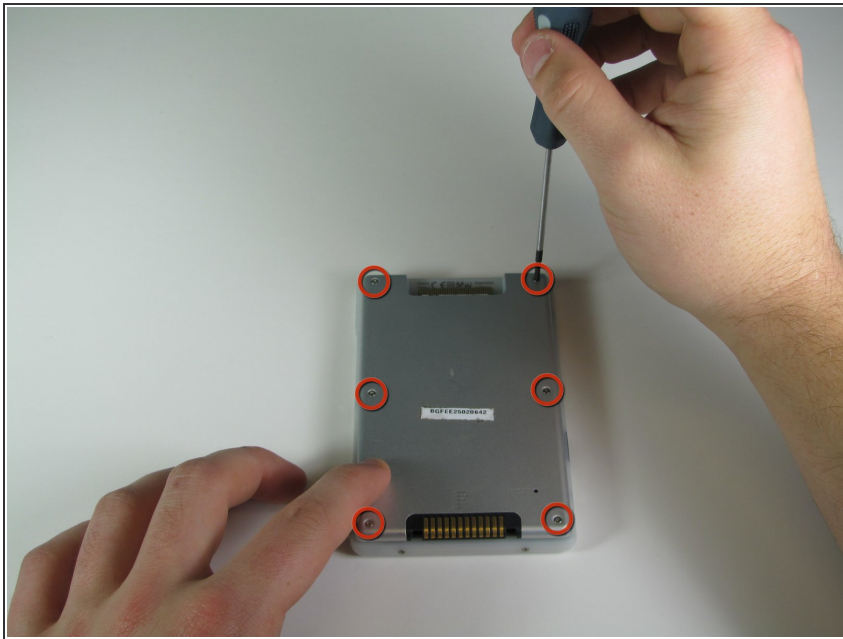

- Remove the six 4.1 mm Phillips screws from the back plate using the #00 Phillips Screwdriver.

## Step 3




- Remove the black plate from the PDA.

## Step 4




- Remove four 2.6 mm Philips screws that are on the sides of the frame.
- Remove the remaining 3.9 mm Philips screw holding together the stylus holster and the frame.

## Step 5

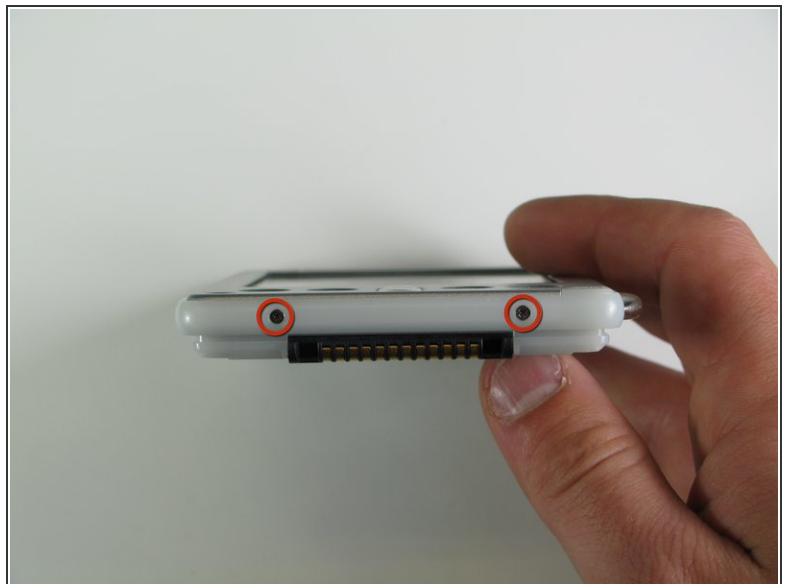


- Remove the four 2.6 mm Philips screws on the top and bottom of the frame.


## Step 6

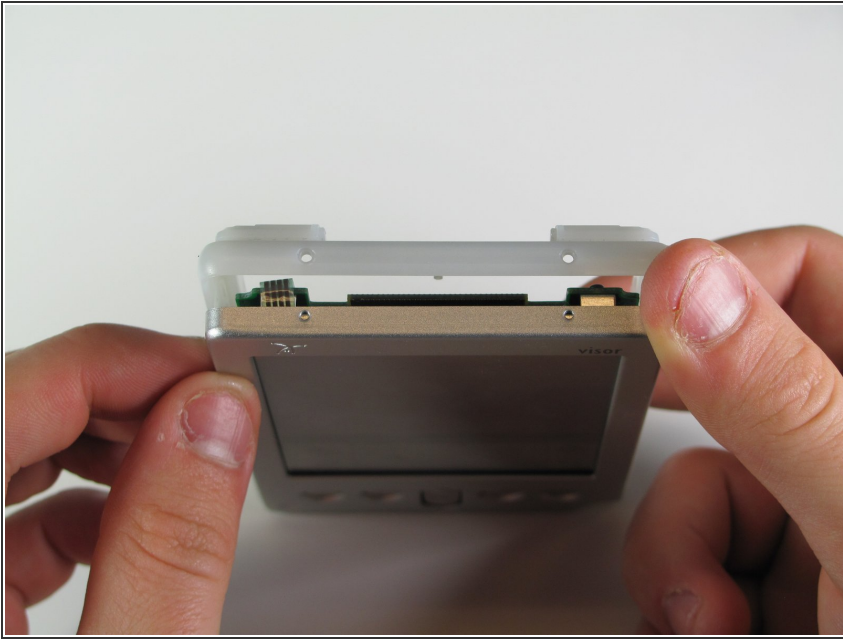

- Remove the white frame from the PDA.


 The frame may get stuck on the corners so be very gentle when working the corners off.

## Step 7 — Screen

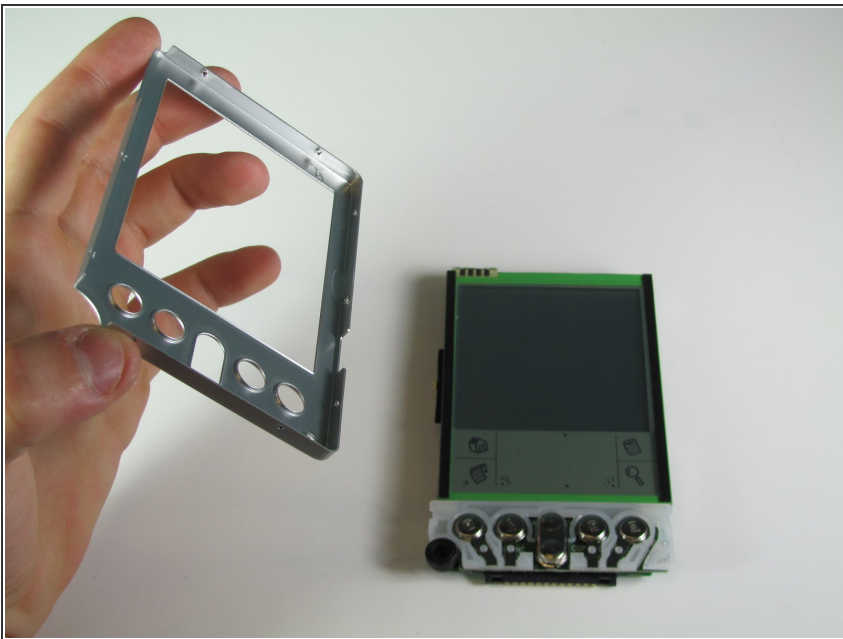


- Pull front cover off gently.

## Step 8

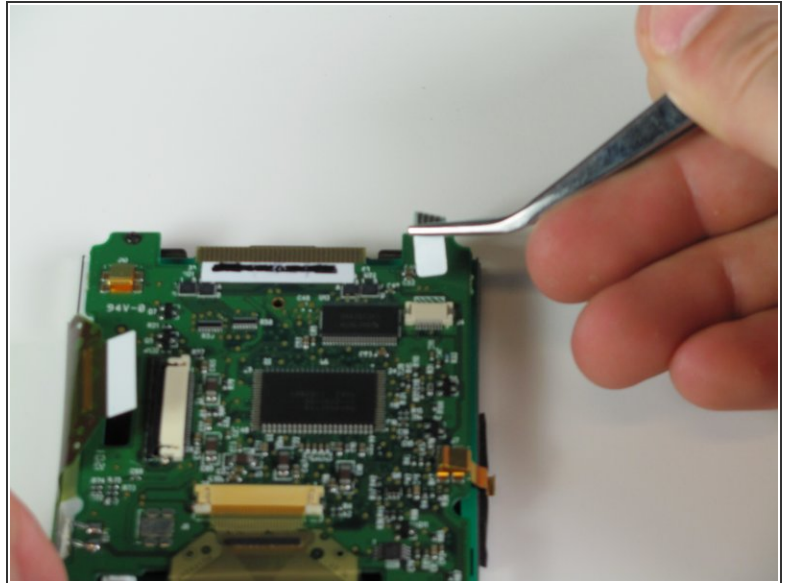

- With the device flipped over, use the tweezers to remove the ribbon cable attaching the screen to the circuit board.

## Step 9

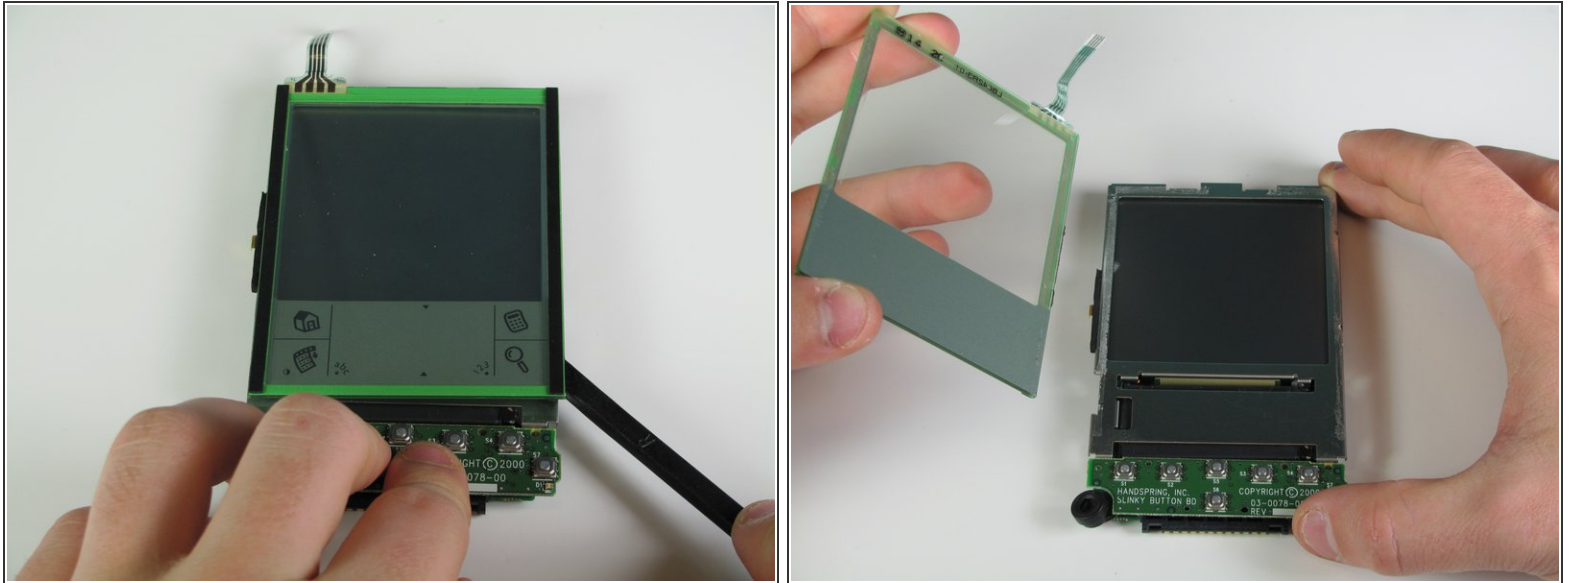

- Wedge the spudger in between the glass and the metal frame.
- Slide the spudger down the length of the screen to detach from the frame.
- With your hands, pry the screen up from the detached side, and the screen will pop off.

To reassemble your device, follow these instructions in reverse order.