




# Handspring Visor Edge Flip Cover Spring Replacement

This guide will walk you through replacing the spring inside the flip cover hinge.

Written By: Blaize Steiger

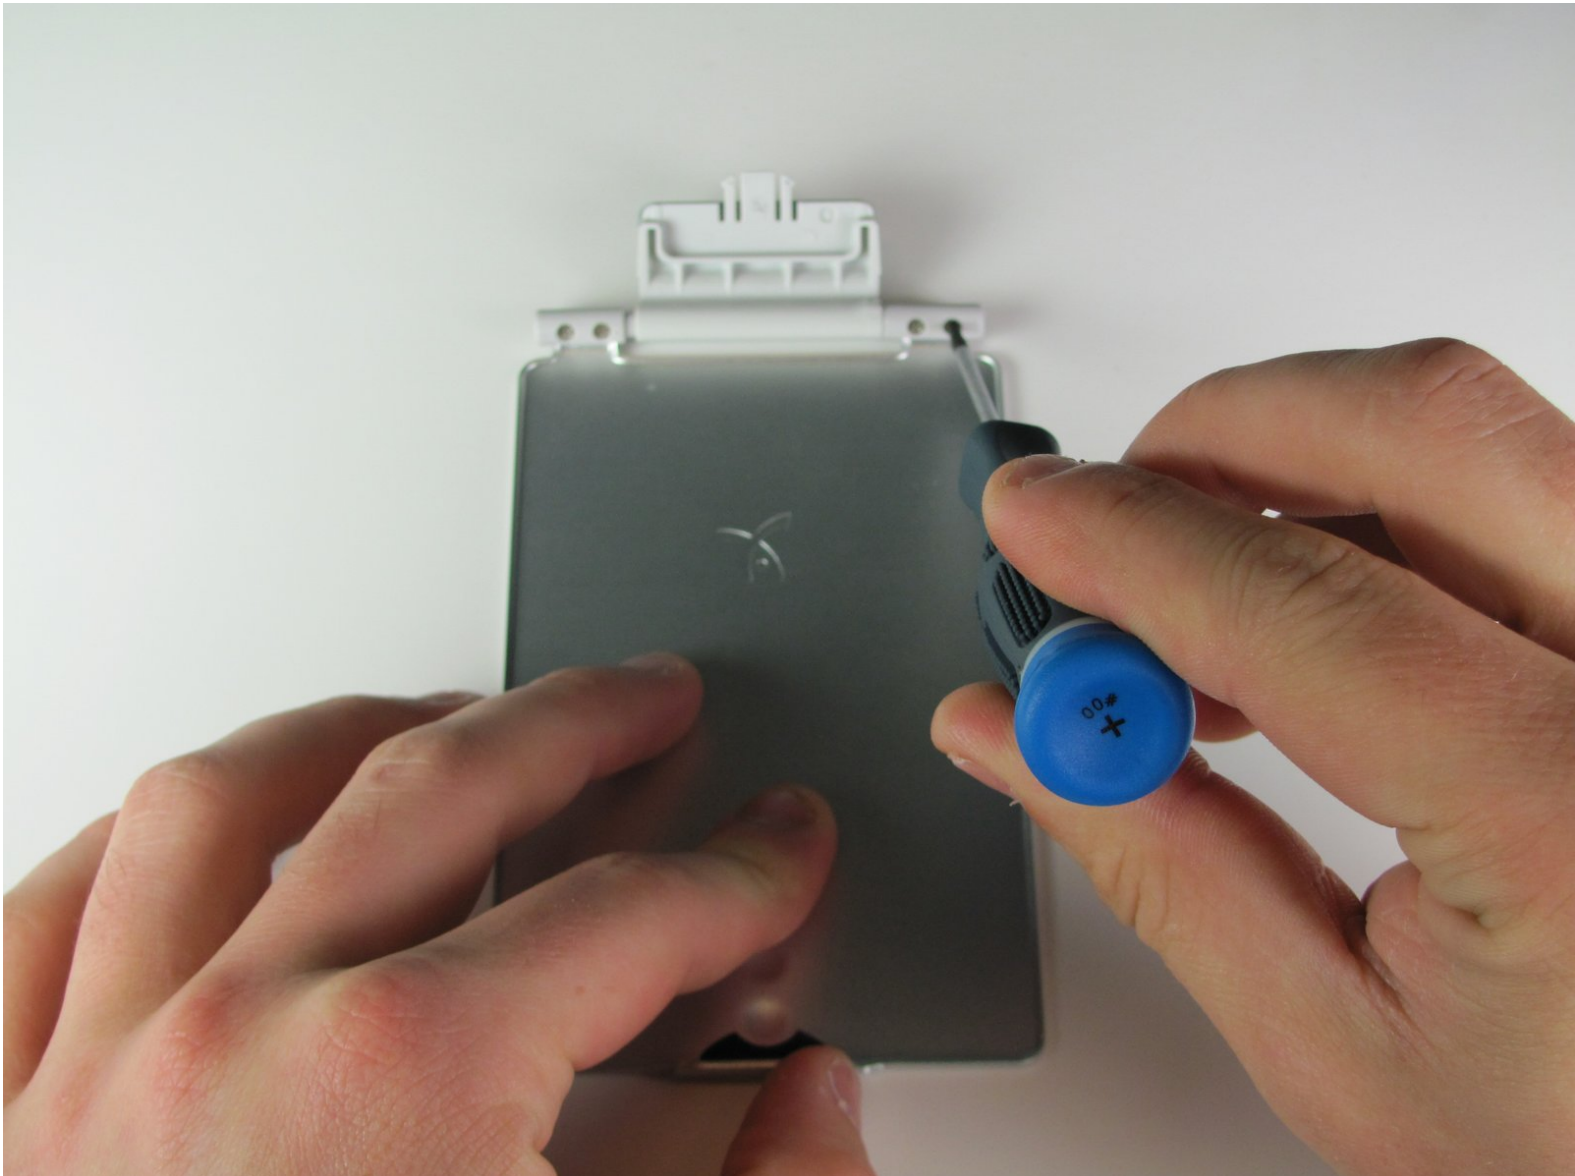


---


 **TOOLS:**

- Phillips #00 Screwdriver (1)
-


## Step 1 — Flip Cover

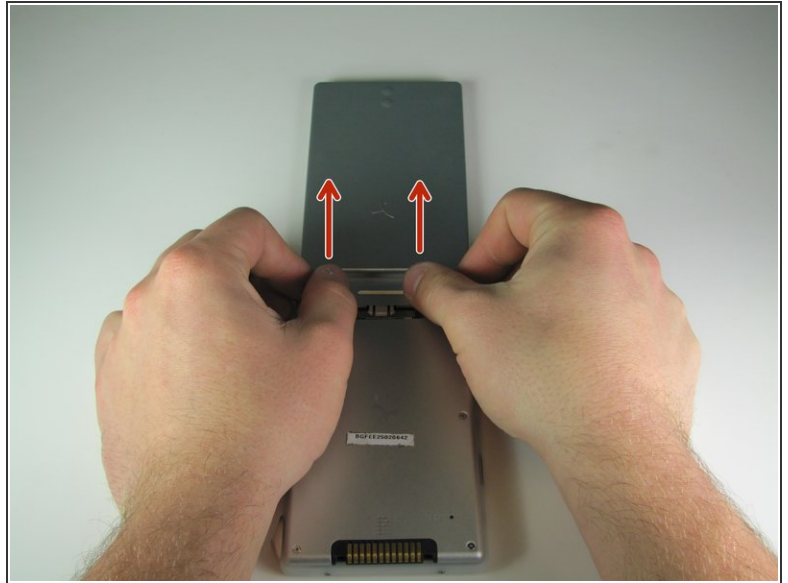

- Place Visor Edge face down.
- Notice the tab connecting the flip cover to the back of the PDA.
- Gently push tab forward.


 Do not pull on the flip cover in an attempt to remove it from the PDA.

## Step 2 — Flip Cover Spring

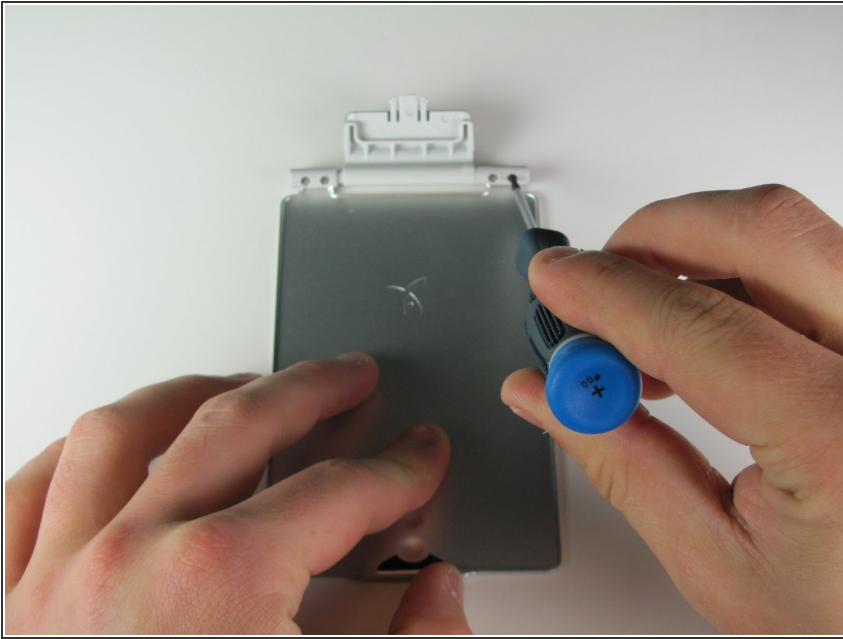

- Once flip cover is removed, turn over and remove the four 3.9 mm screws connecting the hinge.


## Step 3

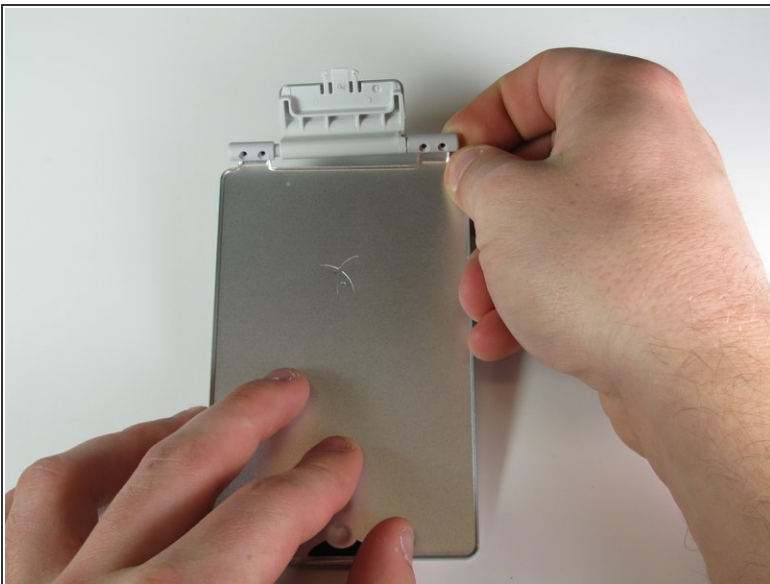

- Gently pull away the plastic hinge from the cover.

**⚠** Be careful to pull out evenly and not bend the plastic, as it can crack. The spring may also shoot out if it is not pulled out evenly.

## Step 4

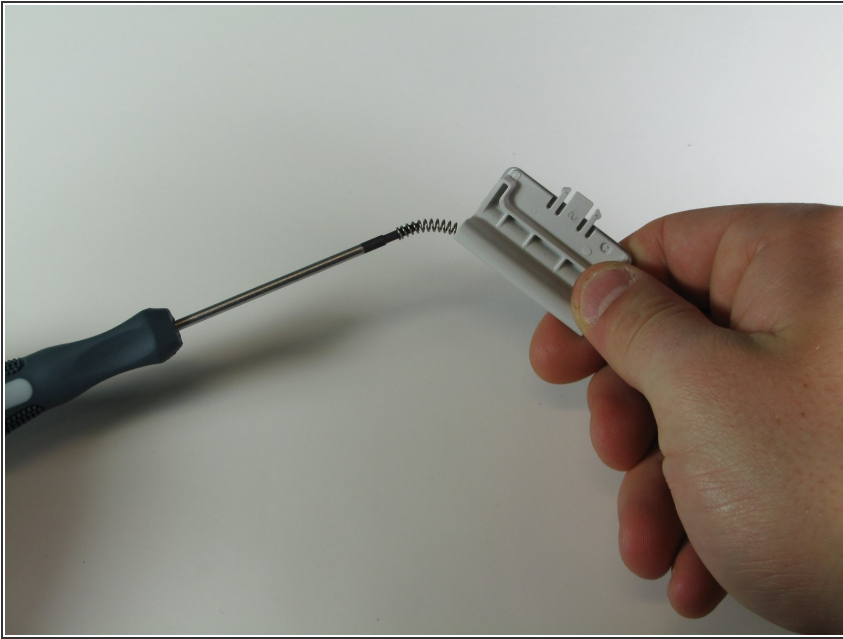

- Turn the hinge piece on its side or use a screwdriver to pull out the spring.
- Reinsert new spring.

To reassemble your device, follow these instructions in reverse order.