




Handspring Visor Edge Flip Cover Spring Replacement

This guide will walk you through replacing the spring inside the flip cover hinge.


Written By: Blaize Steiger

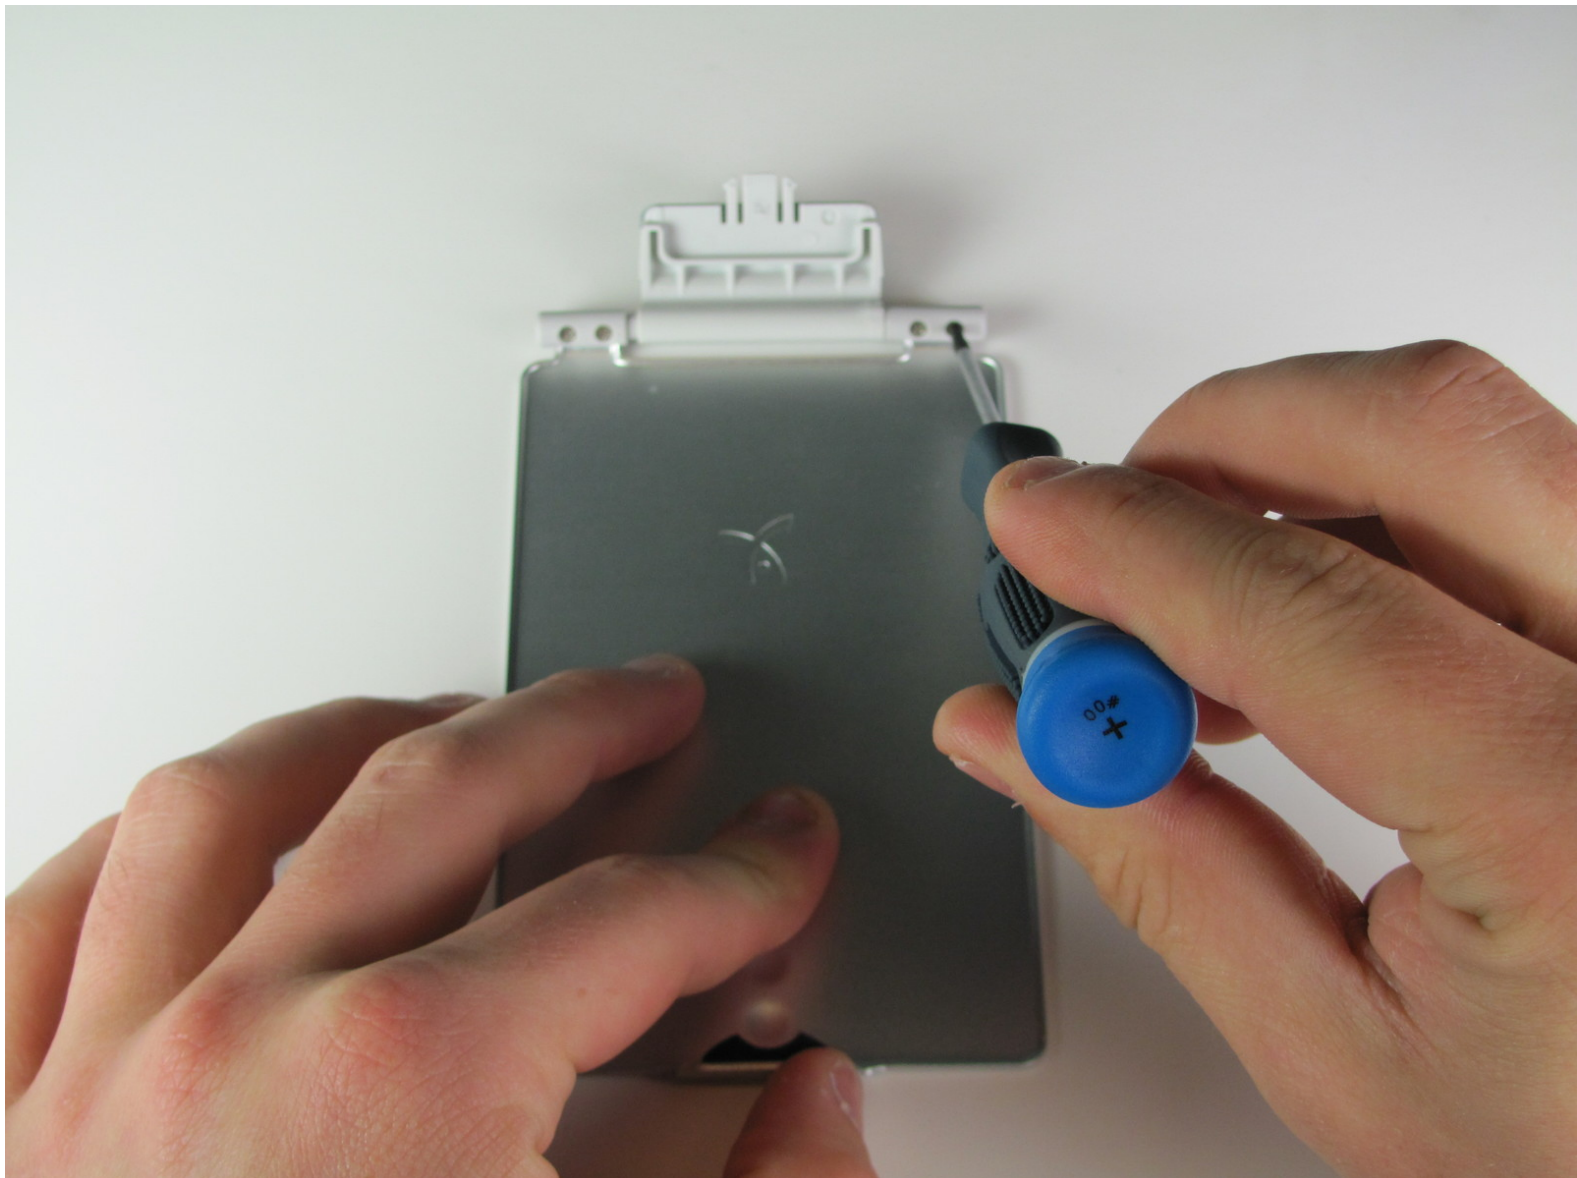


 **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)
-


Step 1 — Flip Cover

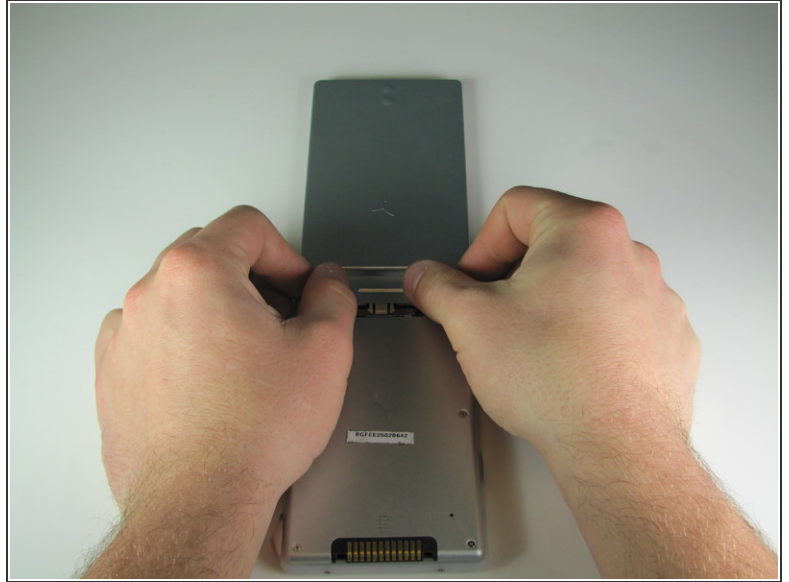

- Place Visor Edge face down.
- Notice the tab connecting the flip cover to the back of the PDA.
- Gently push tab forward.


 Do not pull on the flip cover to try and remove it from the PDA.

Step 2 — Flip Cover Spring

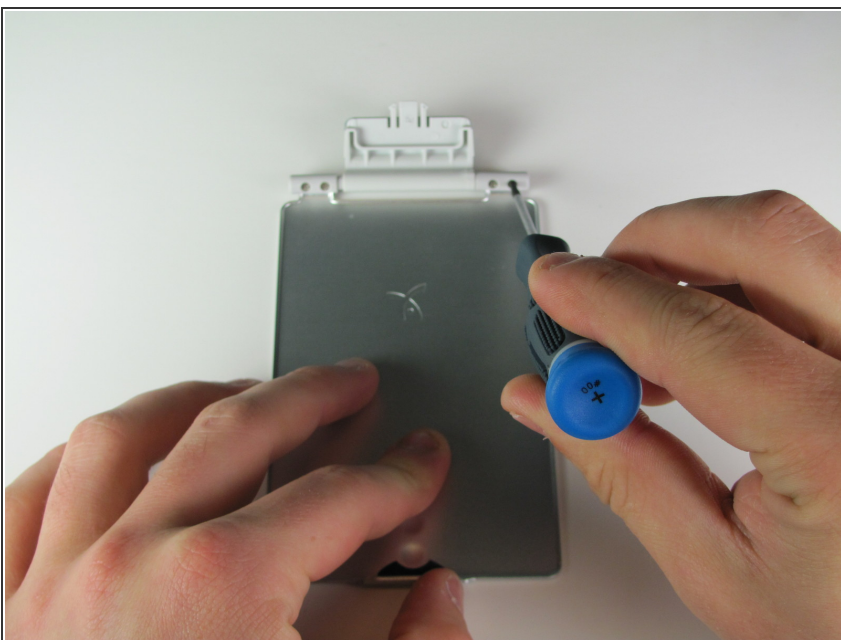


- Once flip cover is removed, turn over and remove the four 3.9 mm screws connecting the hinge.


Step 3

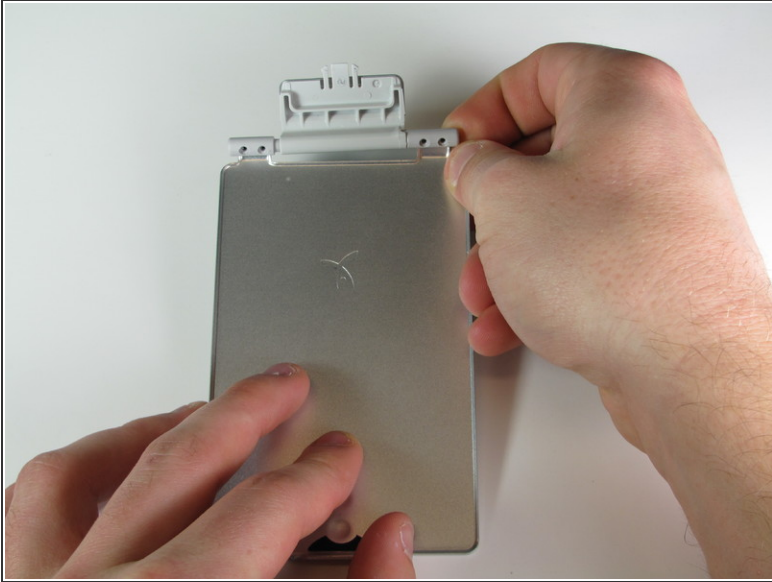

- Gently pull away the plastic hinge from the cover.

 Be careful to pull out evenly and not bend the plastic, as it can crack. The spring may also shoot out if it is not pulled out evenly.

Step 4

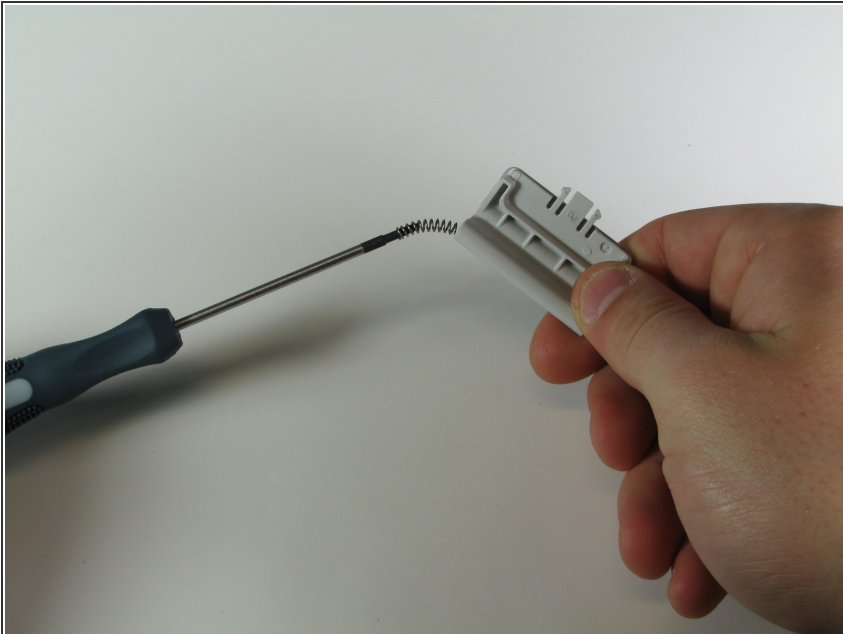

- Turn the hinge piece on its side or use a screwdriver to pull out the spring.
- Reinsert new spring.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 02:30:17 PM.