


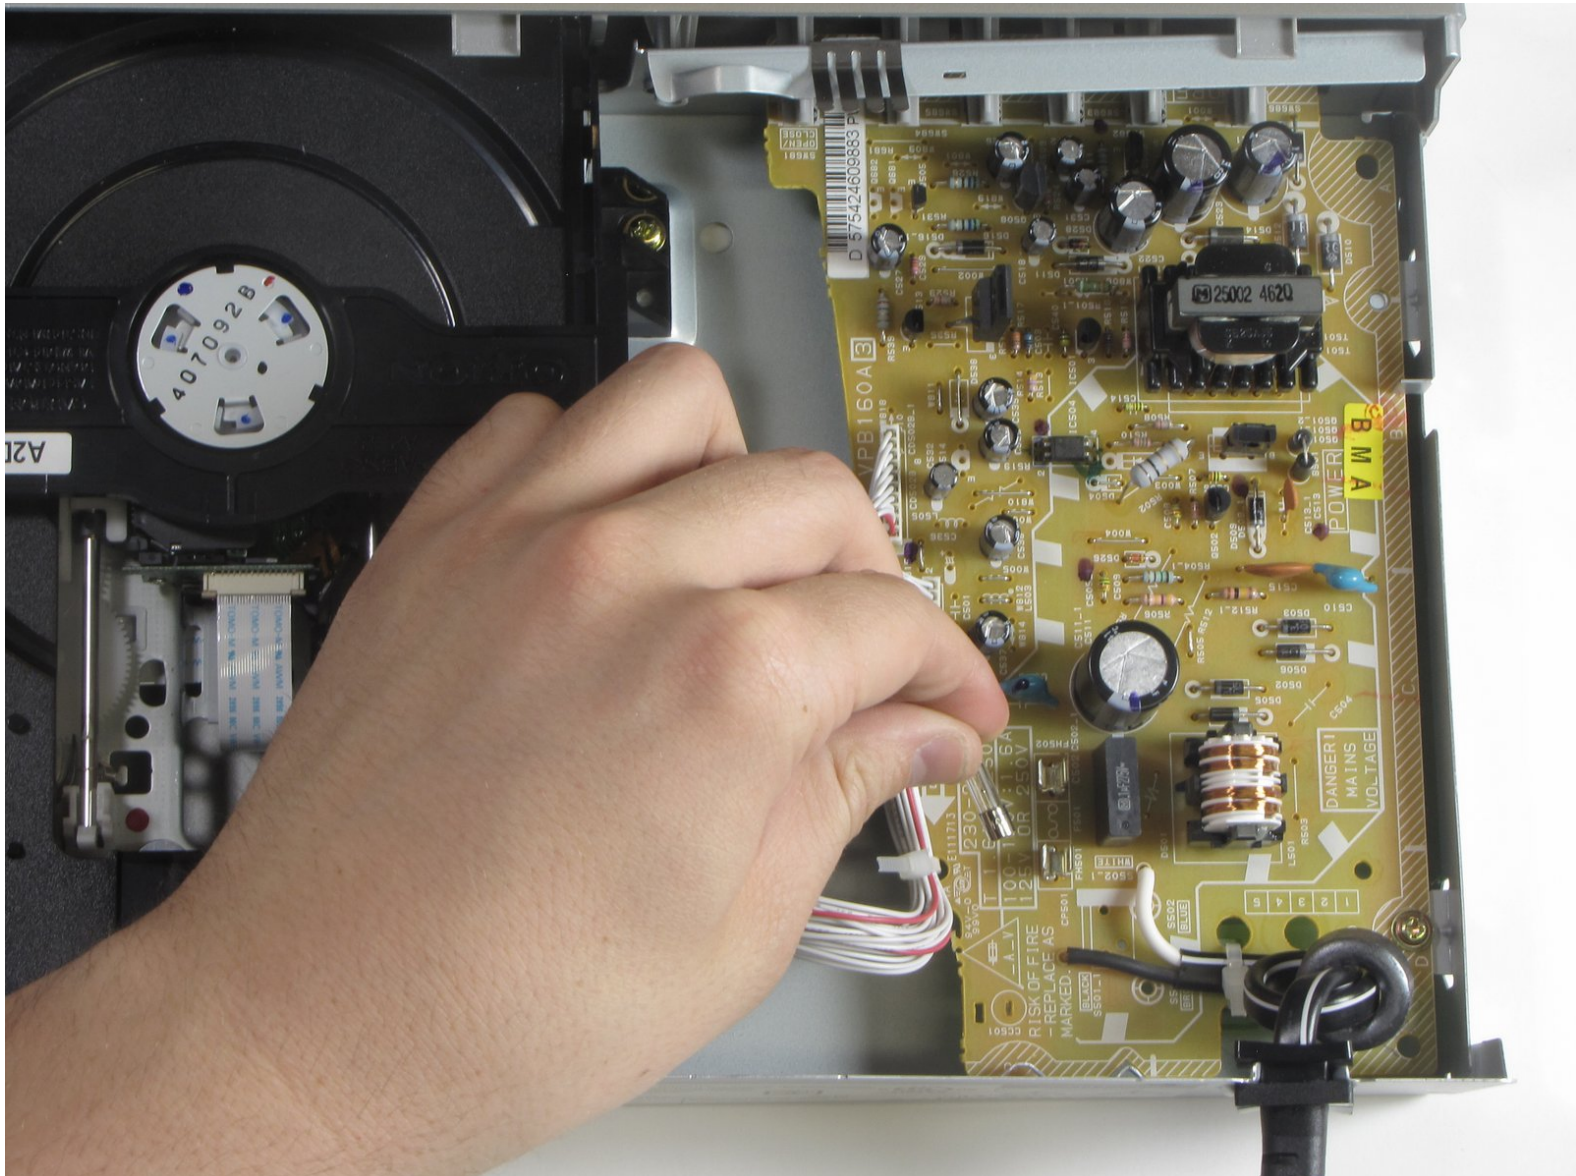

# Toshiba SD-K740 Motherboard Fuse Replacement

This is a guide to remove the fuse of the Toshiba SD-K740 DVD player.

Written By: John Lokker



---

## INTRODUCTION

This guide gives instructions on how to remove the fuse located on the yellow motherboard of the Toshiba SD-K740 DVD player.

---

### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Top Panel



**!** Make sure the DVD player is unplugged before beginning.

- Remove the three .303 inch screws from the back panel using a #0 Phillips head screwdriver.

## Step 2





- i** Turn the DVD player on its side.
  - Remove the .303 inch screw.
- i** Now flip the DVD player onto its other side.
  - Remove the .303 inch screw from this side.

### Step 3



- ⓘ Flip the DVD player over onto its front face.
- Remove the back panel by lifting up and pulling it towards yourself.

### Step 4 — Motherboard Fuse

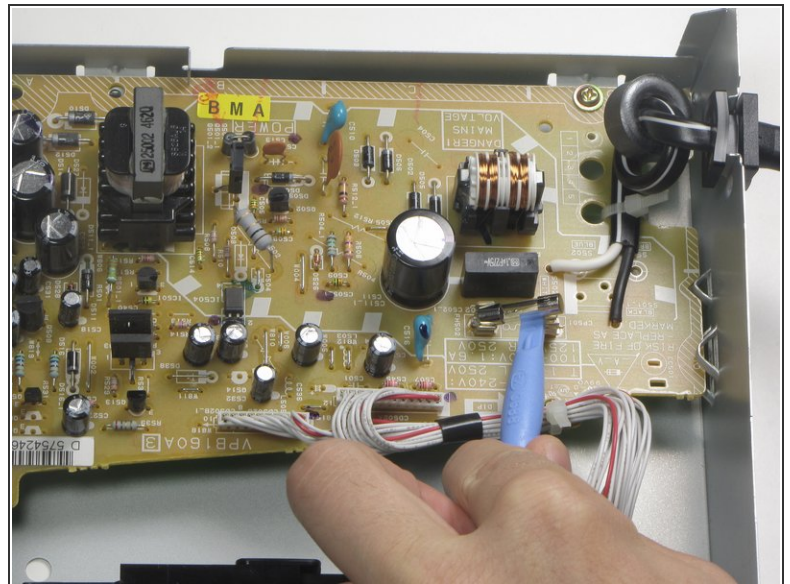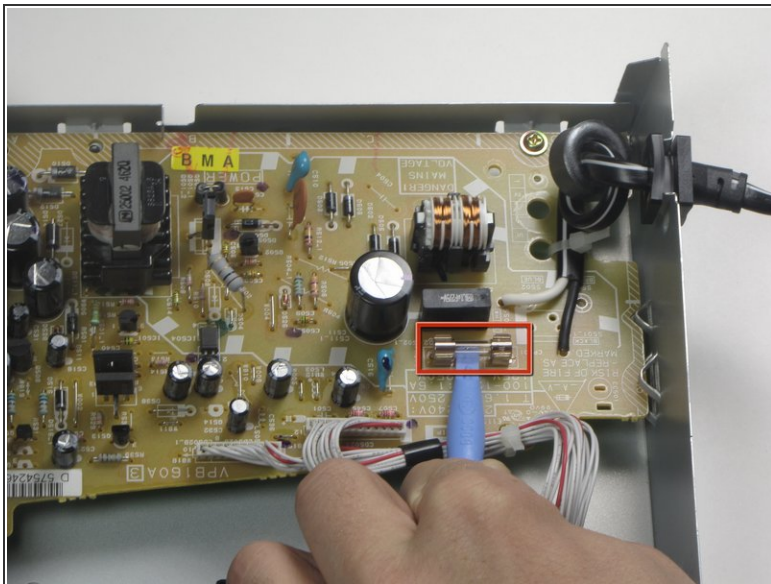

- Use the plastic opening tool to gently pop the fuse out of the restraining brackets.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-17 02:30:48 AM.

