



# HTC Desire 510 Logic Board Replacement

HTC Desire 510 Logic Board Replacement

Written By: ZFix



---

## INTRODUCTION

HTC Desire 510 - How to disassemble and remove the logic board.

[video: <https://www.youtube.com/watch?v=xP50fhhL-B8>]

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [T5 Torx Screwdriver](#) (1)
  - [Spudger](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — BATTERY REMOVAL




- Switch off the phone, remove the battery and any installed SIM and memory cards.
- Remove 7x Torx T5 screws.

## Step 2 — REAR BEZEL REMOVAL



- Use a plastic tool to remove the rear bezel.
- The loudspeaker is on the inner side of the rear bezel.

### Step 3 — FLEX CABLES DISCONNECTING

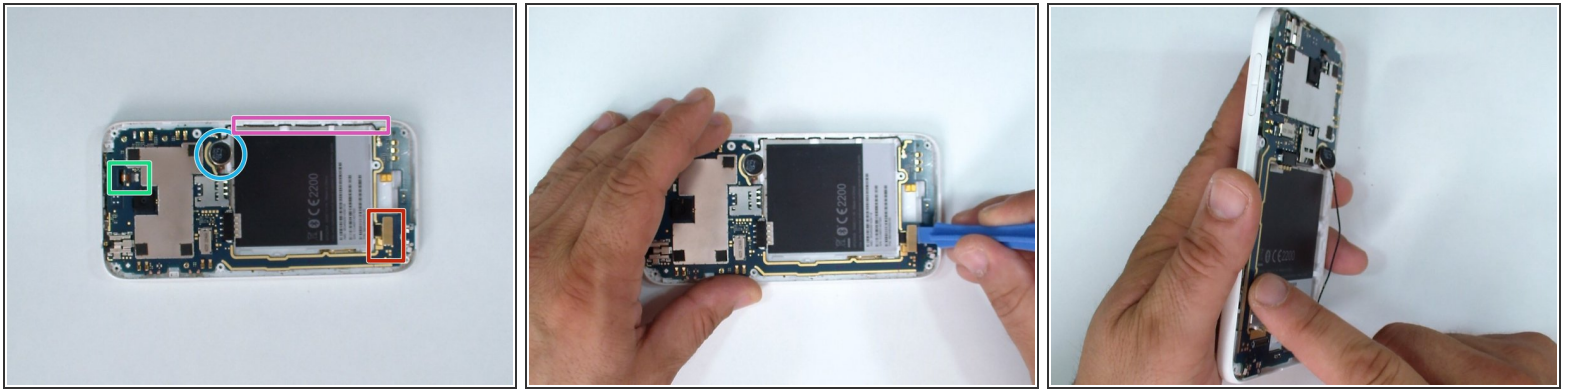

- Disconnect the touch screen flex cable.
  - Disconnect the light sensor flex cable.
  - Unstick the vibra-motor from the middle frame.
  - Remove the coaxial antenna cable from the middle frame.
- ⚠ The LCD display flex cable is connected to the bottom side of the board.

### Step 4 — LOGIC BOARD REMOVAL



- At the upper left side, the board is held by a plastic locking clip. Use a plastic tool and start the separating from here.
- Gently disconnect the LCD display flex cable.
- Now remove the logic board.

To reassemble your device, follow these instructions in reverse order.