




# Asus X54C HDD, RAM Memory Replacement

Asus X54C HDD, RAM Memory Replacement

Written By: ZFix

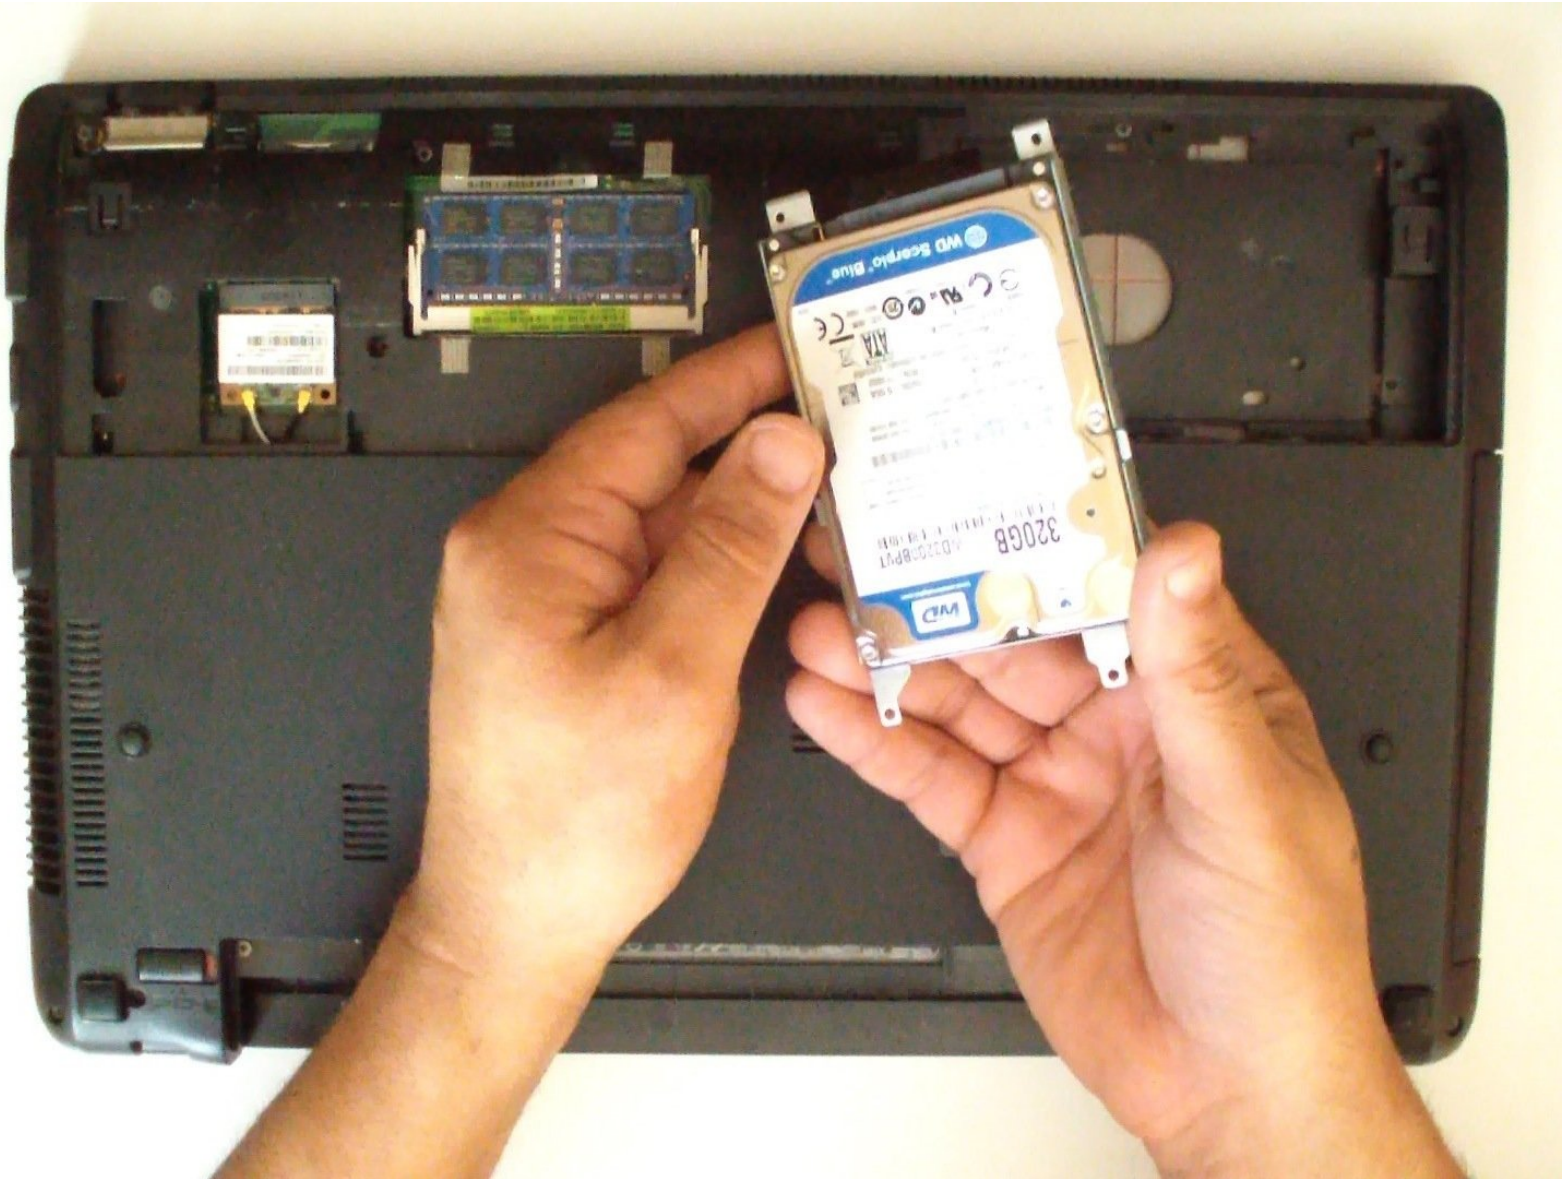

---

## INTRODUCTION

ASUS X54C, X54H, X54L, X54HR - how to replace or upgrade HDD, RAM memory, Wi-Fi module.

[video: <https://www.youtube.com/watch?v=d3qs94osEP0>]

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Disconnect the charger and switch off the laptop.
- Two keys keep locked battery.


## Step 2 — HDD COVER



- Remove the two Phillips screws.
- Remove the HDD cover.




### Step 3

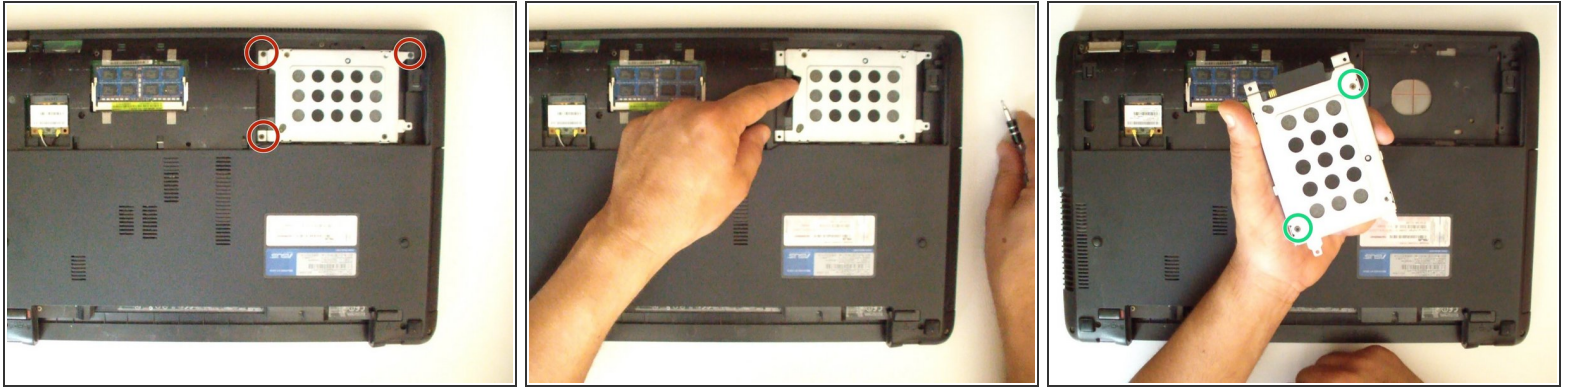

- The HDD caddy is secured by three Phillips screws. Remove them.
- Use the black tape near to the SATA connector to slide and remove the HDD.
- To remove the hard disk from the HDD caddy, unscrew the 2x Phillips screw.

### Step 4

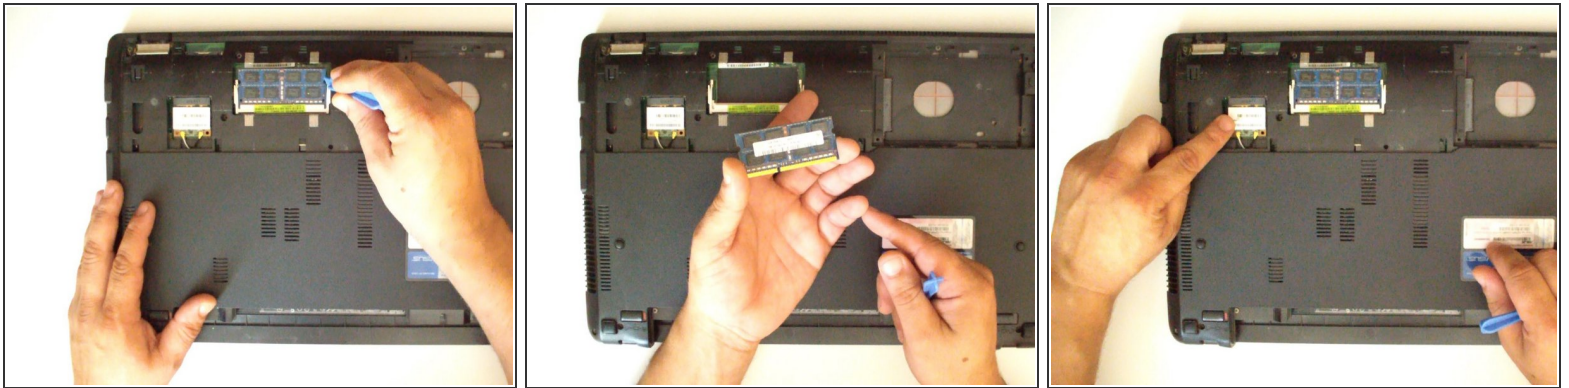

- There is one expansion slot for a memory module:
- SO DIMM 204-pin, DDR3 SDRAM, 1333 MHz
- Under the HDD cover is also the Wi-Fi card.

To reassemble your device, follow these instructions in reverse order.