



Canon PowerShot A200 Batteries Replacement

How to replace Canon PowerShot A200 batteries.

Written By: Ellen Chambers



INTRODUCTION


Take out old, dead batteries. Then replace them with new ones.

Step 1 — Outer Battery Cover



- Place the camera so the battery cover is facing up, as shown in the picture.
- Gently push on the outer battery cover until you hear a click, and then release.

Step 2 — Inner Battery Cover

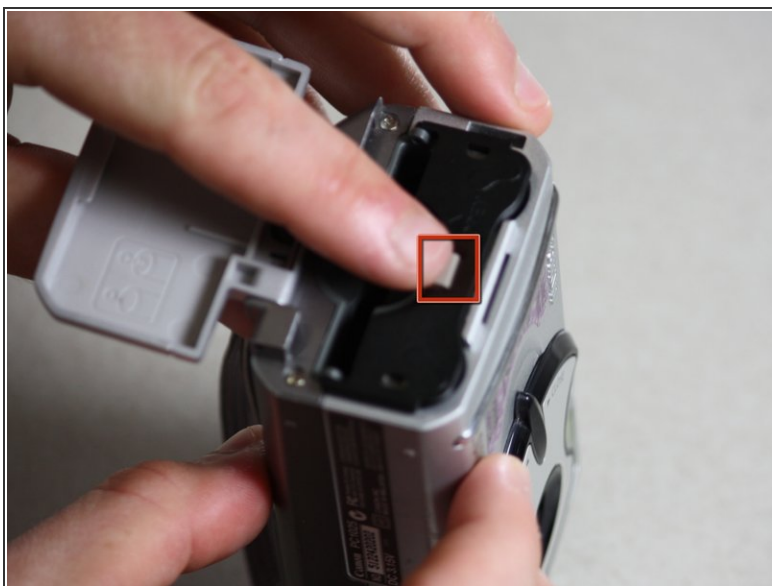

- To open the inner battery cover, push down on the grey latch until you hear a click, and then release.
- Remove the dead batteries from the camera.

Step 3 — Replacing the Batteries



- After removing the batteries, insert the new batteries in the proper direction.
- Now push the black, inner cover down until you hear a click to secure the batteries in place.
- Push down and forward on the outer cover to secure the latch. Your camera will now be fully charged.

Congratulations, you're done.

This document was last generated on 2019-07-21 04:28:34 PM.