




Disassembling Casio Exilim EX-Z850 Outer Casing

How to remove the outer casing for the Casio Exilim Z850.


Written By: Logan

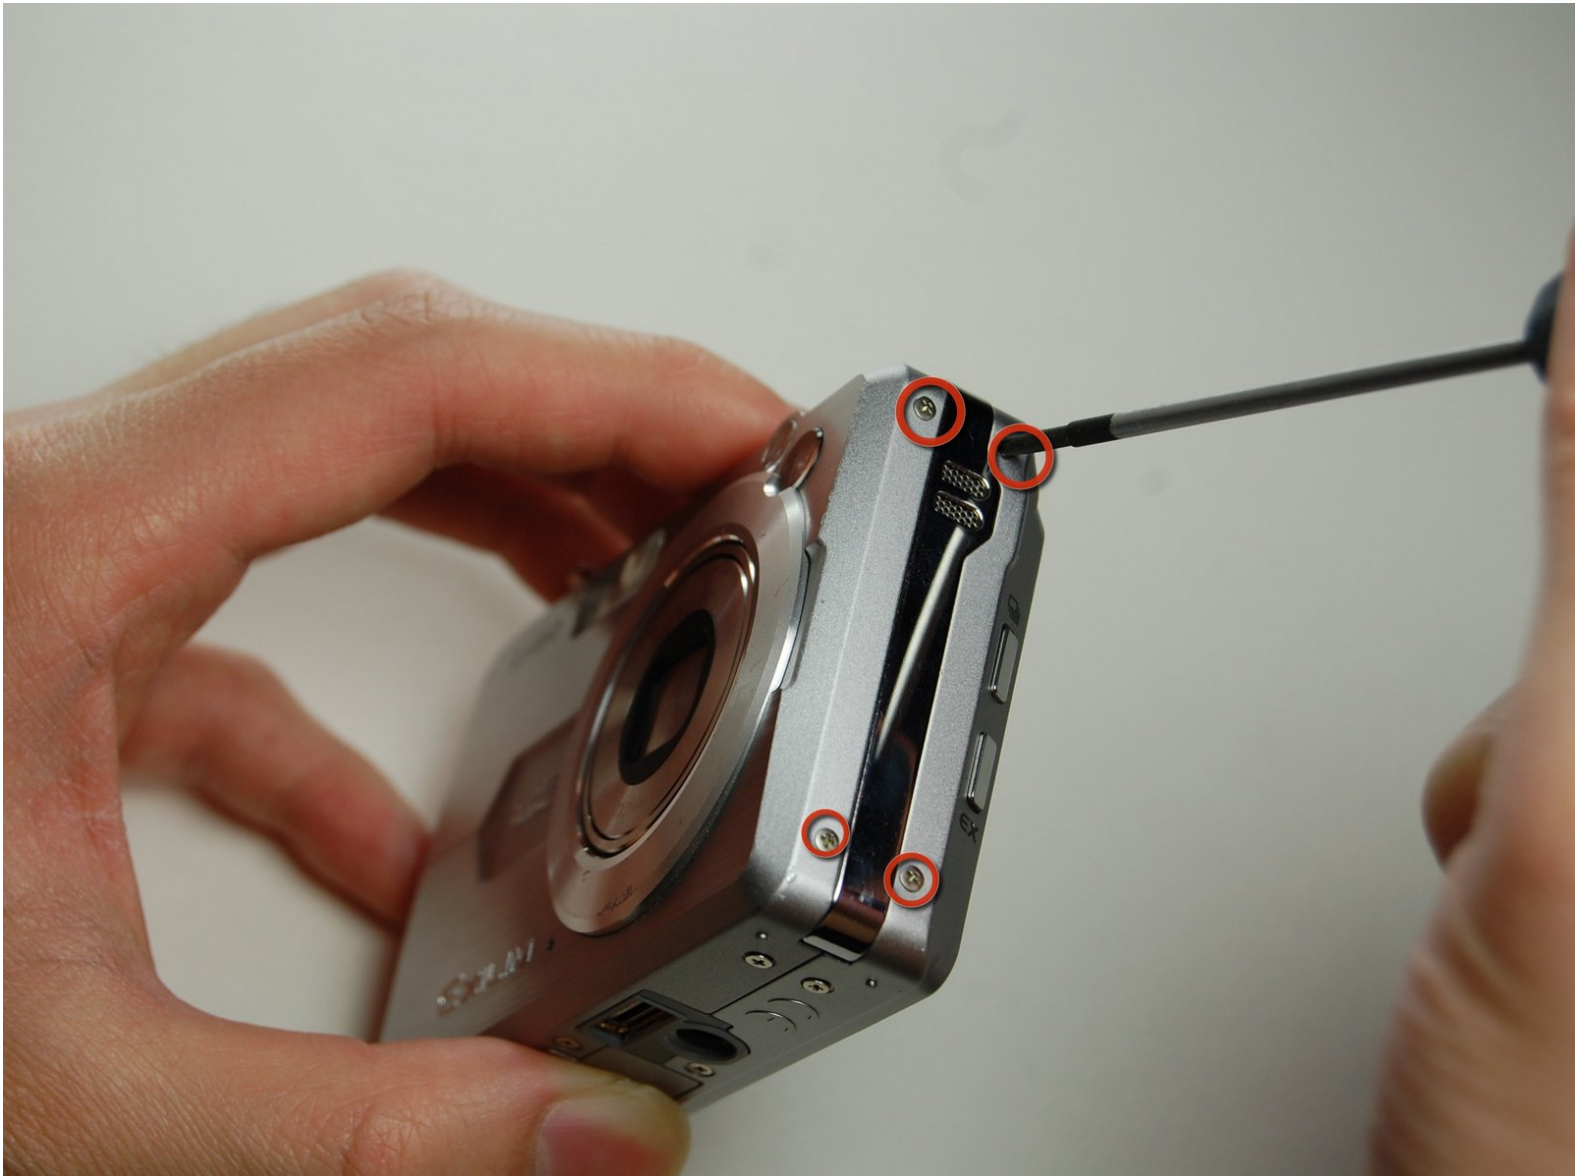

 **TOOLS:**


- Phillips #00 Screwdriver (1)
 - Tweezers (1)
-

Step 1 — Outer Casing

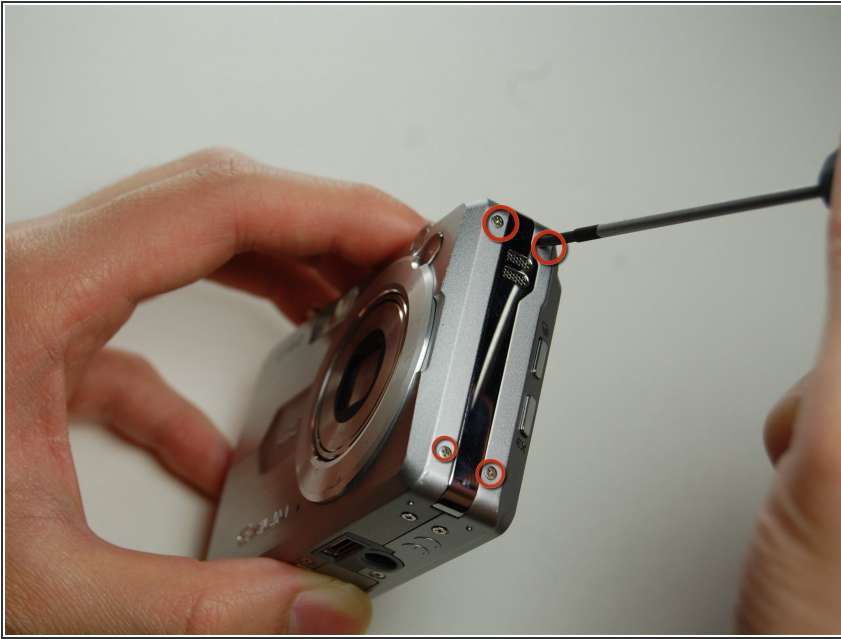

- Remove all four screws on the side of camera with speaker.

Step 2

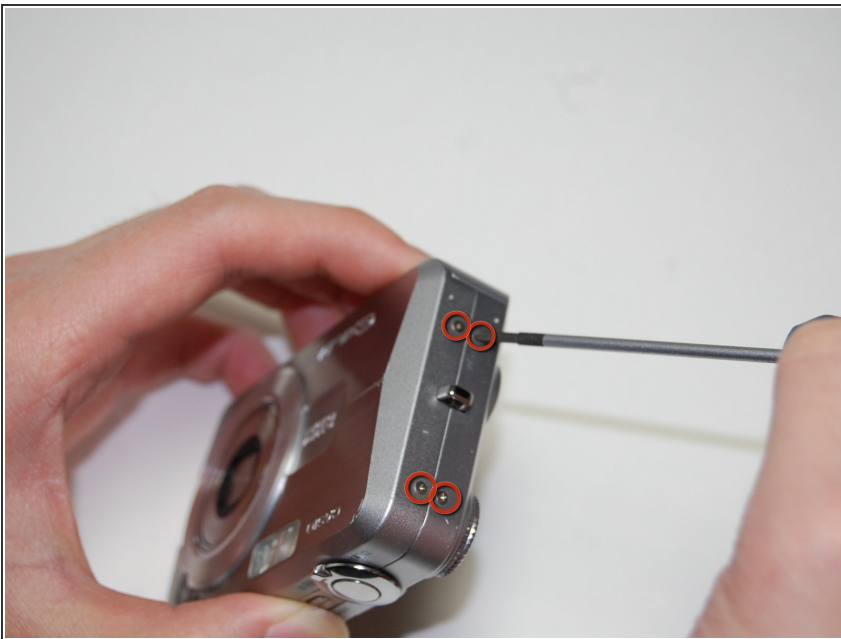

- Remove all four screws from side of camera with wristband attachment.



Step 3



- Remove all four screws on bottom of camera.



⚠ Note: Bottom screws are longer than the top ones, so label accordingly for easy reassembly.

Step 4

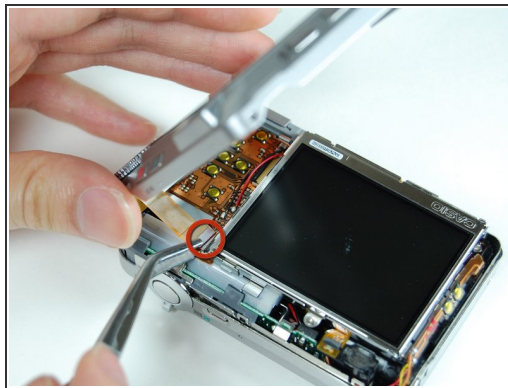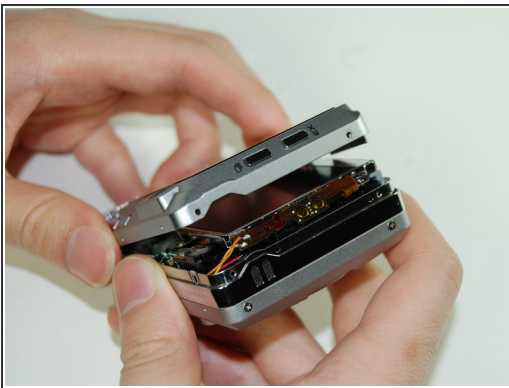

- Once all screws have been removed, gently pry open bottom casing.
- With tweezers, carefully remove ribbon from LCD screen.
- Set bottom casing aside.

Step 5

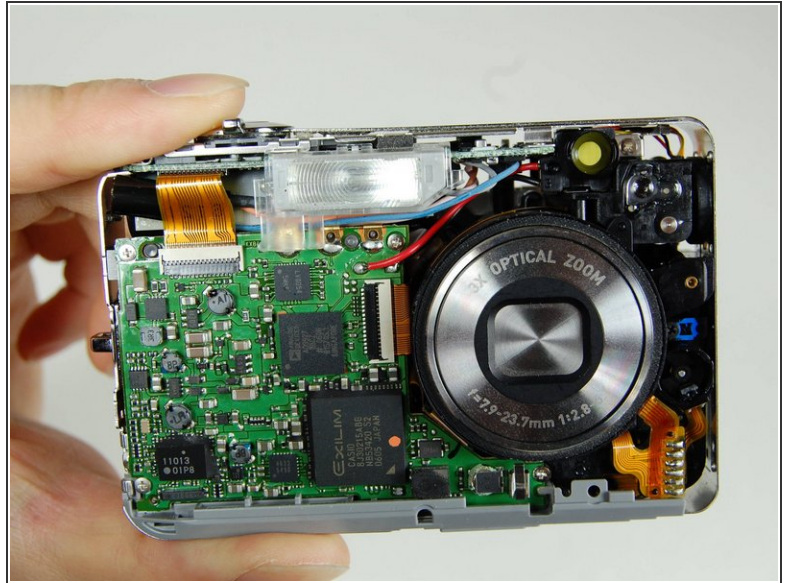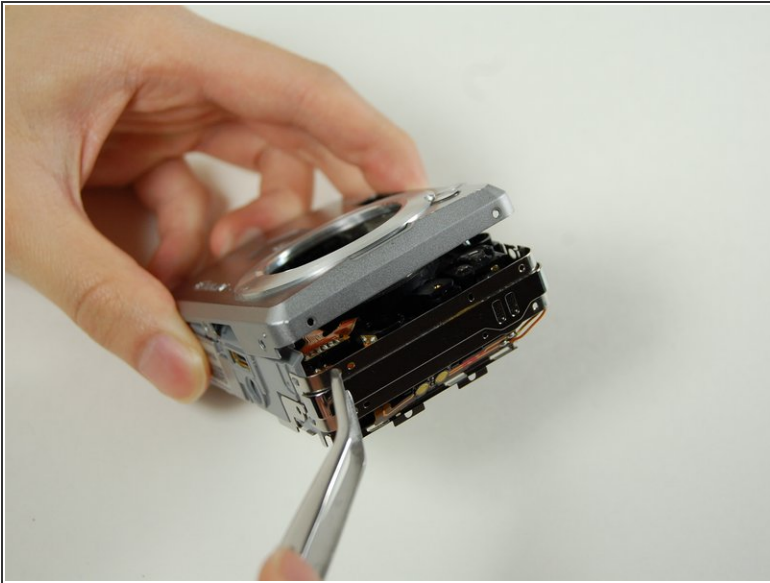

- Pry apart the top casing using tweezers.
- Set the top casing aside.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-21 11:55:49 PM.