



# Disassembling Canon PowerShot SD1100 IS Front and Rear Cover

This guide will show how to remove the front and rear cover of the Canon PowerShot SD1100 IS.

Written By: Tyler Grossheim



---

## INTRODUCTION

Use this guide to remove the front and rear cover of the Canon PowerShot SD1100 IS.

---

### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Front and Rear Cover




- Remove wrist strap and battery.

## Step 2

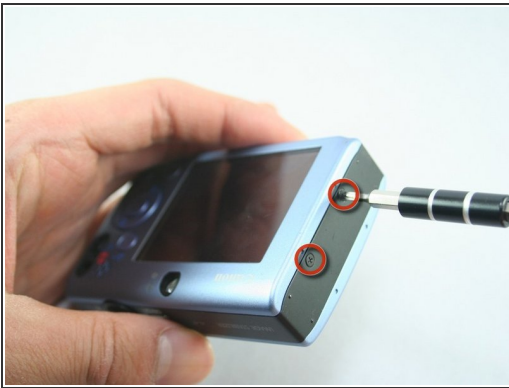

- Remove 2 screws from each side of the camera (4 total, 0.102 in).
  - Remove 2 screws from the bottom on the camera (0.138 in).
- ⚠ Do not mix the 4 side screws with the 2 bottoms ones; they are different sizes.

### Step 3

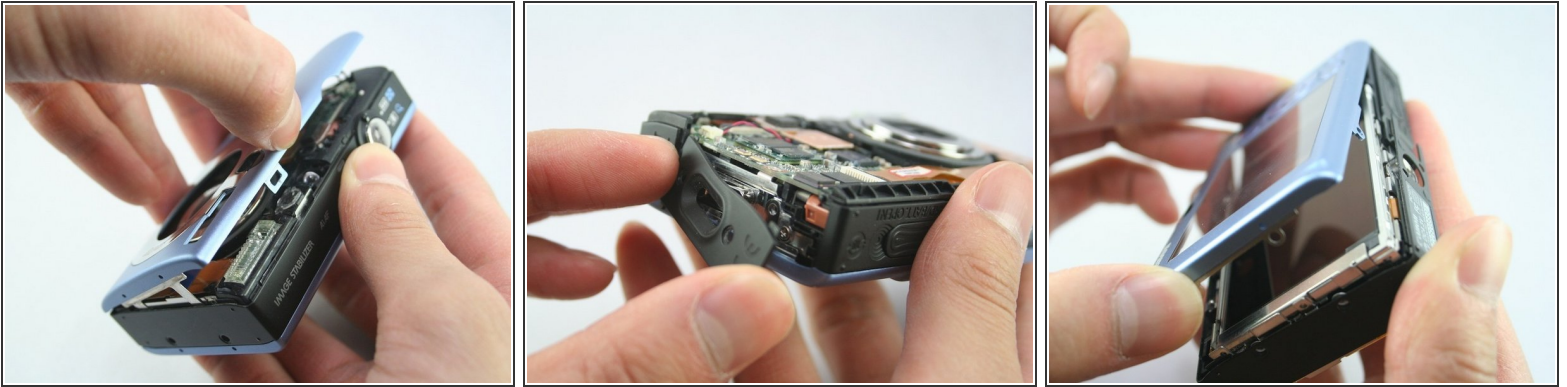

- Gently pull off the front cover.
- ⓘ The plate on the side should come off.
- Gently pull off the back cover.

### Step 4



- The cases should now be removed.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-16 09:21:37 PM.