




Canon Powershot SD790 IS Mini USB Port Replacement

Replacing the mini USB Port on your Powershot.

Written By: Stanley

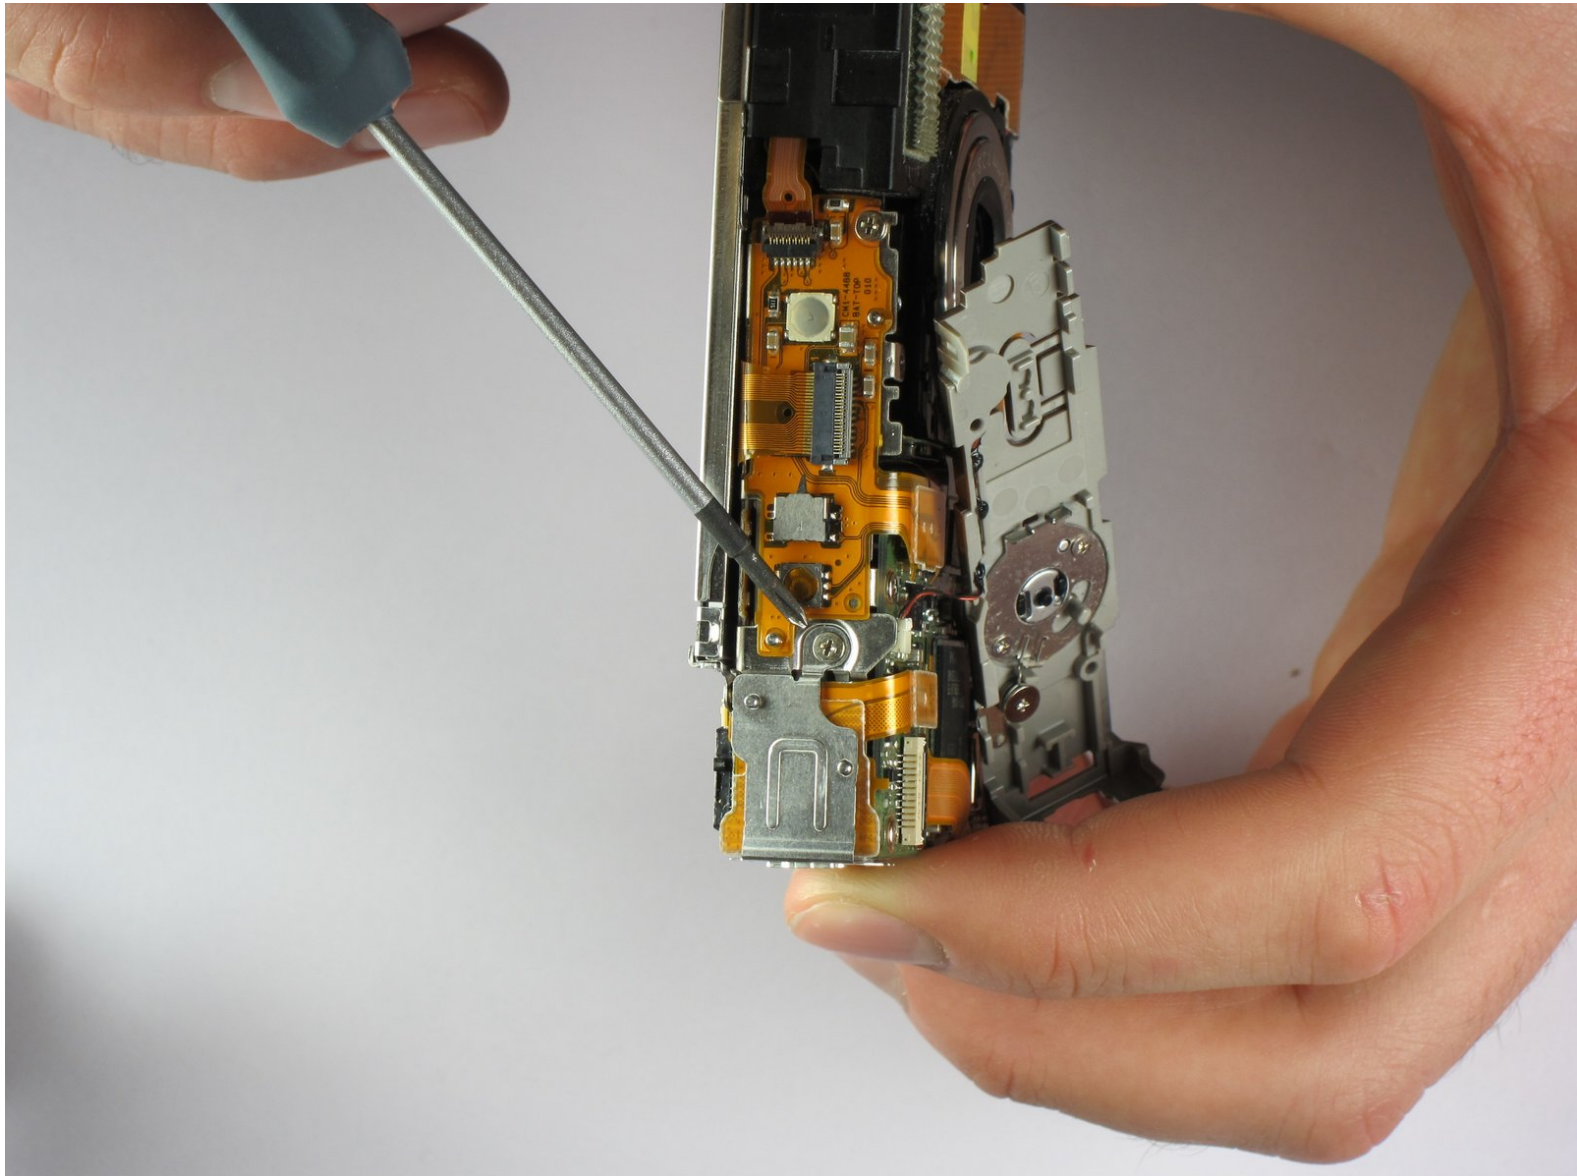


INTRODUCTION

Taking off the outer panels of your camera, disconnecting and replacing the mini USB port.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Mini USB Port

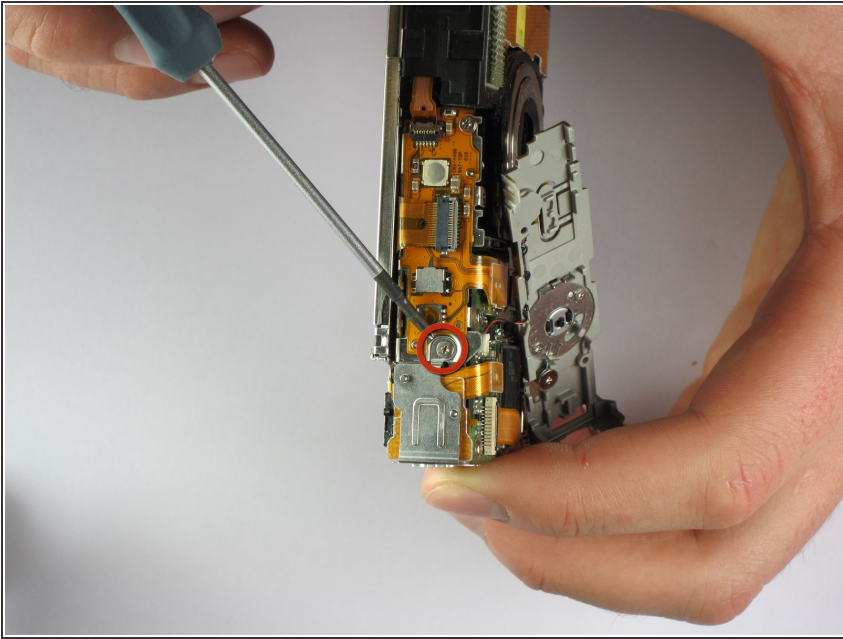


- Remove screw attaching the Mini USB Cover to the top of the camera body.

Step 2

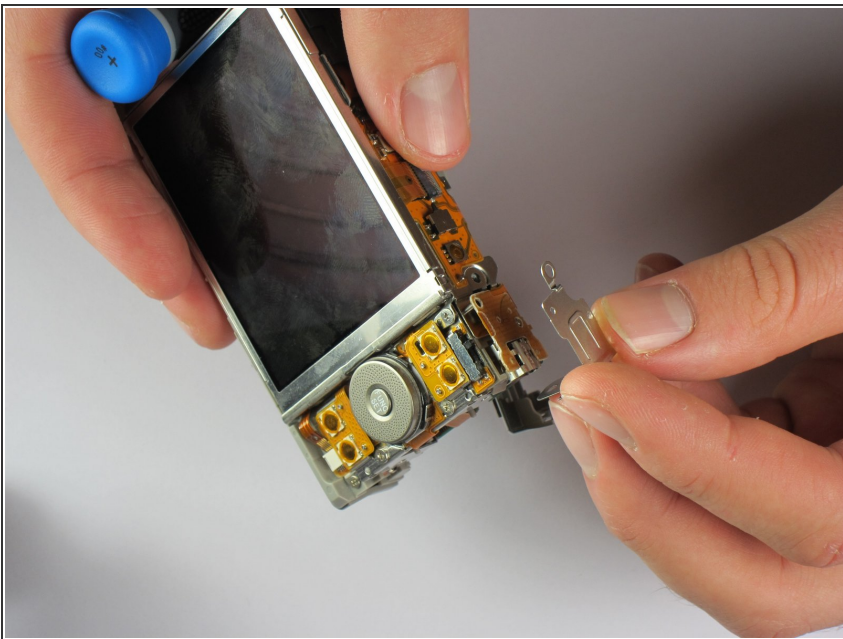

- Remove Mini USB Cover, by pulling it away from the camera body.

Step 3

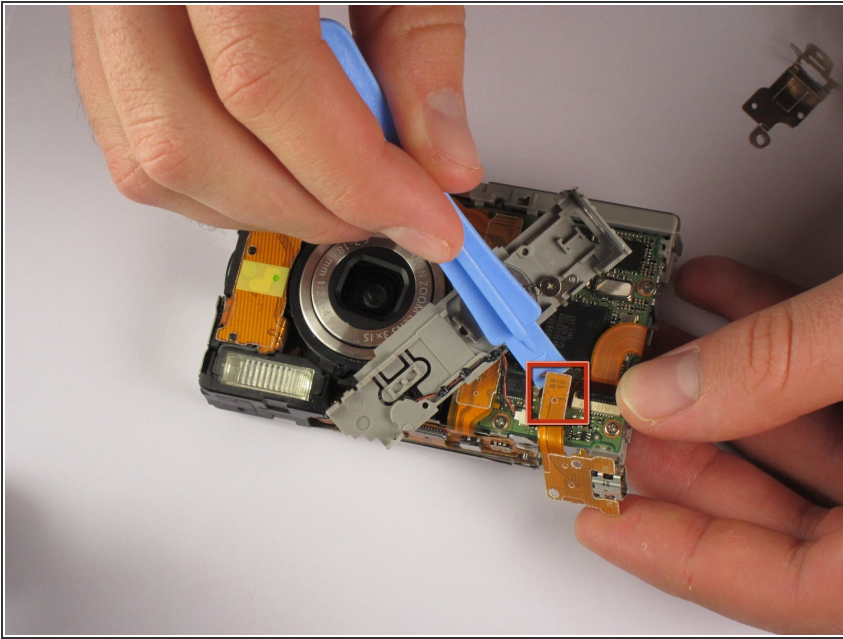

- Detach electronic ribbon and Mini USB Port using a plastic opening tool to pull the ribbon off.
- You can now replace the Mini USB Port.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-11 03:18:37 PM.