




Canon Powershot SD790 IS Release Button Replacement

Removing Release Button



Written By: Stanley

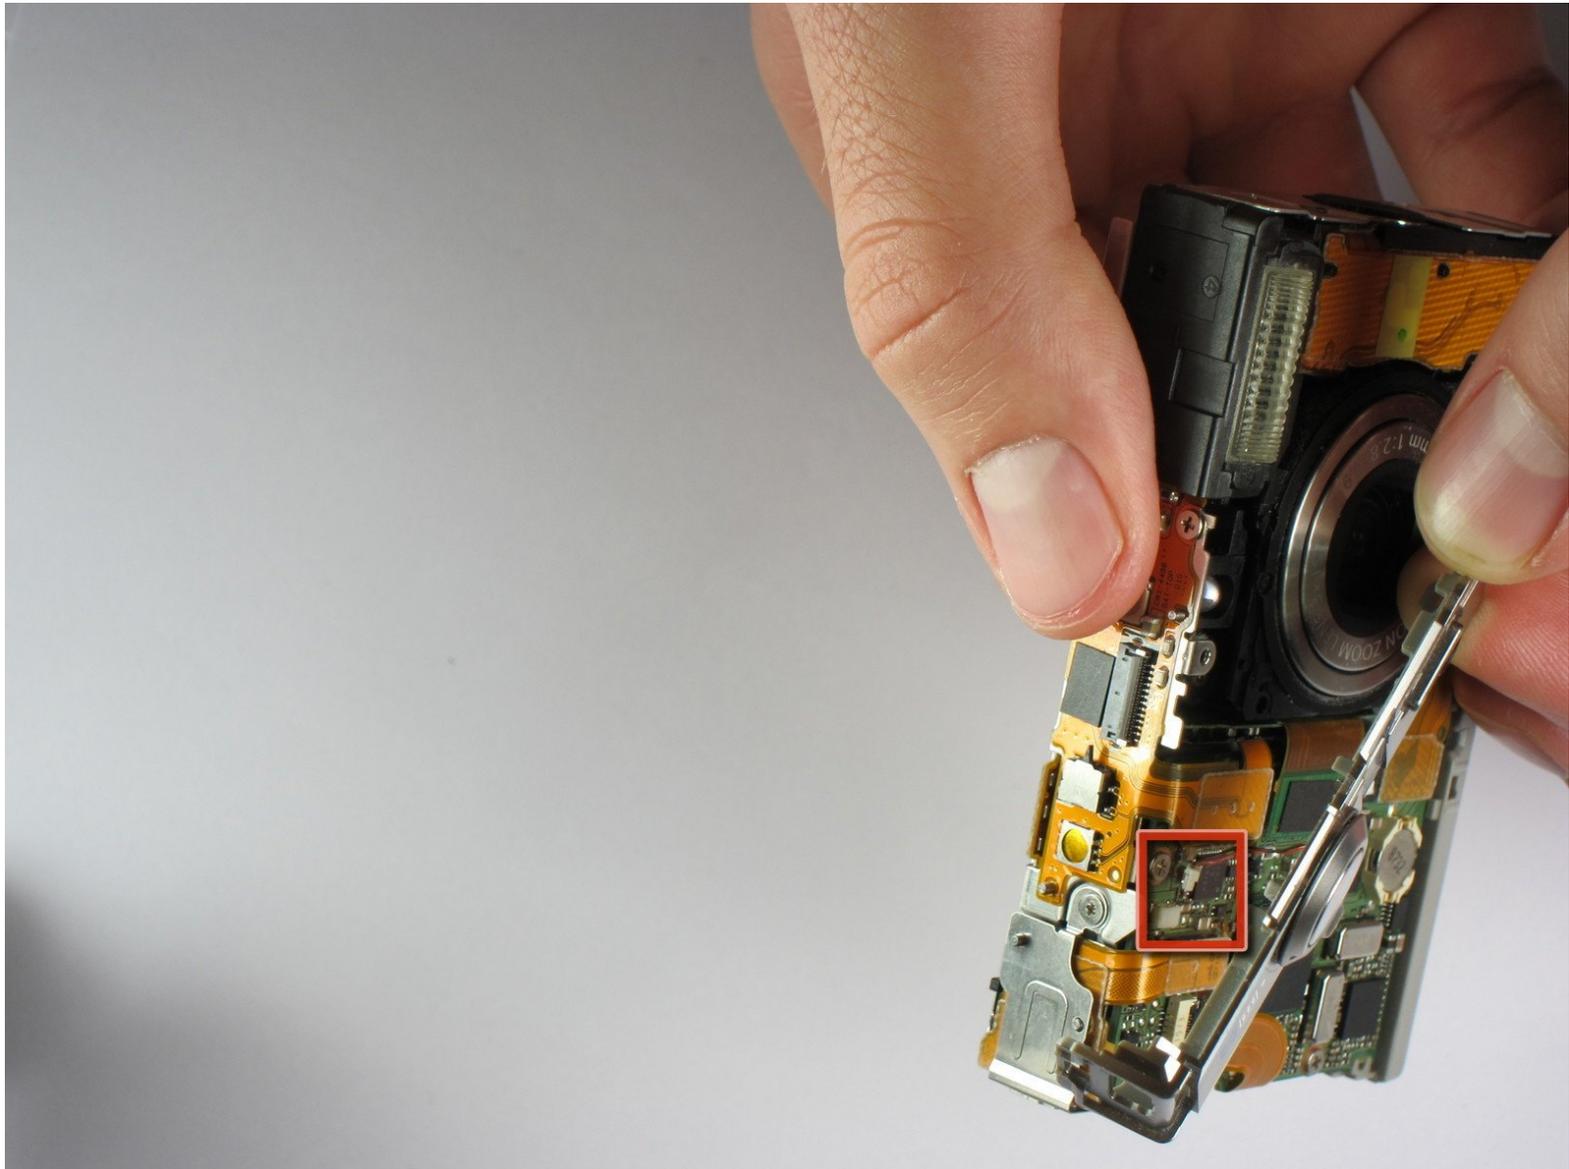

INTRODUCTION

Take off outer cover, detach cable, and remove Release Button.

Step 1 — Release Button

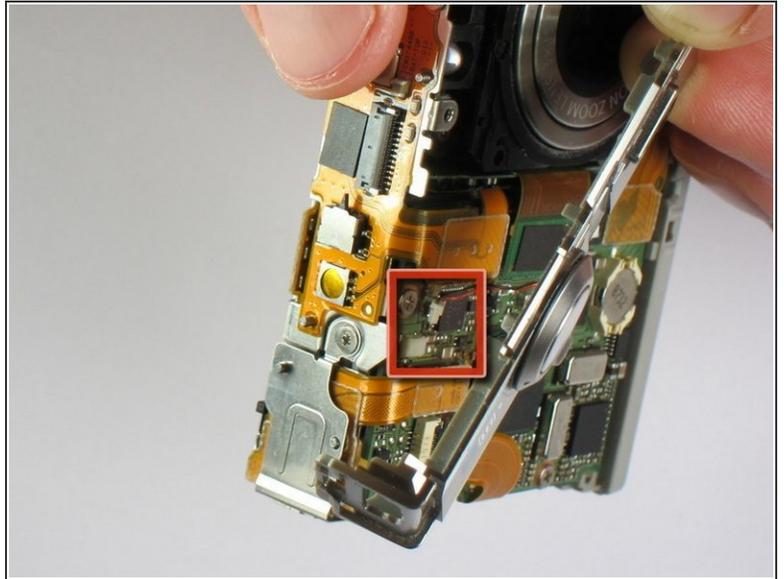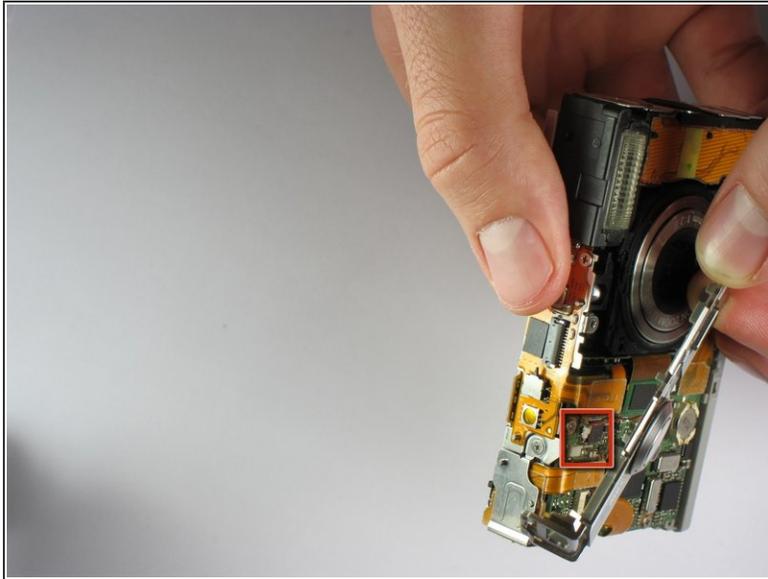

- Squeeze the sides of the plastic connector while gently detaching the cable. Your shutter release button is now removed and can be replaced.
- The shutter release button assembly should only be attached by a small red and black wire, with a plastic connector at the end.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-05-21 12:23:11 AM.