




# Cleaning Function Buttons

This guide will show how to clean the function button to the right of the LCD if they are sticking.

Written By: Tyler Grossheim

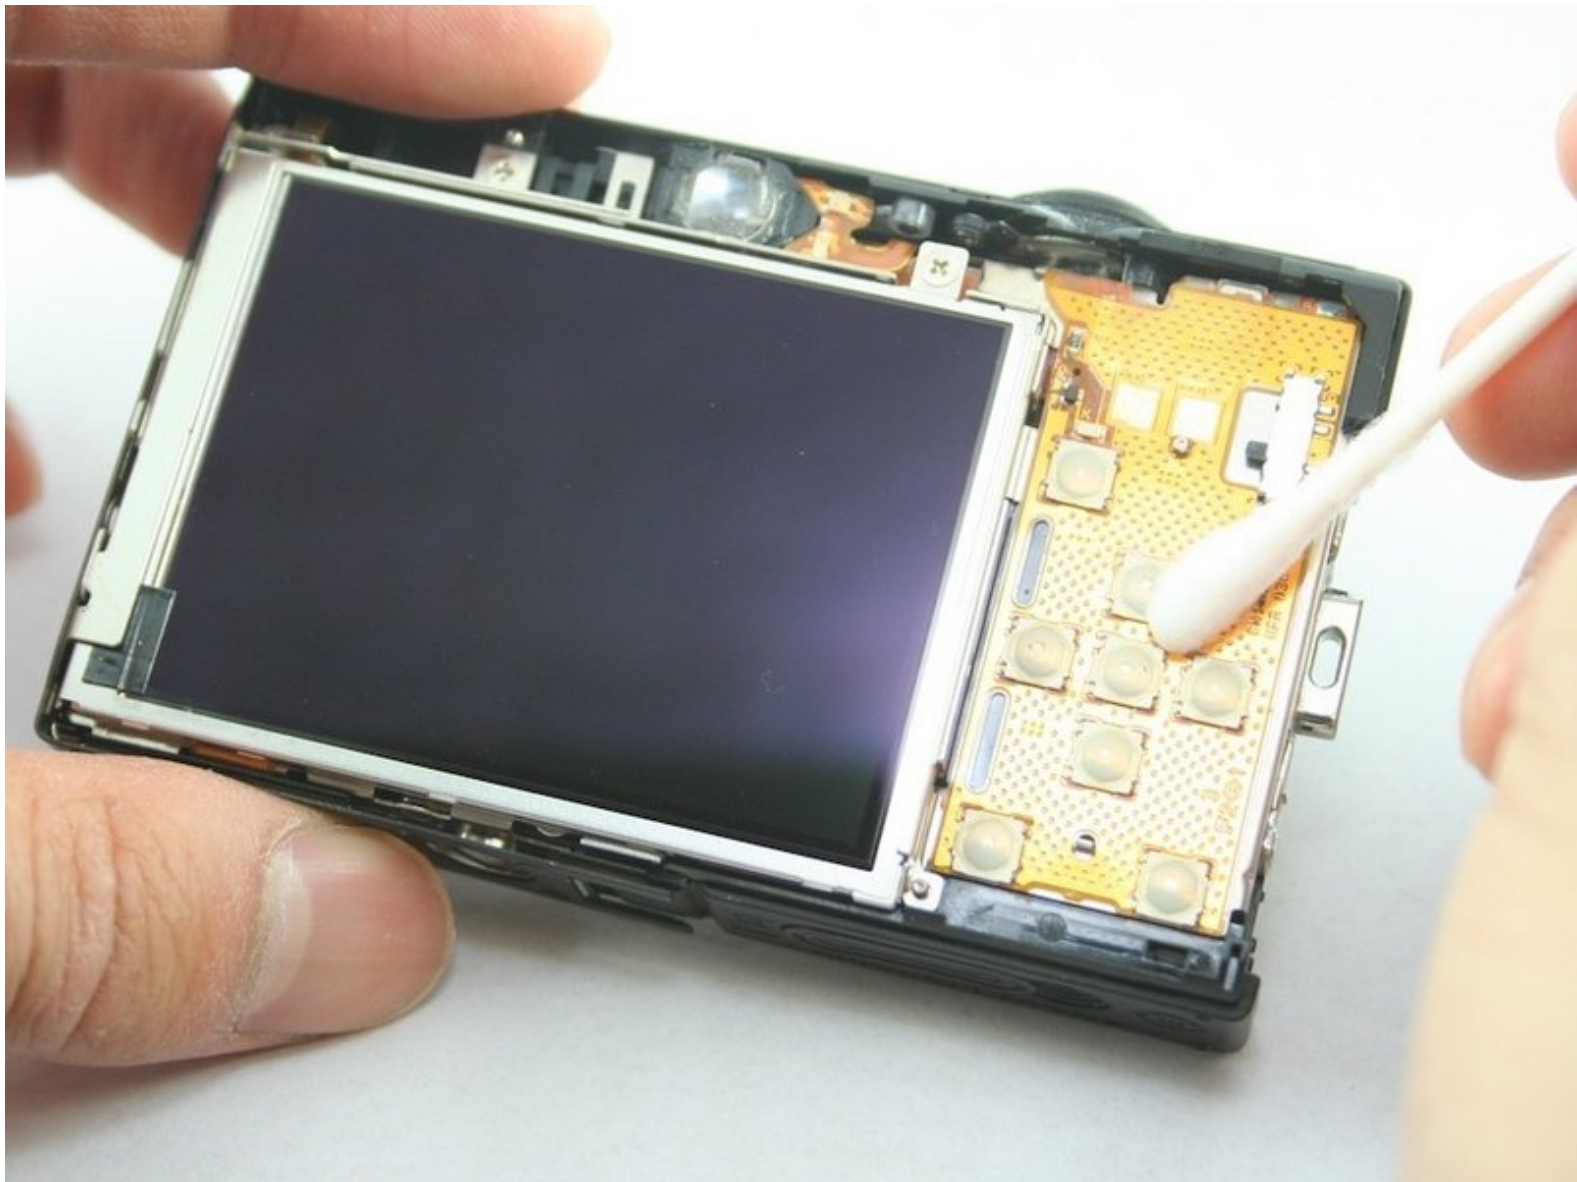

---

## INTRODUCTION

Use this guide to clean the function buttons.

---

### TOOLS:


- [Cotton Swab](#) (1)
-

## Step 1 — Front and Rear Cover




- Remove wrist strap and battery.

## Step 2

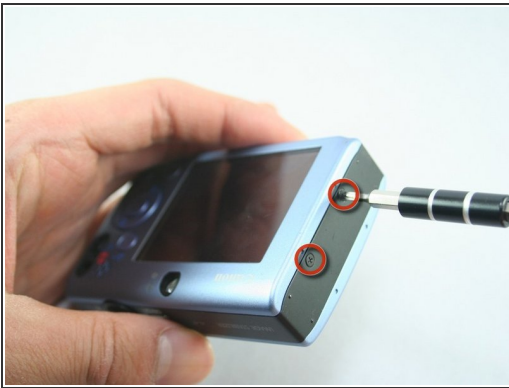


- Remove 2 screws from each side of the camera (4 total, 0.102 in).
  - Remove 2 screws from the bottom on the camera (0.138 in).
- ⚠ Do not mix the 4 side screws with the 2 bottoms ones; they are different sizes.

### Step 3

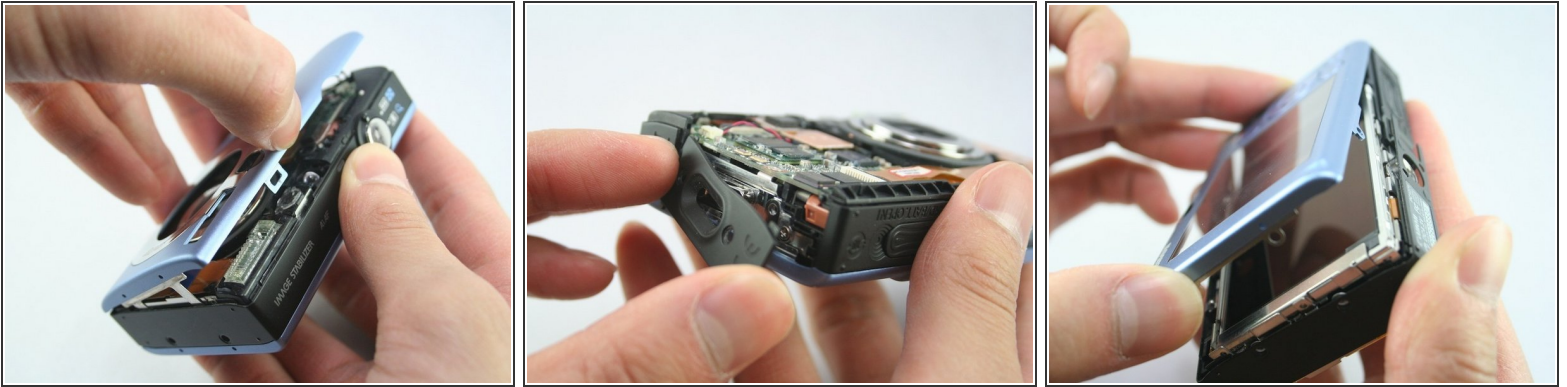

- Gently pull off the front cover.
- ⓘ The plate on the side should come off.
- Gently pull off the back cover.


### Step 4

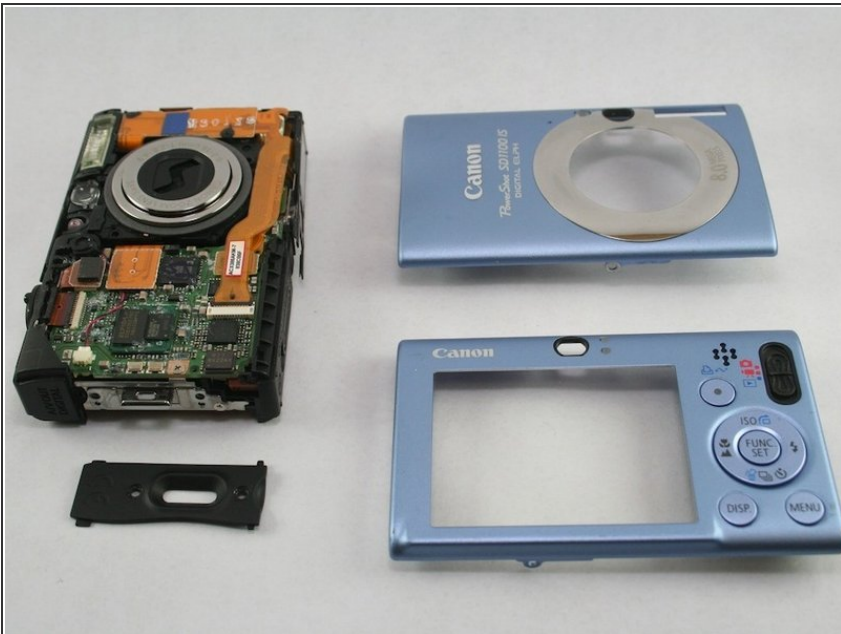

- The cases should now be removed.



## Step 5 — Cleaning Function Buttons

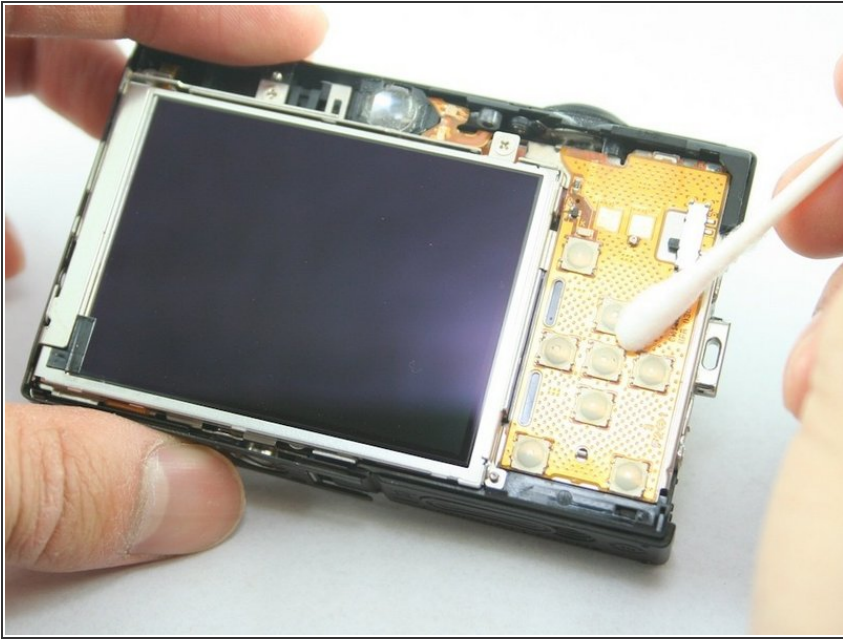

- Clean around the function buttons with a cotton swab dipped in isopropyl alcohol.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-08 08:07:19 PM.