



Cleaning Function Buttons

This guide will show how to clean the function button to the right of the LCD if they are sticking.

Written By: Tyler Grossheim



INTRODUCTION

 
Use this guide to clean the function buttons.



TOOLS:


- [Cotton Swab](#) (1)
-

Step 1 — Front and Rear Cover

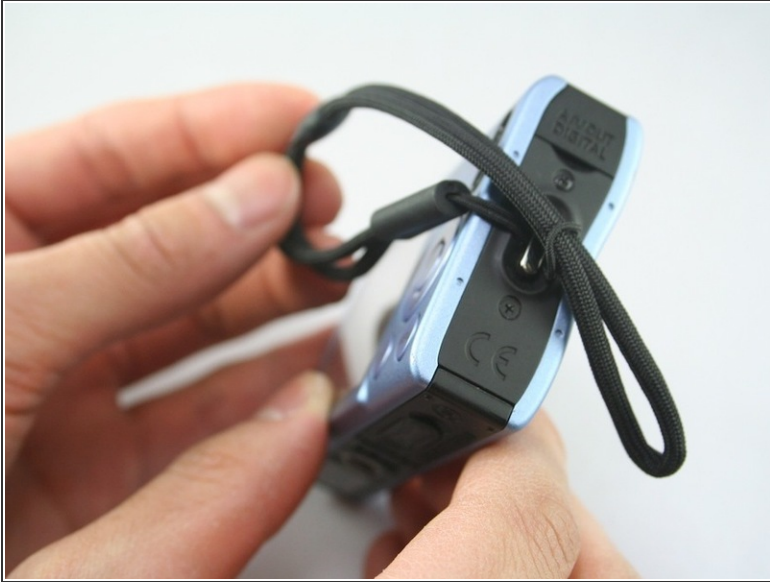

- Remove wrist strap and battery.

 Step 2

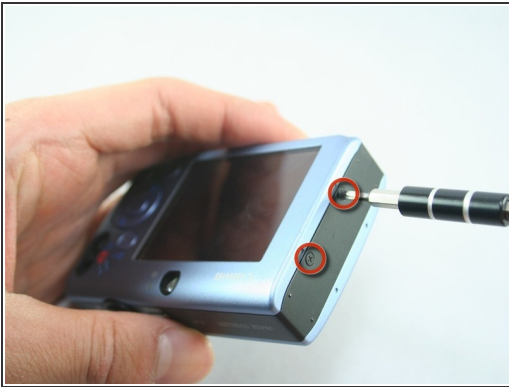

- Remove 2 screws from each side of the camera (4 total, 0.102 in).
 - Remove 2 screws from the bottom on the camera (0.138 in).
- ⚠ Do not mix the 4 side screws with the 2 bottoms ones; they are different sizes.

Step 3



 
- Gently pull off the front cover.
- ⓘ The plate on the side should come off.
- Gently pull off the back cover.

Step 4



- The cases should now be removed.

Step 5 — Cleaning Function Buttons

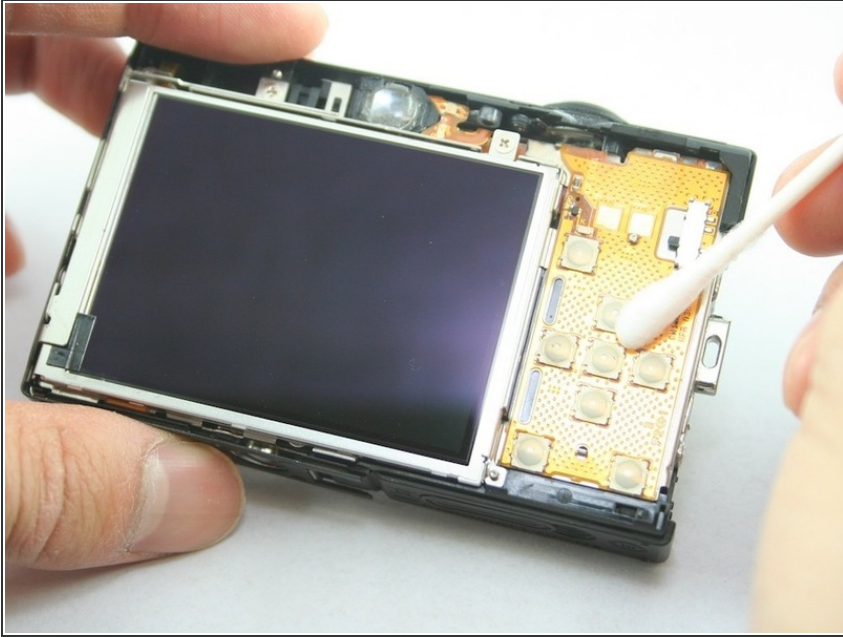

- Clean around the function buttons with a cotton swab dipped in isopropyl alcohol.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 11:40:07 PM.