



Disassembling Samsung DVD-P230 Outer Cover & Faceplate

This guide will show the process for removing the outer cover and front faceplate of the Samsung DVD-P230.

Written By: Mitchell Hart



INTRODUCTION

This is the first few steps for disassembling the DVD player.

TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Outer Cover & Faceplate



- Open the tray by pressing the eject button
- Remove the DVD tray faceplate by pushing the faceplate up off of the tray.

Step 2



- Press the eject button to insert the tray
- After the tray is closed unplug DVD player

Step 3




- Unscrew the 3 screws in the back.

Step 4



- Pull the outer case upward and then towards you.

Step 5

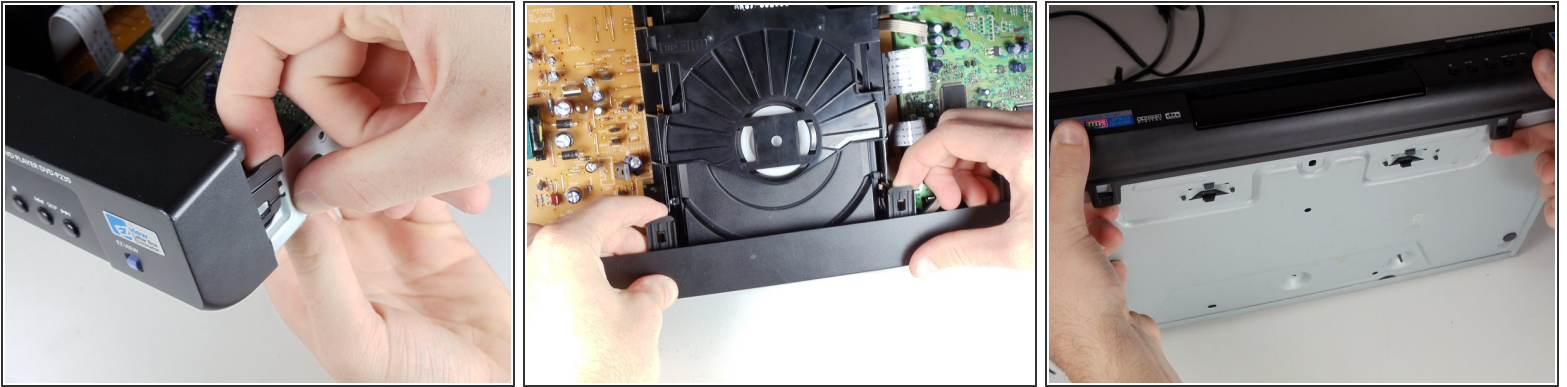

- There are six symmetrically placed tabs holding in the front faceplate. Unhook these six tabs to loosen the faceplate.

Step 6



- Pull off front faceplate. This may take a couple of tries to get all six tabs unhooked simultaneously.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-09-11 03:28:12 PM.