




Disassembling Jazz HDV178 Camcorder Take off Back Cover

The first step to fixing your device.


Written By: timothy

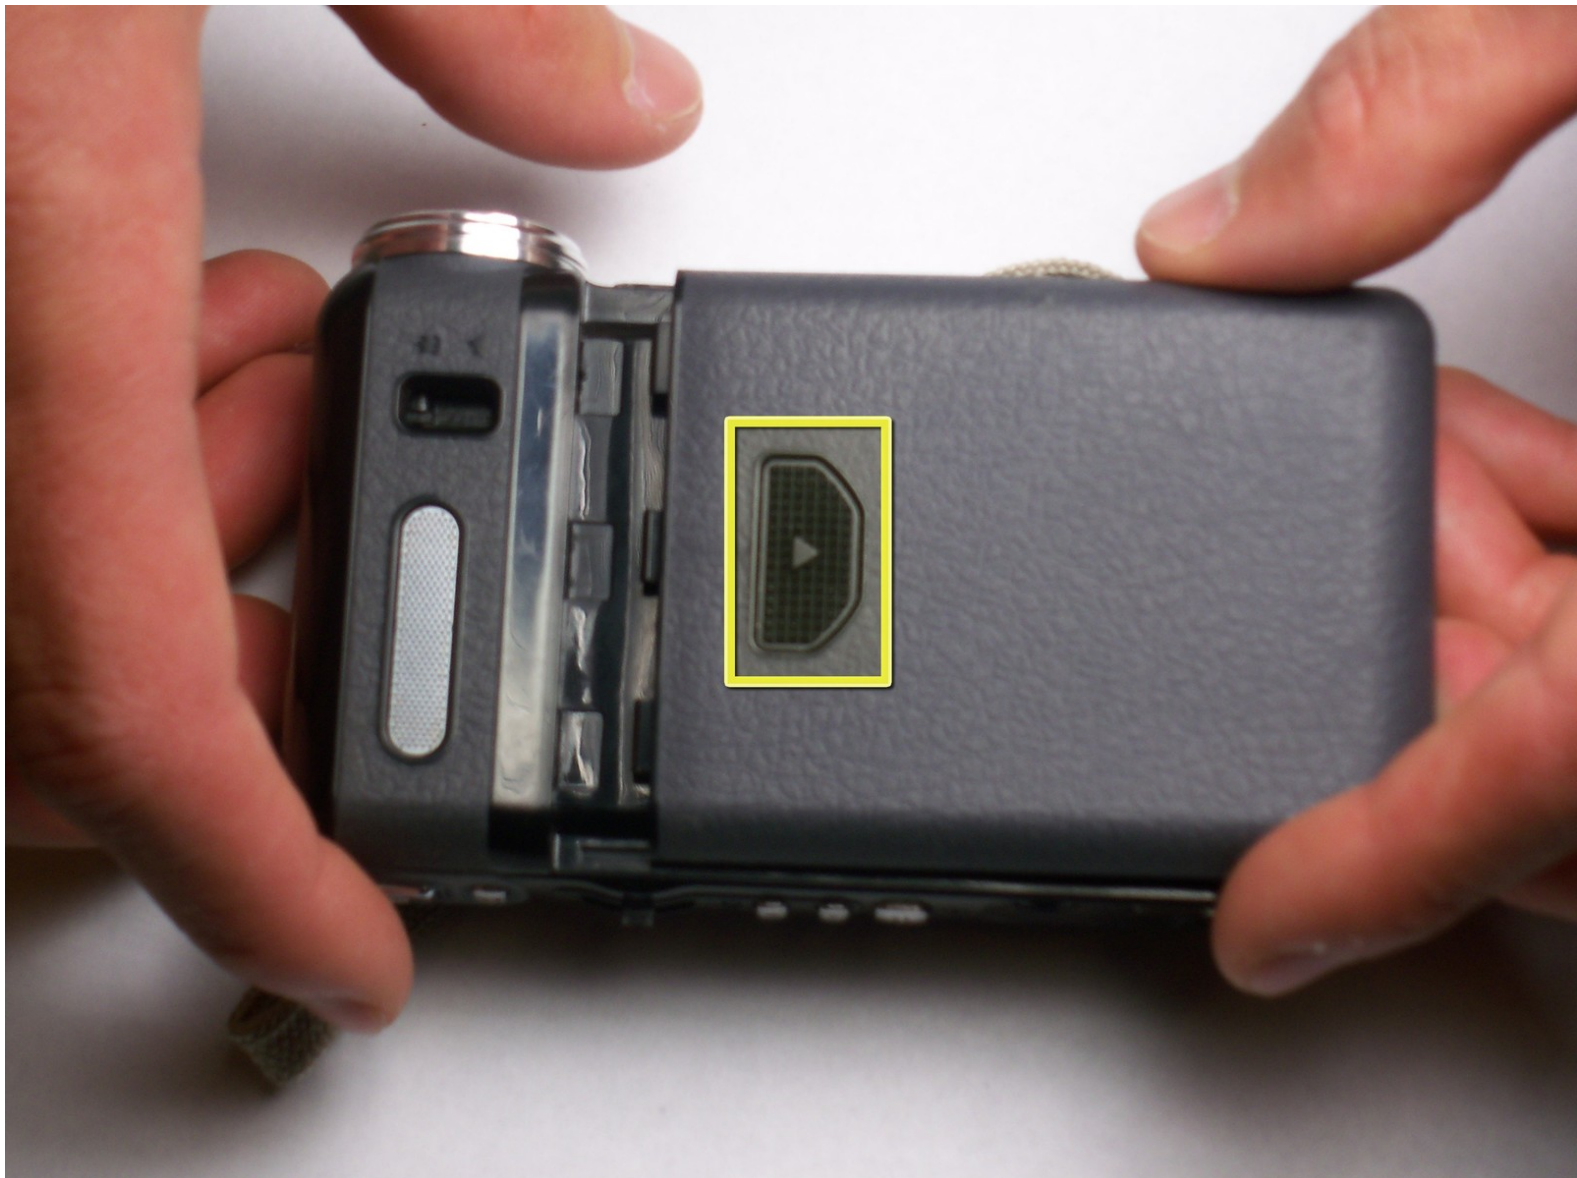

INTRODUCTION

Taking off the back cover of your camcorder is crucial to repairing it. Once removed, you can access the battery or other important parts that need repairing.

Step 1 — Disassembling Jazz HDV178 Camcorder Take off Back Cover

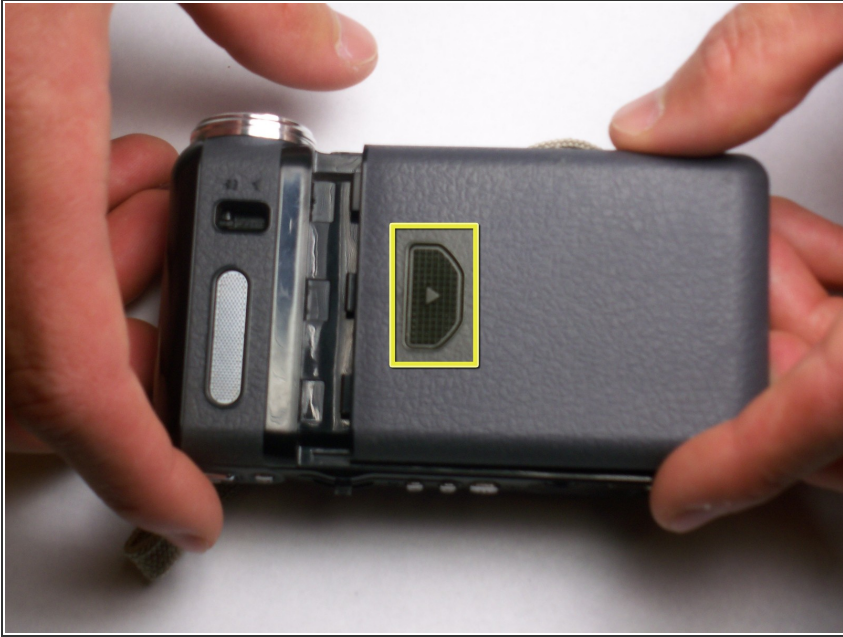

- ① On the back of the camcorder, the side opposite of the flip-out screen, there is a section of grooved plastic with a small arrow.
- Press down on the grooved plastic with your thumbs.
- Push the back cover in the direction indicated by the small arrow on the grooved plastic. The back cover should slide right off.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-22 03:47:03 AM.