



Canon Powershot A610 Batteries Replacement

Removing batteries in the Canon Powershot A610.

Written By: Matthew Ramirez



INTRODUCTION

Before starting any dis-assembly we will first have to remove the batteries.

Step 1 — Batteries



- Unlock the battery cover, while swinging the cover outward to open it.

Step 2



- Turn the camera over and allow the batteries to fall out.
- Close the battery cover.

To reassemble your device, follow these instructions in reverse order.

